





Technical Bulletin No. TB240423-1

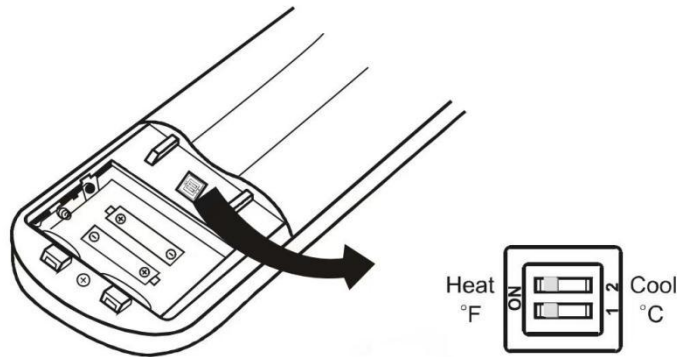
REMOTE CONTROL (28E)

Model	Picture	
CIP12CA-EL,CIP12CD-EL,CIP18CD-EL,CIP24CD-EL,CIP36CD-EL	 	
CSA12CA-L,CSA12CD-L,CSA18CD-L,CSA24CD-L,CSA36CD-L		
CLA12CA- L,CLA12CD- L,CLA18CD- L,CLA24CD- L,CSA12CA- L		

switch to °C and °F

When you open the battery cover, you can see a DIP switch on the cover back.






Refer to picture:



NOTE: After adjusting the function, remove the battery and reinstall it.

DIP switch on position	Function
°C	The remote control is adjusted in degree celsius
°F	The remote control is adjusted in degree fahrenheit
Cool	The remote control is adjusted in only cooling mode
Heat	The remote control is adjusted in cooling and heating mode




REMOTE CONTROL(52T)

Model	Picture	
CIP12CA-EL,CIP12CD-EL,CIP18CD-EL,CIP24CD-EL,CIP36CD-EL		
CSA12CA-L,CSA12CD-L,CSA18CD-L,CSA24CD-L,CSA36CD-L		
CHT09CA-23,CHT12CA-23,CHT09CD-23,CHT12CD-23,CHT18CD-23,CHT24CD-23		
CLA12CA-T ,CLA12CD-T ,CLA18CD-T ,CLA24CD-T ,CIP12CA-HT, CIP12CD-HT ,CIP18CD-HT ,CIP24CD-HT		

switch to °C and °F

- 1.Press and hold the TURBO button over 5 seconds to get into the change mode;
- 2.Press and hold the TURBO button, until it switch to °C and °F;
- 3.Then release the pressing and wait for 5 seconds, the function will be selected.

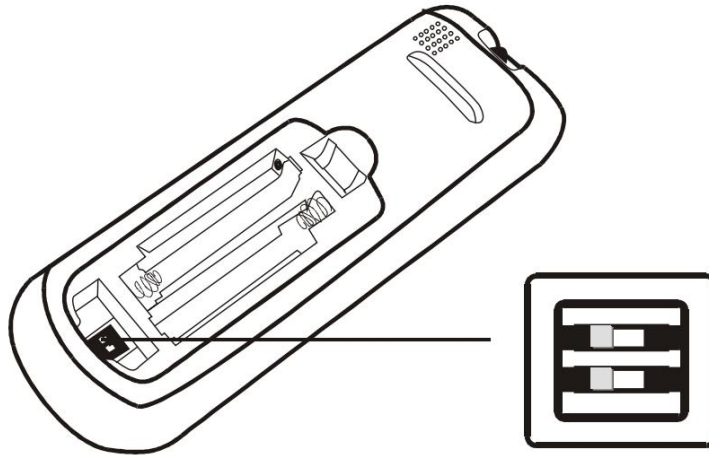
REMOTE CONTROL (66T)

Model	Picture	
CIP12CA-EL,CIP12CD-EL,CIP18CD-EL,CIP24CD-EL,CIP36CD-EL		
CSA12CA-L,CSA12CD-L,CSA18CD-L,CSA24CD-L,CSA36CD-L		

switch to °C and °F

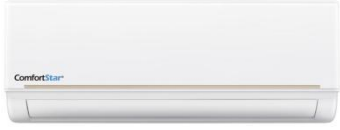



When you open the battery cover, you can see a DIP switch on the cover back.

Refer to picture:



DIP switch on position	Function
°C	The remote control is adjusted in degree celsius
°F	The remote control is adjusted in degree fahrenheit
Cool	The remote control is adjusted in only cooling mode
Heat	The remote control is adjusted in cooling and heating mode

REMOTE CONTROL (ARC-88B)

Model	Picture	
CIP12CA(I)-L,CIP12CA(O)-L,CIP09CD(I)-L,CIP09CD(O)-L,CIP12CD(I)-L,CIP12CD(O)-L,CIP18CD(I)-L,CIP18CD(O)-L,CIP24CD(I)-L,CIP24CD(O)-L		
CARAT12CA(I)-HP,CARAT12CA(O)-HP,CARAT12CD(I)-HP,CARAT12CD(O)-HP,CARAT18CD(I)-HP,CARAT18CD(O)-HP,CARAT24CD(I)-HP,CARAT24CD(O)-HP,CARAT36CD(I)-HP,CARAT36CD(O)-HP		
CLA09CF(I),CLA09CF(O),CLA12CF(I),CLA12CF(O),CLA18CF(I),CLA18CF(O),CLA24CF(I),CLA24CF(O)		
CIP09CA-HTJ(I),CIP09CA-HTJ(O),CIP09CD-HTJ(I),CIP09CD-HTJ(O),CIP12CA-HTJ(I),CIP12CA-HTJ(O),CIP12CD-HTJ(I),CIP12CD-HTJ(O),CIP18CD-HTJ(I),CIP18CD-HTJ(O),CIP24CD-HTJ(I),CIP24CD-HTJ(O)		



switch to °C and °F

Press together ^ & v buttons at the same time for 3 seconds will alternate the temperature display between the °C & °F

Refer to picture:

