









Technical Bulletin No. TB240718-1


REMOTE CONTROL (28E)

Model	Remote Control Code	Picture	
CIP12CA-EL CIP12CD-EL CIP18CD-EL CIP24CD-EL CIP36CD-EL (Country:Nicaragua)	22013-007022		
CSA12CA-L CSA12CD-L CSA18CD-L CSA24CD-L CSA36CD-L (Country:Nicaragua)	22013-007022		
CLA12CA- L CLA12CD- L CLA18CD- L CLA24CD- L (Country:Nicaragua)	22013-007022		
CSA12CA-L CSA12CD-L CSA18CD-L CSA24CD-L CSA36CD-L (Country:Guatemala)	22013-007022		
CLA12CA- L CLA12CD- L CLA18CD- L CLA24CD- L (Country:Guatemala)	22013-007022		
CIP12CA-EL CIP12CD-EL CIP18CD-EL CIP24CD-EL CIP36CD-EL (Country:Guatemala)	22013-007022		

switch to °C and °F

When you open the battery cover, you can see a DIP switch on the cover back.

Refer to picture:

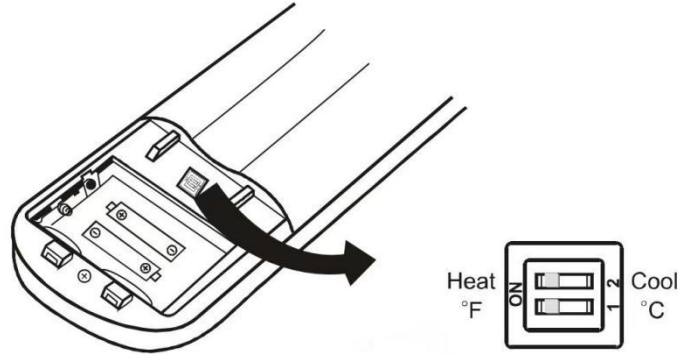




 


Detailed steps:

1. Power off indoor unit.
2. Take out the battery of the remote control, after adjusting the DIP switch according to the demand, and put back the battery.
3. The indoor unit is energized.
4. Adjust the temperature display 86°F or 30°C on the remote control.
5. Adjust the airflow of the remote control to medium setting.
6. Press the ECO button 8 times in a row.(8 "drip" sounds)
7. At this time, the indoor unit is switched from °C to °F or from °F to °C.

DIP switch on position	Function
°C	The remote control is adjusted in degree Celsius
°F	The remote control is adjusted in degree Fahrenheit
Cool	The remote control is adjusted in only cooling mode
Heat	The remote control is adjusted in cooling and heating mode





REMOTE CONTROL (52T)

Model	Remote Control Code	Picture	
CIP12CA-EL CIP12CD-EL CIP18CD-EL CIP24CD-EL CIP36CD-EL (Country: Miami)	22013-006536		
CSA12CA-L CSA12CD-L CSA18CD-L CSA24CD-L CSA36CD-L (Country: Miami)	22013-006536		
CHT09CA-23 CHT12CA-23 CHT09CD-23 CHT12CD-23 CHT18CD-23 CHT24CD-23 (Country: Miami)	22013-006536		
CLA12CA-T CLA12CD-T CLA18CD-T CLA24CD-T (Country: Miami)	22013-006536		
CIP12CA-HT CIP12CD-HT CIP18CD-HT CIP24CD-HT (Country: Miami)	22013-006536		

switch to °C and °F

1. Press and hold the TURBO button over 5 seconds to get into the change mode;
2. Press and hold the TURBO button, until it switch to °C and °F;
3. Then release the pressing and wait for 5 seconds, the function will be selected.


REMOTE CONTROL (66T)

Model	Remote Control Code	Picture	
CIP12CA-EL CIP12CD-EL CIP18CD-EL CIP24CD-EL CIP36CD-EL (Country:Salvador)	22013-006746		
CSA12CA-L CSA12CD-L CSA18CD-L CSA24CD-L CSA36CD-L (Country:Salvador)	22013-006746		
CLA12CA-L CLA12CD-L CLA18CD-L CLA24CD-L (Country:Salvador)	22013-006746		

switch to °C and °F

When you open the battery cover, you can see a DIP switch on the cover back.

Refer to picture:

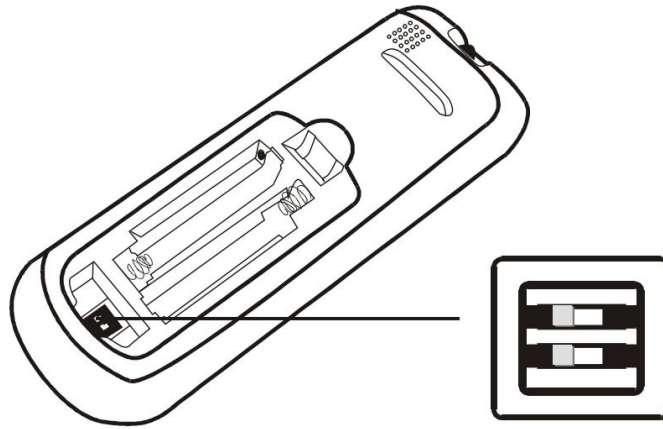

DIP switch on position	Function
°C	The remote control is adjusted in degree Celsius
°F	The remote control is adjusted in degree Fahrenheit
Cool	The remote control is adjusted in only cooling mode
Heat	The remote control is adjusted in cooling and heating mode

REMOTE CONTROLLER (ARC-88B)

Model	Remote Control Code	Picture	
CARAT12CA-HP CARAT12CD-HP CARAT18CD-HP CARAT24CD-HP CARAT36CD-HP	17317000A61569		
CIP09CA-HTJ CIP09CD-HTJ CIP12CA-HTJ CIP12CD-HTJ CIP18CD-HTJ CIP24CD-HTJ	17317000A67049		

CARAT12CA-M CARAT12CD-M CARAT18CD-M CARAT24CD-M CARAT36CD-M (White panel)	17317000A62715		
---	----------------	--	--



switch to °C and °F

 







Press together ^ & v buttons at the same time for 3 seconds will alternate the temperature display between the °C & °F.

Refer to picture:

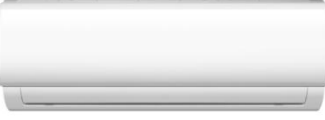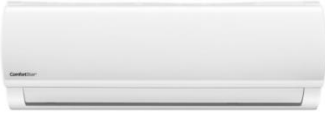

REMOTE CONTROL (ARC-88B)

Model	Remote Control Code	Picture	
CSA12CA-R CSA12CD-R CSA18CD-R CSA24CD-R CSA36CD-R	17317000A64775		

<p>CLA12CA CLA12CD CLA18CD CLA24CD</p>	<p>17317000A65321</p>		
<p>CFU12CA CFU12CD CFU18CD CFU24CD</p>	<p>17317000A65321</p>		
<p>CT32-12CA CT32-12CD CT32-18CD CT32-24CD</p>	<p>17317000A68637</p>		
<p>CAC12CA CAC12CD CAC18CD CAC24CD</p>	<p>17317000A69181</p>		
<p>CWI12CA-L CWI09CD-L CWI12CD-L CWI18CD-L CWI24CD-L CWI36CD-L</p>	<p>/</p>		
<p>CIP12CA-L CIP09CD-L CIP12CD-L CIP18CD-L CIP24CD-L CIP36CD-L</p>	<p>17317000A66256</p>		

CLA09CF
CLA12CF
CLA18CF
CLA24CF

17317000A65321



switch to °C and °F

This function is not supported.

The default setting is °C.



REMOTE CONTROL

Model	Remote Control Code	Picture
-------	---------------------	---------

Technical Bulletin No. TB240718-01

TECHNICAL BULLETIN

July, 2024

CSA12CD-S CSA18CD-S CSA24CD-S	/		
<p style="text-align: center;">switch to °C and °F</p> <p>This function is not supported. The default setting is °C.</p>			