









Technical Bulletin No. TB241012-1


REMOTE CONTROL (28E)

Model	Remote Control Code	Picture	
CIP12CA-EL CIP12CD-EL CIP18CD-EL CIP24CD-EL CIP36CD-EL (Country:Nicaragua)	22013-007022		
CSA12CA-L CSA12CD-L CSA18CD-L CSA24CD-L CSA36CD-L (Country:Nicaragua)	22013-007022		
CLA12CA- L CLA12CD- L CLA18CD- L CLA24CD- L (Country:Nicaragua)	22013-007022		
CSA12CA-L CSA12CD-L CSA18CD-L CSA24CD-L CSA36CD-L (Country:Guatemala)	22013-007022		
CLA12CA- L CLA12CD- L CLA18CD- L CLA24CD- L (Country:Guatemala)	22013-007022		
CIP12CA-EL CIP12CD-EL CIP18CD-EL CIP24CD-EL CIP36CD-EL (Country:Guatemala)	22013-007022		

switch to °C and °F

When you open the battery cover, you can see a DIP switch on the cover back.

Refer to picture:

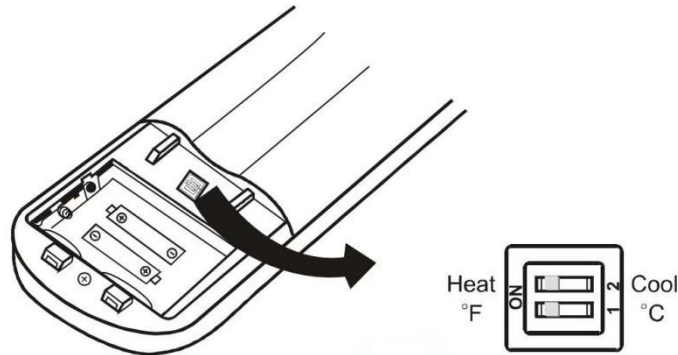






Detailed steps:

1. Power off indoor unit.
2. Take out the battery of the remote control, after adjusting the DIP switch according to the demand, and put back the battery.
3. The indoor unit is energized.
4. Adjust the temperature display 86°F or 30°C on the remote control.
5. Adjust the airflow of the remote control to medium setting.
6. Press the ECO button 8 times in a row.(8 "drip" sounds)
7. At this time, the indoor unit is switched from °C to °F or from °F to °C.

DIP switch on position	Function
°C	The remote control is adjusted in degree Celsius
°F	The remote control is adjusted in degree Fahrenheit
Cool	The remote control is adjusted in only cooling mode
Heat	The remote control is adjusted in cooling and heating mode

REMOTE CONTROL (52T)

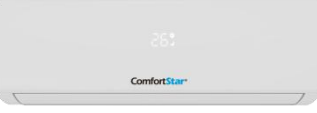


Model	Remote Control Code	Picture
CIP12CA-EL CIP12CD-EL CIP18CD-EL CIP24CD-EL CIP36CD-EL (Country: Miami)	22013-006536	
CSA12CA-L CSA12CD-L CSA18CD-L CSA24CD-L CSA36CD-L (Country: Miami)	22013-006536	
CHT09CA-23 CHT12CA-23 CHT09CD-23 CHT12CD-23 CHT18CD-23 CHT24CD-23 (Country: Miami)	22013-006536	
CLA12CA-T CLA12CD-T CLA18CD-T CLA24CD-T (Country: Miami)	22013-006536	
CIP12CA-HT CIP12CD-HT CIP18CD-HT CIP24CD-HT (Country: Miami)	22013-006536	



switch to °C and °F

1. Press and hold the TURBO button over 5 seconds to get into the change mode;
2. Press and hold the TURBO button, until it switch to °C and °F;
3. Then release the pressing and wait for 5 seconds, the function will be selected.

REMOTE CONTROL (66T with DIP switch)


Model	Remote Control Code	Picture
CIP12CA-EL CIP12CD-EL CIP18CD-EL CIP24CD-EL CIP36CD-EL (Country:Salvador)	22013-006746	
CSA12CA-L CSA12CD-L CSA18CD-L CSA24CD-L CSA36CD-L (Country:Salvador)	22013-006746	
CLA12CA-L CLA12CD-L CLA18CD-L CLA24CD-L (Country:Salvador)	22013-006746	



switch to °C and °F



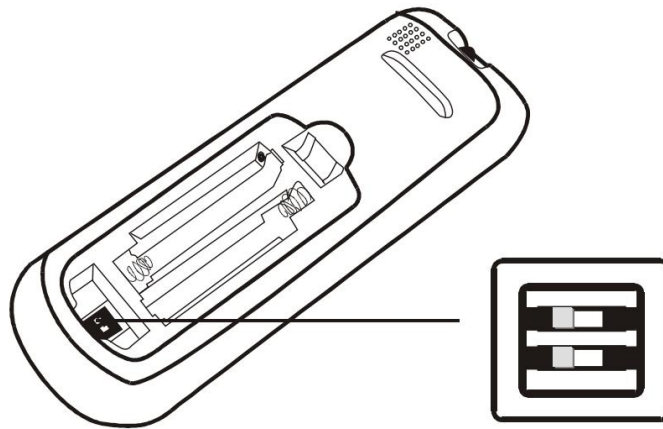


When you open the battery cover, you can see a DIP switch on the cover back.

Refer to picture:



DIP switch on position	Function
°C	The remote control is adjusted in degree Celsius
°F	The remote control is adjusted in degree Fahrenheit
Cool	The remote control is adjusted in only cooling mode
Heat	The remote control is adjusted in cooling and heating mode

REMOTE CONTROL (66T without DIP switch)




Model	Remote Control Code	Picture
CFU12CA CFU12CD CFU18CD CFU24CD	22013-007744	
CIP12CA-L CIP12CD-L CIP18CD-L CIP24CD-L CIP36CD-L	22013-007744	
CT32-12CA CT32-12CD CT32-18CD CT32-24CD	22013-007744	
CC32-12CA CC32-12CD CC32-18CD CC32-24CD	22013-007744	
CH32-12CA CH32-12CD CH32-18CD CH32-24CD CH32-36CD	22013-007744	



switch to °C and °F

- 1.The temperature is displayed by default in Celsius.
- 2.Press and hold the TURBO button over 5 seconds, until it switch °F and °C

REMOTE CONTROL (ARC-88B)

Model	Remote Control Code	Picture
CARAT12CA-HP CARAT12CD-HP CARAT18CD-HP CARAT24CD-HP CARAT36CD-HP	17317000A61569	
CIP09CA-HTJ CIP09CD-HTJ CIP12CA-HTJ CIP12CD-HTJ CIP18CD-HTJ CIP24CD-HTJ	17317000A67049	
CARAT12CA-M CARAT12CD-M CARAT18CD-M CARAT24CD-M CARAT36CD-M (White panel)	17317000A62715	







 



switch to °C and °F




Press together ^ & v buttons at the same time for 3 seconds will alternate the temperature display between the °C & °F.

Refer to picture:



REMOTE CONTROL (ARC-88B)



Model	Remote Control Code	Picture	
CSA12CA-R CSA12CD-R CSA18CD-R CSA24CD-R CSA36CD-R	17317000A64775		
CLA12CA CLA12CD CLA18CD CLA24CD	17317000A65321		
CFU12CA CFU12CD CFU18CD CFU24CD	17317000A65321		
CT32-12CA CT32-12CD CT32-18CD CT32-24CD	17317000A68637		
CAC12CA CAC12CD CAC18CD CAC24CD	17317000A69181		
CWI12CA-L CWI09CD-L CWI12CD-L CWI18CD-L CWI24CD-L CWI36CD-L	/		

<p>CIP12CA-L CIP09CD-L CIP12CD-L CIP18CD-L CIP24CD-L CIP36CD-L</p>	<p>17317000A66256</p>		
<p>CLA09CF CLA12CF CLA18CF CLA24CF</p>	<p>17317000A65321</p>		


switch to °C and °F

- 1.This function is not supported.
- 2.The temperature is displayed by default in Celsius.

REMOTE CONTROL

Model	Remote Control Code	Picture	
<p>CSA12CD-S CSA18CD-S CSA24CD-S</p>	<p>/</p>		
<p style="text-align: center;">switch to °C and °F</p> <p>1.This function is not supported.</p> <p>2.The temperature is displayed by default in Celsius.</p>			

REMOTE CONTROL

Model	Remote Control Code	Picture	
WAC12-1 WAC12-2 WAC18-2 WAC24-2 WAH12-1 WAH12-2 WAH18-2 WAH24-2 WAH36-2	/		

switch to °C and °F

- 1.The temperature is displayed by default in Celsius.
- 2.Press the “COOL” and “HEAT” buttons at the same time above 3 seconds, you can set the °C or °F .