

ComfortStar®

Air Conditioning & Heating Products

Remote Control Reference Guide — Models, Codes, Pictures & °C/°F Switching

This guide lists every ComfortStar remote control family, the indoor units and models it covers, its remote control code and picture, and — as an added reference — how to switch that remote's temperature display between Celsius and Fahrenheit. Technical Bulletin No. TB260212-01 (Feb 2026)

Remote Control (28E)

Photo	Model	Remote Control Code
	CIP12CA-EL, CIP12CD-EL, CIP18CD-EL, CIP24CD-EL, CIP36CD-EL	22013-007022
	CSA12CA-L, CSA12CD-L, CSA18CD-L, CSA24CD-L, CSA36CD-L	22013-007022
	CLA12CA-L, CLA12CD-L, CLA18CD-L, CLA24CD-L	22013-007022
	CSA12CA-L, CSA12CD-L, CSA18CD-L, CSA24CD-L, CSA36CD-L	22013-007022
	CLA12CA-L, CLA12CD-L, CLA18CD-L, CLA24CD-L	22013-007022
	CIP12CA-EL, CIP12CD-EL, CIP18CD-EL, CIP24CD-EL, CIP36CD-EL	22013-007022

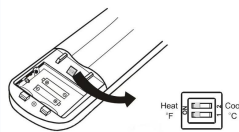 


Switch to °C / °F

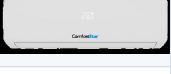
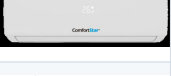
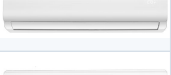
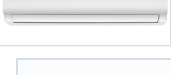
This remote uses a physical DIP switch. Open the battery cover to access it.

- 1) Power off the indoor unit. 2) Adjust the DIP switch as needed and reinsert the battery. 3) Power the indoor unit back on. 4) Set the remote display to 86°F or 30°C. 5) Set airflow to medium. 6) Press ECO 8 times in a row (8 beeps). 7) The unit switches between °C and °F.

DIP positions: °C = Celsius display · °F = Fahrenheit display · Cool = cooling-only mode · Heat = cooling and heating mode.



Remote Control (52T)

Photo	Model	Remote Control Code
	CIP12CA-EL, CIP12CD-EL, CIP18CD-EL, CIP24CD-EL, CIP36CD-EL	22013-006536
	CSA12CA-L, CSA12CD-L, CSA18CD-L, CSA24CD-L, CSA36CD-L	22013-006536
	CHT09CA-23, CHT12CA-23, CHT09CD-23, CHT12CD-23, CHT18CD-23, CHT24CD-23	22013-006536
	CLA12CA-T, CLA12CD-T, CLA18CD-T, CLA24CD-T	22013-006536
	CIP12CA-HT, CIP12CD-HT, CIP18CD-HT, CIP24CD-HT	22013-006536
	CC32-12CA, CC32-12CD, CC32-18CD, CC32-24CD	22013-007744
	CH32-12CA, CH32-12CD, CH32-18CD, CH32-24CD, CH32-36CD	22013-007744



Switch to °C / °F

1) Press and hold **TURBO** for over 5 seconds to enter change mode. 2) Keep holding **TURBO** until it switches to °C/°F. 3) Release and wait 5 seconds — the setting is saved.

Remote Control (66T — with DIP switch)

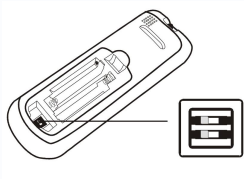 
Photo	Model	Remote Control Code
	CIP12CA-EL, CIP12CD-EL, CIP18CD-EL, CIP24CD-EL, CIP36CD-EL	22013-006746
	CSA12CA-L, CSA12CD-L, CSA18CD-L, CSA24CD-L, CSA36CD-L	22013-006746
	CLA12CA-L, CLA12CD-L, CLA18CD-L, CLA24CD-L	22013-006746



Switch to °C / °F

This remote uses a physical DIP switch behind the battery cover.

DIP positions: °C = Celsius display · °F = Fahrenheit display · Cool = cooling-only mode · Heat = cooling and heating mode.



Remote Control (66T — without DIP switch)

Photo	Model	Remote Control Code
	CFU12CA, CFU12CD, CFU18CD, CFU24CD	22013-007744
	CIP12CA-L, CIP12CD-L, CIP18CD-L, CIP24CD-L, CIP36CD-L	22013-007744
	CT32-12CA, CT32-12CD, CT32-18CD, CT32-24CD	22013-007744
	CC32-12CA, CC32-12CD, CC32-18CD, CC32-24CD	22013-007744
	CH32-12CA, CH32-12CD, CH32-18CD, CH32-24CD, CH32-36CD	22013-007744



Switch to °C / °F

1) Press and hold **TURBO** for over 5 seconds to enter change mode. 2) Keep holding TURBO until it switches to °C/°F. 3) Release and wait 5 seconds — the setting is saved.

Remote Control (Wi-Fi Models)

 
Photo	Model	Remote Control Code
	CAC12CA-WI20, CAC12CD-WI20, CAC28CD-WI20, CAC24CD-WI20, CAC36CD-WI20	/
	CH20-09CA-32, CH20-12CA-32, CH20-09CD-32, CH20-12CD-32, CH20-18CD-32, CH20-24CD-32	/



Switch to °C / °F

1) Press and hold **TURBO** or **FAN** for over 5 seconds to enter change mode. 2) Keep holding until it switches to °C/°F. 3) Release and wait 5 seconds — the setting is saved.

Remote Control (ARC-88B)

Photo	Model	Remote Control Code
	CARAT12CA-HP, CARAT12CD-HP, CARAT18CD-HP, CARAT24CD-HP, CARAT36CD-HP	17317000A61569
	CIP09CA-HTJ, CIP09CD-HTJ, CIP12CA-HTJ, CIP12CD-HTJ, CIP18CD-HTJ, CIP24CD-HTJ	17317000A67049
	CARAT12CA-M, CARAT12CD-M, CARAT18CD-M, CARAT24CD-M, CARAT36CD-M (White panel)	17317000A62715
	CAC12CA-WI, CAC12CD-WI, CAC18CD-WI, CAC24CD-WI	17317000007274
	CAC12CA-WIU, CAC12CD-WIU, CAC18CD-WIU, CAC24CD-WIU, CAC36CD-WIU	17317000007558
	CH32-V, CT32-V	17317000A73215

 
 
 
 


Switch to °C / °F

Press **▲** and **▼** together for 3 seconds to alternate the display between °C and °F.



Remote Control (continued — same series as ARC-88B)

Photo	Model	Remote Control Code
	CSA12CA-R, CSA12CD-R, CSA18CD-R, CSA24CD-R, CSA36CD-R	17317000A64775
	CLA12CA, CLA12CD, CLA18CD, CLA24CD	17317000A65321
	CFU12CA, CFU12CD, CFU18CD, CFU24CD	17317000A65321
	CT32-12CA, CT32-12CD, CT32-18CD, CT32-24CD	17317000A68637
	CAC12CA, CAC12CD, CAC18CD, CAC24CD	17317000A69181
	CWI12CA-L, CWI09CD-L, CWI12CD-L, CWI18CD-L, CWI24CD-L, CWI36CD-L	/
	CIP12CA-L, CIP09CD-L, CIP12CD-L, CIP18CD-L, CIP24CD-L, CIP36CD-L	17317000A66256
	CLA09CF, CLA12CF, CLA18CF, CLA24CF	17317000A65321
	CXX12CA, CXX12CD, CXX18CD, CXX24CD	12122000A97714



Switch to °C / °F — Not Supported

This function is not supported. The temperature is displayed by default in Celsius.



Remote Control (CSA-S series 29F, 29G, 19x - 20x)

Photo	Model	Remote Control Code
	CSA12CD-S, CSA18CD-S, CSA24CD-S	/



Switch to °C / °F — Not Supported

This function is not supported. The temperature is displayed by default in Celsius.

Remote Control (CC32 / CH32 28x & CSA32 38x - 39x)

Photo	Model	Remote Control Code
	CC32, CH32, CSA32	/



Switch to °C / °F

Press **+** and **-** together for 5 seconds to alternate the display between °C and °F.

Remote Control (CT32 27x - 28x / CFU 28x - 37x)

Photo	Model	Remote Control Code
	CT32, CFU	/



Switch to °C / °F — Not Supported

This function is not supported. The temperature is displayed by default in Celsius.

Remote Control

Photo	Model	Remote Control Code
	CCT32-36, NEI32-36, NEI32-60	/



Switch to °C / °F

Press **TURBO** and **TEMP ▲** together to switch between Fahrenheit and Celsius display.

Remote Control

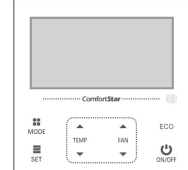
Photo	Model	Remote Control Code
	NEO-C, CCT-C	/



Switch to °C / °F

Press **▲** and **▼** together for 3 seconds to alternate the display between °C and °F.

Wire Controls (Wall-Mounted Panels)

	Basic touchscreen panel	°C/°F selection available on some models. Press ▲ and ▼ together for 3 seconds to alternate the display.
	Icon-button panel (MODE / ECO icons)	On the main screen while powered on, hold TEMP ▲ and FAN ▲ together for 3 seconds. Release once the display switches to save the setting.
	Small icon-button panel	Press the settings icon once, then press and hold the ECO icon to enter setup mode. Use TEMP+ / TEMP- to adjust the parameter.
	Advanced display (function-code style)	When the function icon blinks, press ENTER to open parameter setup. Use ▲/▼ to select function code P6 (Degree Fahrenheit/Celsius display), then press ENTER and set the parameter to F (Fahrenheit) or C (Celsius).

One additional advanced wired panel supports a function-code parameter table: code **P6** sets Degree Fahrenheit/Celsius display, with parameter **F-C** (F = Fahrenheit display, C = Celsius display).