




Air Conditioning & Heating Products

Service Manual

Outdoor Unit:

BAH17-18-15	44F
BAH17-24-15	44G
BAH17-30-15	44H
BAH17-36-15	44J
BAH10-42-15	44K
BAH10-48-15	44L
BAH10-60-15	44M

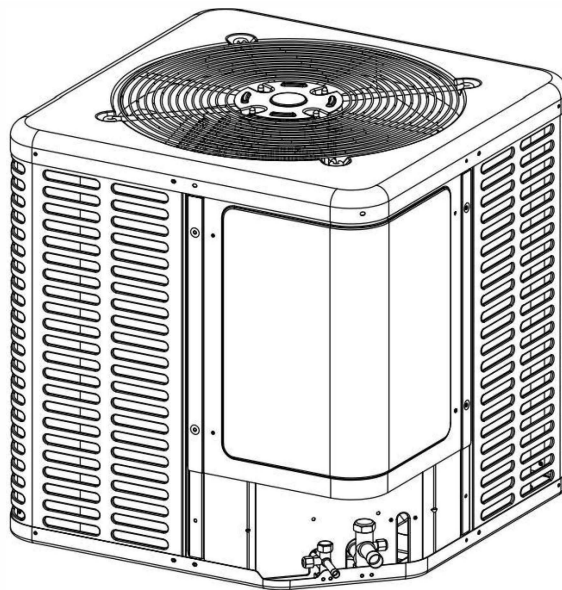

RECOGNIZE THIS SYMBOL AS A SAFETY PRECAUTION

ATTENTION INSTALLING PERSONNEL

Prior to installation, thoroughly familiarize yourself with this Installation Manual. Observe all safety warnings.

During installation or repair, caution is to be observed.

It is your responsibility to install the product safely and to educate the customer on its safe usage.

Eair LLC

12201 N.W. 107th Avenue, Medley, FL 33178

www.comfortstarusa.com

Part 1

General Information

1 Product lineup	2
2 Specifications	3

1 Product lineup

Model	Cooling Capacity (Btu/h)	Heating Capacity (Btu/h)	Appearance
BAH17-18-15	18000	17600	
BAH17-24-15	24000	24000	
BAH17-30-15	30000	30000	
BAH17-36-15	34200	34000	
BAH10-42-15	42000	42000	
BAH10-48-15	46000	46000	
BAH10-60-15	54000	53000	

2 Specifications

OUTDOOR UNIT			BAH17-18-15	BAH17-24-15	BAH17-30-15	BAH17-36-15	BAH10-42-15	BAH10-48-15	BAH10-60-15
INDOOR UNIT			LUC17-18-15	LUC17-24-15	LUC17-30-15	LUC17-36-15	LUC17-42-15	LUC17-48-15	LUC17-60-15
Power supply	Rated Voltage	V, Ph, Hz	208/230V, 1Ph, 60Hz	208/230V, 1Ph, 60Hz	208/230V, 1Ph, 60Hz	208/230V, 1Ph, 60Hz	208/230V, 1Ph, 60Hz	208/230V, 1Ph, 60Hz	208/230V, 1Ph, 60Hz
Cooling	Capacity	Btu/h	18000	24000	30000	34200	42000	46000	54000
	SEER2	Btu/h/W	14.3	14.3	14.3	14.3	14.3	14.3	14.3
	EER2	Btu/h/W	11.7	11.7	11.7	11.7	11.7	11.7	11.7
Heating	Capacity	Btu/h	17600	24000	30000	34000	42000	46000	53000
	HSPF2-4	Btu/h/W	7.5	7.5	7.5	7.5	7.5	7.5	7.5
Indoor MAX.FUSE		A	6.0	6.0	6.0	6.0	10.0	10.0	10.0
Indoor air flow (H/L)		CFM	650/420	650/420	950/520	950/520	1100/750	1690/750	1740/750
Indoor Noise level (H/L)		dB(A)	38.5/34	38.5/34	40/36	40/36	53/46	53/46	53/46
N.A. Design pressure		PSI	174/609	174/609	174/609	174/609	174/609	174/609	174/609
Indoor unit	Dimension	inch	17-33/64×21-1/32×45			21-1/32×21-1/32×49-7/32		24-31/64×21-1/32×52-63/64	
	Packing	inch	20-55/64×26-37/64×46-17/64			24-13/32×26-37/64×50-13/64		27-7/8×26-37/64×54-9/64	
	Net Weight/Gross	lbs	114/127			133/151		165/184	
Refrigerant piping	Liquid side/Gas side	inch	(3/8) / (3/4)	(3/8) / (3/4)	(3/8) / (3/4)	(3/8) / (3/4)	(3/8) / (3/4)	(3/8) / (3/4)	(3/8) / (3/4)
Connecting Wiring	AWG		24V: AWG 14*3Shielded						
Communication Type			24V						
Throttle type			Piston	Piston	Piston	Piston	Piston	Piston	Piston
Operating Temp. Range	Cooling	°F	23~125	23~125	23~125	23~125	23~125	23~125	23~125
	Heating	°F	-4~86	-4~86	-4~86	-4~86	-4~86	-4~86	-4~86


Part 2

Component Layout and Refrigerant Circuit


1 Layout Functional Components	5
2 Piping diagrams	6

1 Layout Functional Components


BAH17-18-15, BAH17-24-15,BAH17-30-15,BAH17-36-15

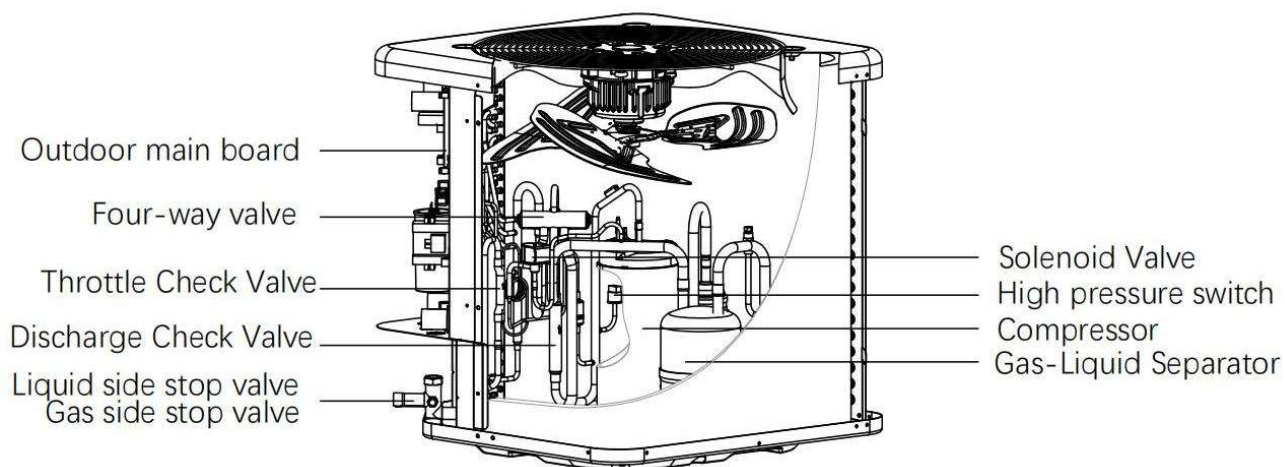

BAH10-42-15,BAH10-48-15,BAH10-60-15

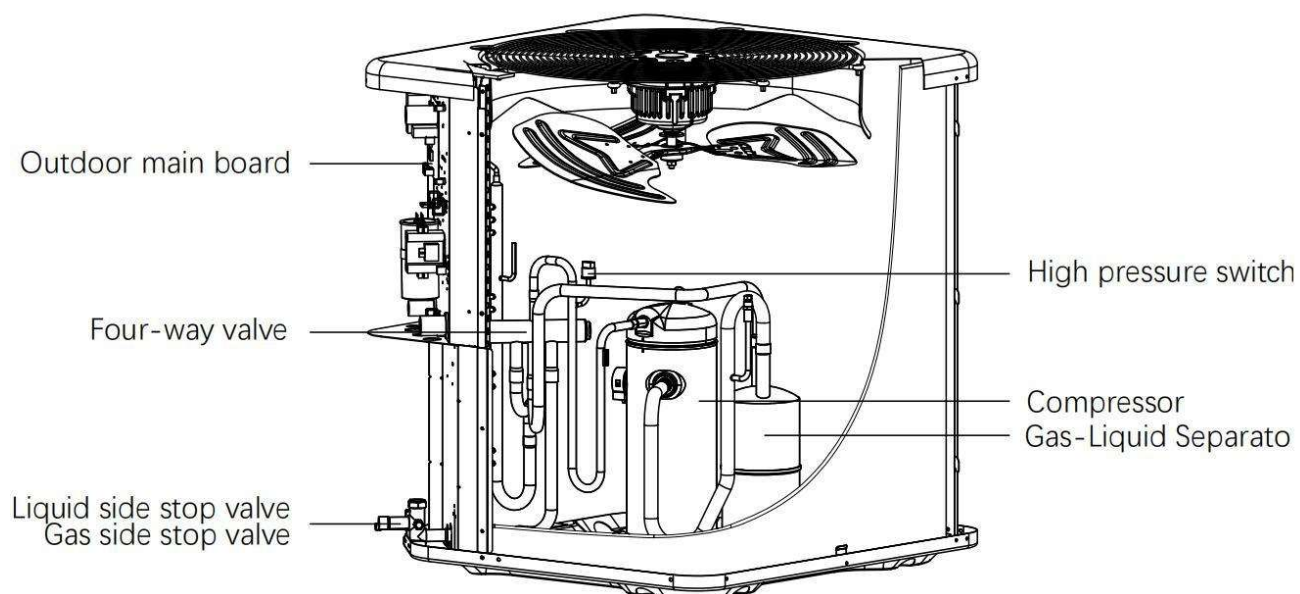

2 Piping diagrams

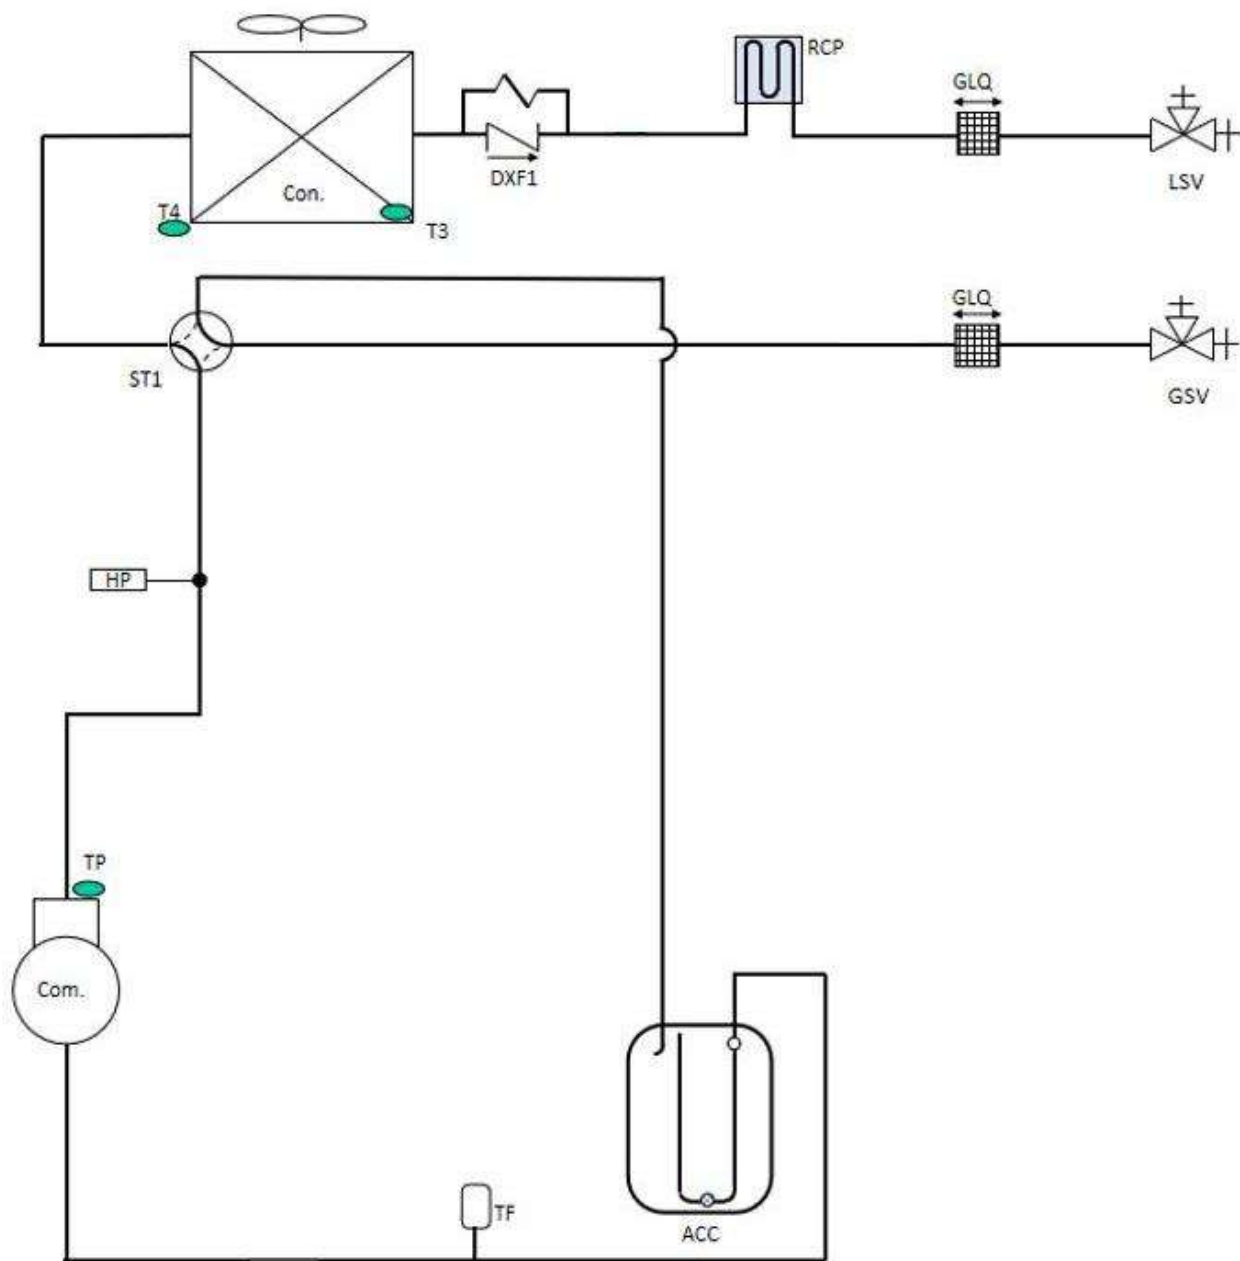


NO.	Component(Outdoor unit)	NO.	Component(Outdoor unit)
Com.	Compressor	RCP	Refrigerant cooling pipe
TP	Exhaust temperature sensor	GLQ	Filter
HP	High pressure switch	LSV	Liquid Stop Valve
ST1	Four-way valve	GSV	Gas Stop Valve
T4	Ambient temperature sensor	ACC	Gas-liquid separator
T3	Condenser coil temperature sensor	TP	Thermal fuse
Con.	Condenser		
DXF1	One-way valve		

Part 3

Wiring Diagram

1 Electric wiring diagram	8
2 PCB	9
3 Low voltage wiring diagram	10

1 Electric wiring diagram


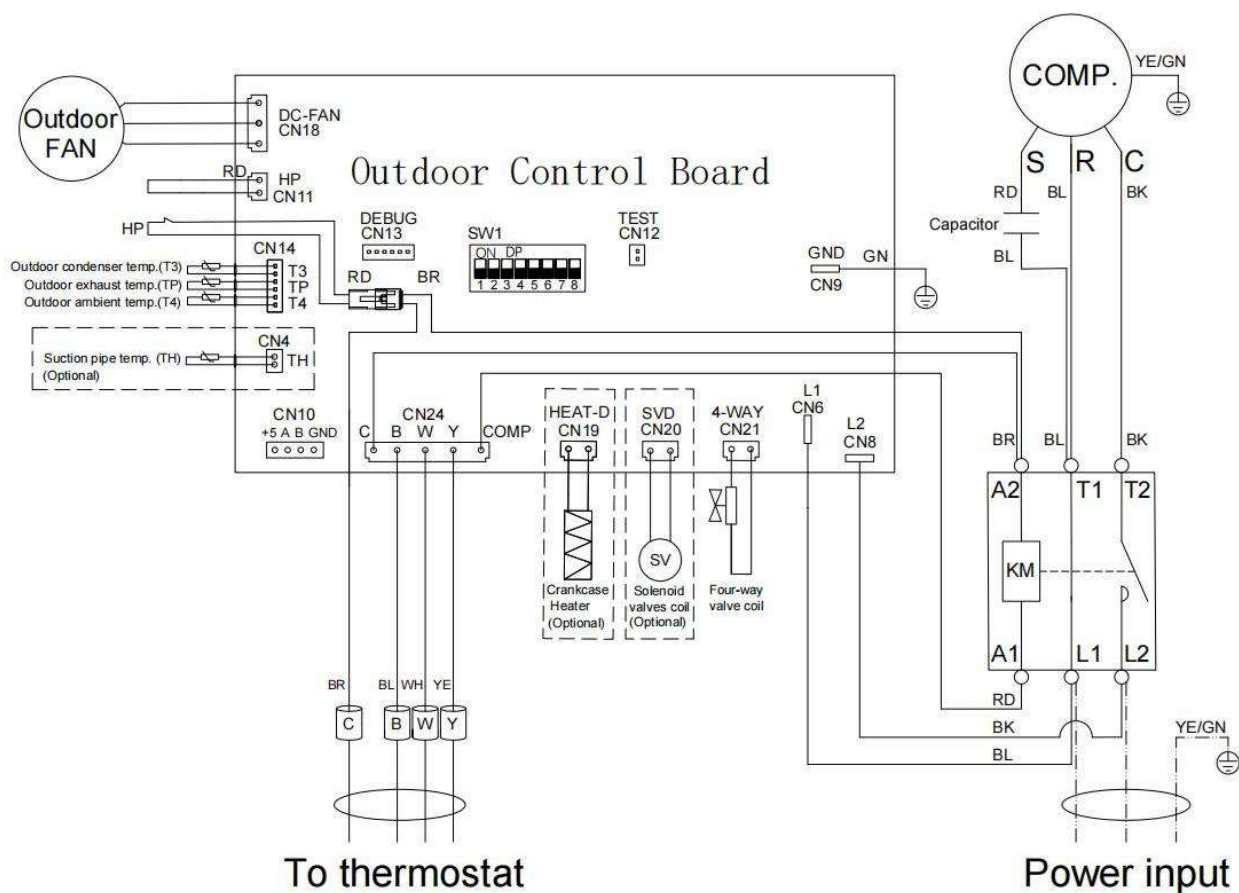


Note : 18k 24k 30k 36k models should connect Solenoid valves coil

LINE ANNOTATION	Wire Color Code	DIP switch status Indicate	
———— Factory wiring	RD RED OR ORANGE	ON ☐	This Indicate OFF (The DIP switch is dialed to the digital side)
----- Field install	BL BLUE GN GREEN	OFF ☒	
----- Dashed box	BR BROWN GY GRAY	ON ☐	This Indicate ON (The DIP switch is dialed to the non-digital side)
	BK BLACK YE YELLOW	OFF ☒	
	WH WHITE PR PURPLE	ON ☐	

Outdoor Display Board SW1 DIP switch selection						Outdoor Display Board SW1 DIP switch selection		
SW1.1	OFF	24V Control (Default)				SW1.5	OFF	Reserved (Default)
	ON	RS485 Comm. Mode					ON	Manual Defrosting
SW1.2	OFF	Heating and cooling (Default)				SW1.6	OFF	Auto Defrosting (Default)
	ON	Single-cooled					ON	Periodically Defrosting
SW1.3	OFF	SW1.4	OFF	Model	18K	SW1.7	OFF	Defrost interval 60 minutes (Default)
	OFF		ON		24K 30K 36K 42K		ON	Defrost interval 30 minutes
	ON		OFF		Reserved	SW1.8	OFF	General mode (Default)
	ON		ON		48K 60K		ON	High vertical mode

2 PCB

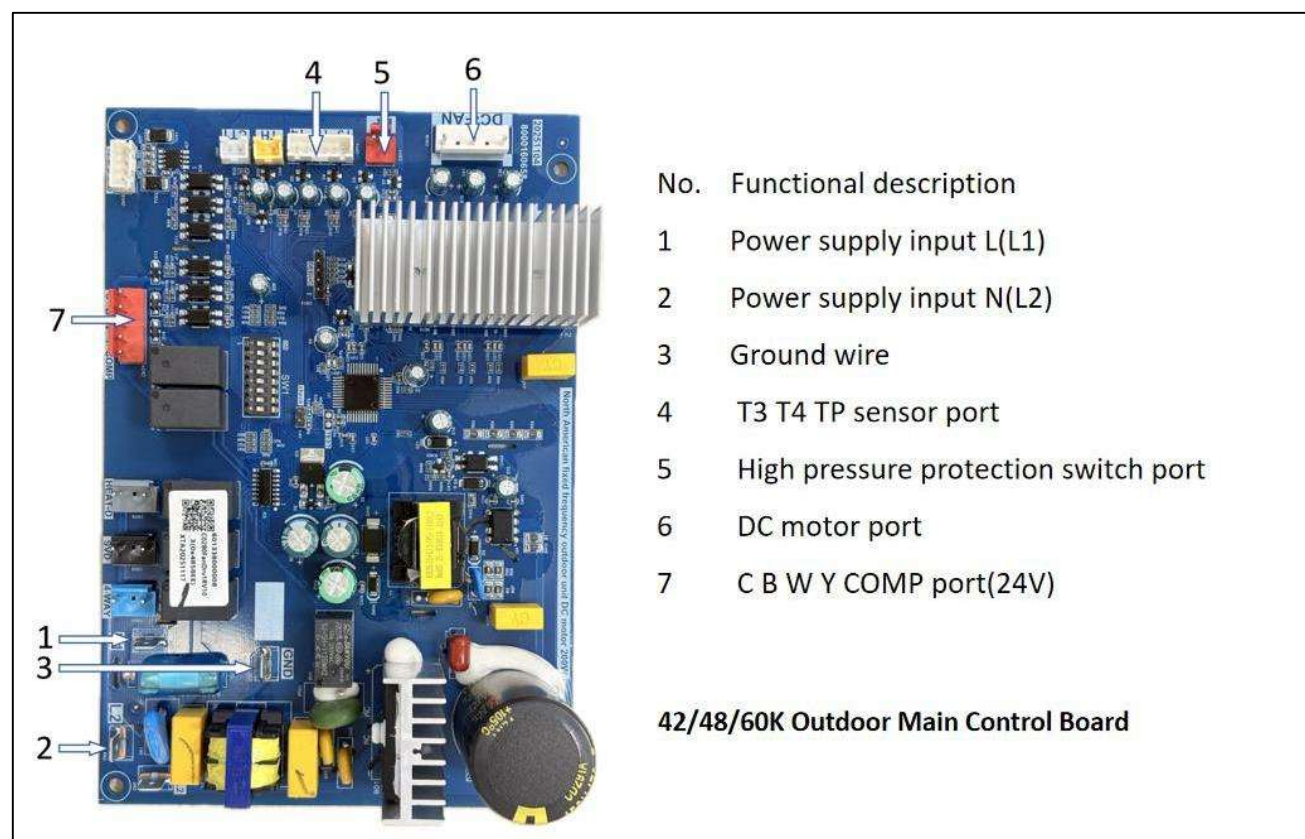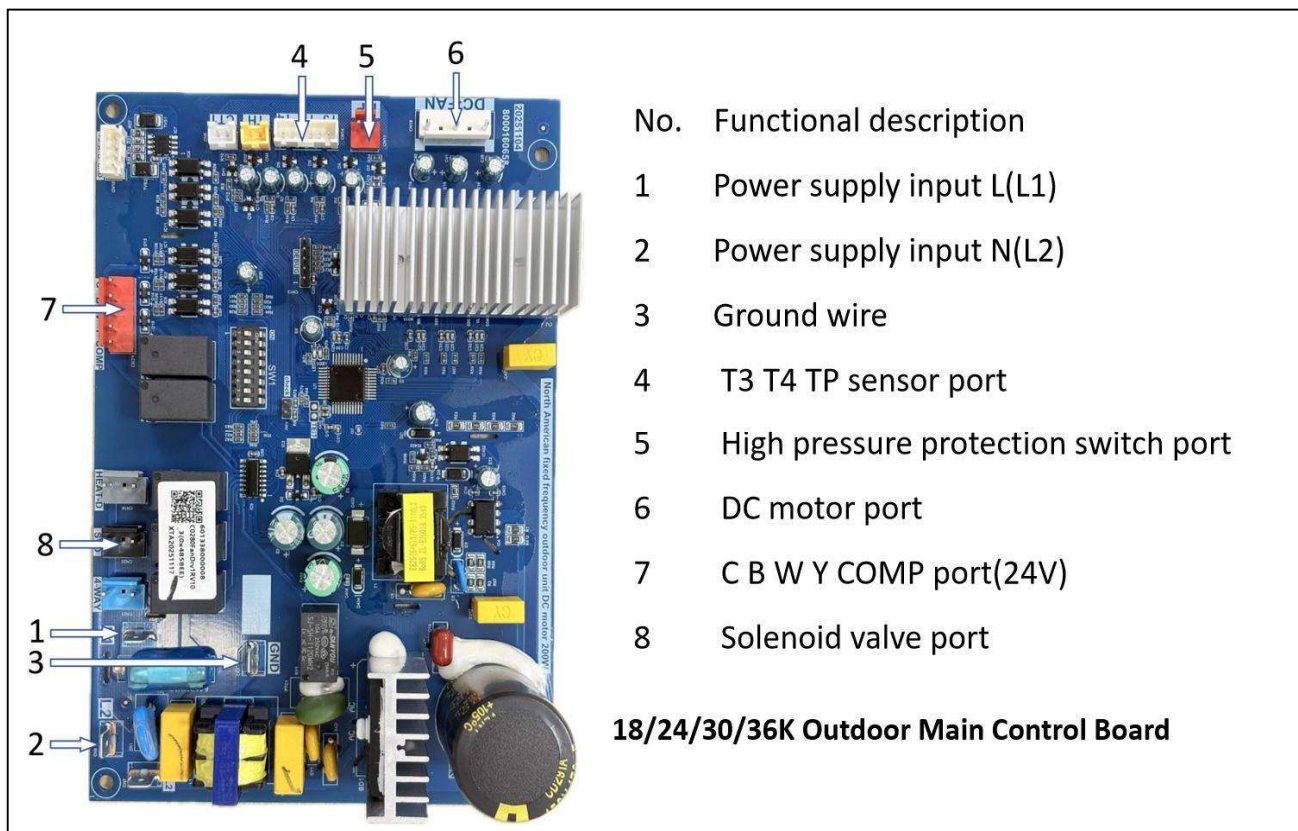


3 Low voltage wiring diagram


The following wiring diagram are suitable for the Indoor Unit and Outdoor Unit with 24V thermostat.

Heat Pump System Model


Wiring for 1H and 1C thermostat (heat pump system model)

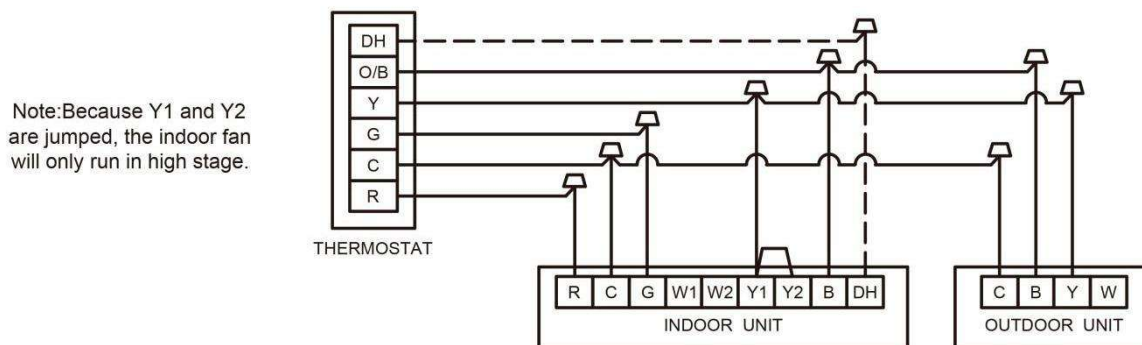


Wiring for 2H and 1C thermostat (heat pump system model)

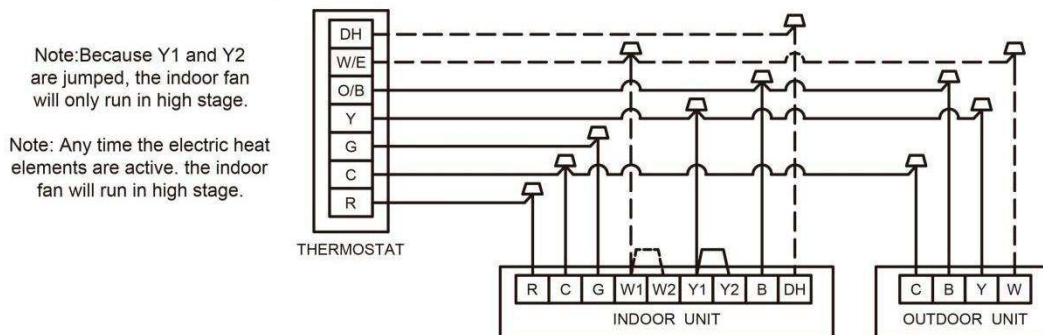


Wiring for 2H and 2C thermostat (heat pump system model)

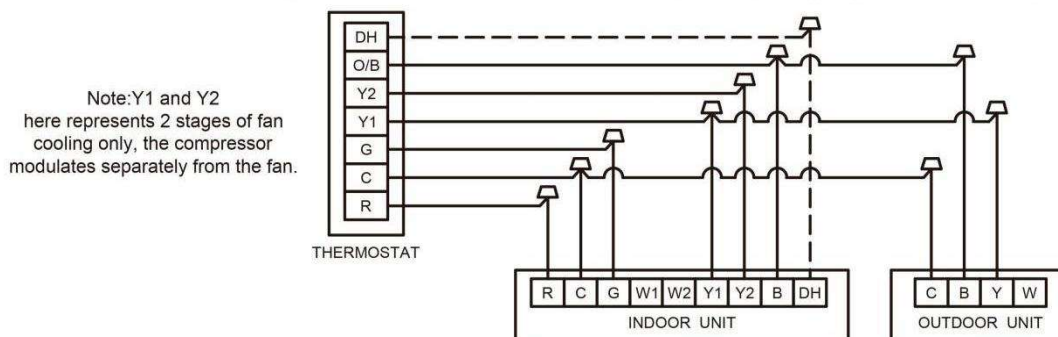


Wiring for 3H and 1C thermostat (heat pump system model)

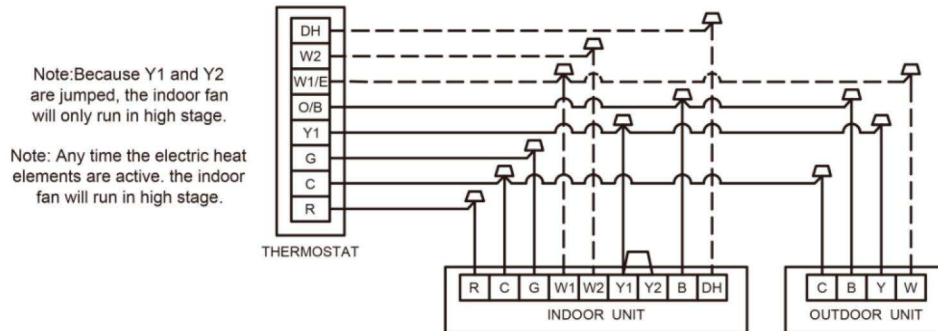

Wiring for 3H and 2C thermostat (heat pump system model)

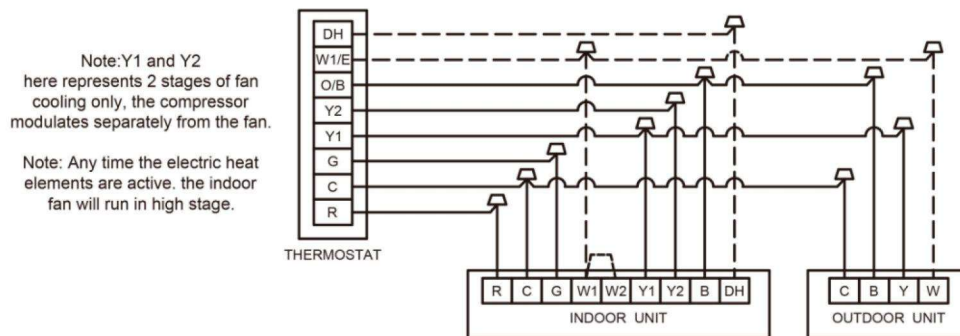

Wiring for 4H and 2C thermostat (heat pump system model)

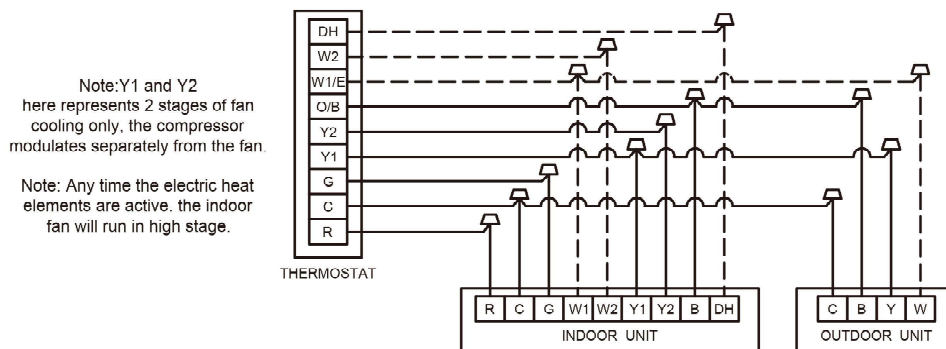

i Dh wiring is optional and requires a thermostat with a humidistat. Dh functions as Passive Dehumidification and will downstage the indoor fan to first stage. System will operate according to normal sequence of operations if Dh wiring is absent.

i Dashed lines in the above thermostat wiring diagrams refer to optional wiring (wiring for Passive Dehumidification Function and/OR Electric Heat). For thermostat wiring please refer to the Owner's Manual of the thermostat.

i B wire must be used with heat pump system only, the reversing valve energizes in heating.

Control logic

Indoor unit connector

Connector	Purpose
R	24V Power Connection
C	Common
G	Fan Control
Y1	Low Demand
Y2	High Demand
B	Heating Reversing Valve
W1	Stage 1 Electric Heating
W2	Stage 2 Electric Heating
DH	Dehumidification

Outdoor unit connector

Connector	Purpose
C	Common
Y	Compressor
B	Heating Reversing Valve
W	Defrost control

Note:

- 1) DH wiring is optional and requires a thermostat with a humidistat. DH functions as Passive Dehumidification and will downstage the indoor fan to first stage. System will operate according to normal sequence of operations if DH wiring is absent.
- 2) Dashed lines in the above thermostat wiring diagrams refer to optional wiring (wiring for Passive Dehumidification Function and/OR Electric Heat). For thermostat wiring please refer to the Owner's Manual of the thermostat.

Part 4

Diagnosis and Troubleshooting

1 Error code table	14
2 Troubleshooting	15
2.1 Safety Precautions	15
2.2 ATL Troubleshooting	18
2.3 High Pressure Alert	19
2.4 TP Exhaust Over-temperature Protection Troubleshooting	21
2.5 T3/T4/TP Troubleshooting	21
3. Temperature Sensor Resistance Characteristics	22

1 Error code table

	LED Display	System Status
Operating Mode	Green Light: Flash 1 time per Second Red Light: Off	Standby
	Green Light: Steadily On Red Light: Off	Cooling
		Heating
System Alert	Green Light: Flashes 1 Time Red Light: Off	Low Pressure Alert(Reserved)
	Green Light: Flashes 2 Times Red Light: Off	High Pressure Alert
	Green Light: Flashes 3 Times Red Light: Off	Tp Exhaust Over-temperature Protection
	Green Light: Flashes 4 Times Red Light: Off	TH Anti-freeze Protection Fault(Reserved)
	Green Light: Flashes 5 Times Red Light: Off	T4 Ambient Temperature Protection
	Green Light: Flashes 6 Times Red Light: Off	T3 Over-temperature Protection
	Green Light: Off Red Light: Flashes 1 Time	T3 Sensor Error
	Green Light: Off Red Light: Flashes 2 Times	T4 Sensor Error
	Green Light: Off Red Light: Flashes 3 Times	Tp Sensor Error
	Green Light: Off Red Light: Flashes 4 Times	TH Sensor Error(Reserved)
	Green Light: Flashes 1 Time Red Light: Flashes 1 Time	DC fan failure
System Lockout	Green Light: Off Red Light: Flashes 5 Times	6 Low Pressure Faults within 60 Mins(Reserved)
	Green Light: Off Red Light: Flashes 6 Times	3 Exhaust Over-temperature Faults within 60 Mins
	Green Light: Off Red Light: Flashes 7 Times	8 TH Anti-freeze Faults within 200 Mins(Reserved)

2 Troubleshooting

2.1 Safety Precautions

The following precautions here are quite important, so be sure to follow them carefully. Read these instructions carefully before installation. Keep this manual in a handy for future reference.

Failure to adhere to all precautionary measures listed in this section may result in personal injury, damage to the unit or to property, or in extreme cases, death.



WARNING

- Indicates a potentially hazardous situation which if not avoided, could result in death or serious injury.



CAUTION

- Indicates a potentially hazardous situation which if not avoided, may result in minor or moderate injury.
- It is also used to alert against unsafe practices.

2.1.1 In case of Accidents or Emergency



WARNING

- If a gas leak is suspected, immediately turn off the gas and ventilate the area if a gas leak is suspected before turning the unit on.
- If strange sounds or smoke is detected from the unit, turn the breaker off and disconnect the power supply cable.
- If the unit comes into contact with liquid, contact an authorized service center.
- If liquid from the batteries makes contact with skin or clothing, immediately rinse or wash the area well with clean water.
- Do not insert hands or other objects into the air inlet or outlet while the unit is plugged in.
- Do not operate the unit with wet hands.



CAUTION

- Clean and ventilate the unit at regular intervals when operating it near a stove or near similar devices.
- Do not use the unit during severe weather conditions. If possible, remove the product from the window before such occurrences.

2.1.2 Information servicing(For flammable materials)



WARNING

- Use this unit only on a dedicated circuit.
- Damage to the installation area could cause the unit to fall, potentially resulting in personal injury, property damage, or product failure.
- Only qualified personnel should disassemble, install, remove, or repair the unit.
- Only a qualified electrician should perform electrical work. For more information, contact your dealer, seller, or an authorized service center.



CAUTION

- While unpacking be careful of sharp edges around the unit as well as the edges of the fins on the condenser and evaporator.

2.1.3 Operation and Maintenance



WARNING

- Do not use defective or under-rated circuit breakers.
- Ensure the unit is properly grounded and that a dedicated circuit and breaker are installed.
- Do not modify or extend the power cable. Ensure the power cable is secure and not damaged during operation.
- Do not unplug the power supply plug during operation.
- Do not store or use flammable materials near the unit.
- Do not open the inlet grill of the unit during operation.
- Do not touch the electrostatic filter if the unit is equipped with one.
- Do not block the inlet or outlet of air flow to the unit.
- Do not use harsh detergents, solvents, or similar items to clean the unit. Use a soft cloth for cleaning.
- Do not touch the metal parts of the unit when removing the air filter as they are very sharp.
- Do not step on or place anything on the unit or outdoor units.
- Do not drink water drained from the unit.
- Avoid direct skin contact with water drained from the unit.

- Use a firm stool or step ladder according to manufacturer procedures when cleaning or maintaining the unit.

**CAUTION**


- Do not install or operate the unit for an extended period of time in areas of high humidity or in an environment directly exposing it to sea wind or salt spray.
- Do not install the unit on a defective or damaged installation stand, or in an unsecured location.
- Ensure the unit is installed at a level position
- Do not install the unit where noise or air discharge
- Created by the outdoor unit will negatively impact the environment or nearby residences.
- Do not expose skin directly to the air discharged by the unit for prolonged periods of time.
- Ensure the unit operates in areas waterOr other liquids.
- Ensure the drain hose is installed correctly to ensure proper water drainage.
- When lifting or transporting the unit, it is recommended that two or more people are used for this task.
- When the unit is not to be used for an extended time, disconnect the power supply or turn off the breaker.

2.2 ATL Troubleshooting

- ATL indicates ambient temperature out of bounds protection.
- The unit stops running and will not start operating until the ambient temperature returns to the allowable temperature range, error code is displayed on the communication board.
- The allowable ambient temperature range is 5~125°F (-15~52°C).


2.3 High Pressure Alert

- Green light flashes 2 times with red light off indicates High Pressure Alert.

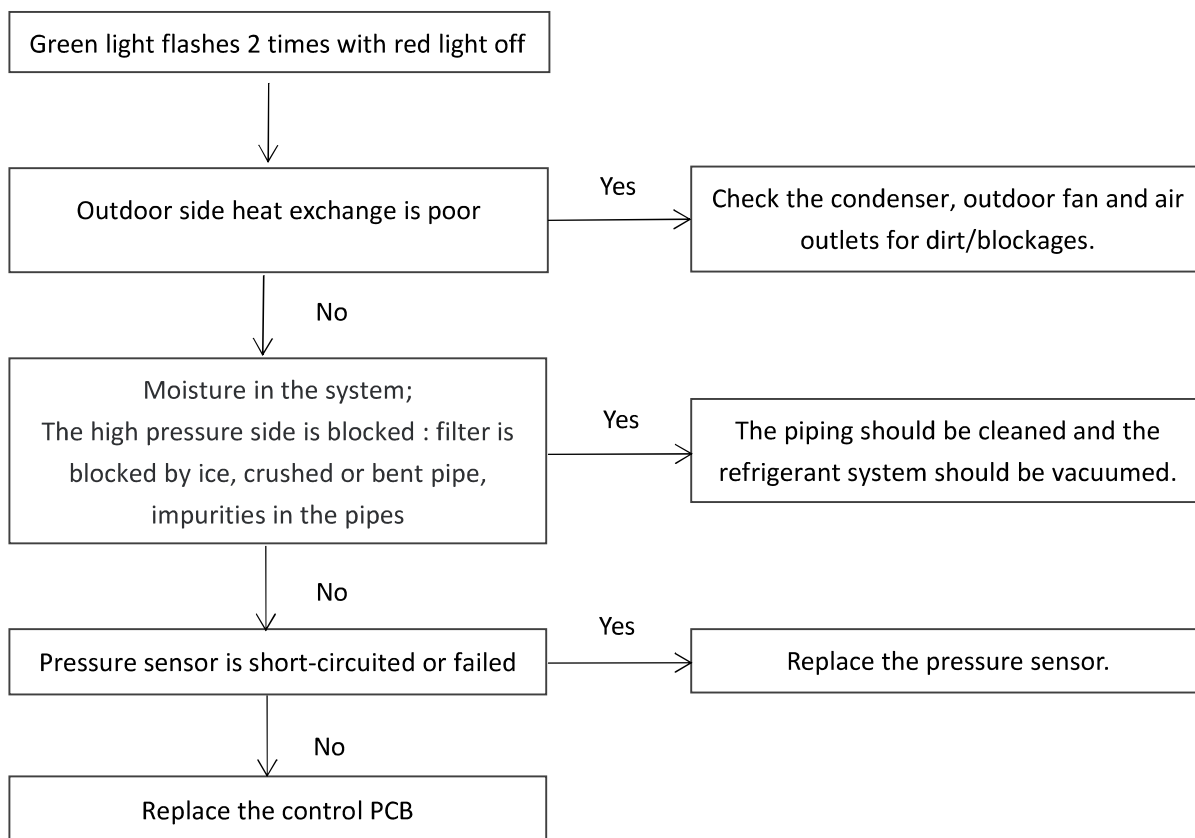


2.4 TP Exhaust Over-temperature Protection Troubleshooting

- Green light flashes 3 times with red light off indicates discharge temperature protection.
- The unit stops running and error code is displayed on the communication board.

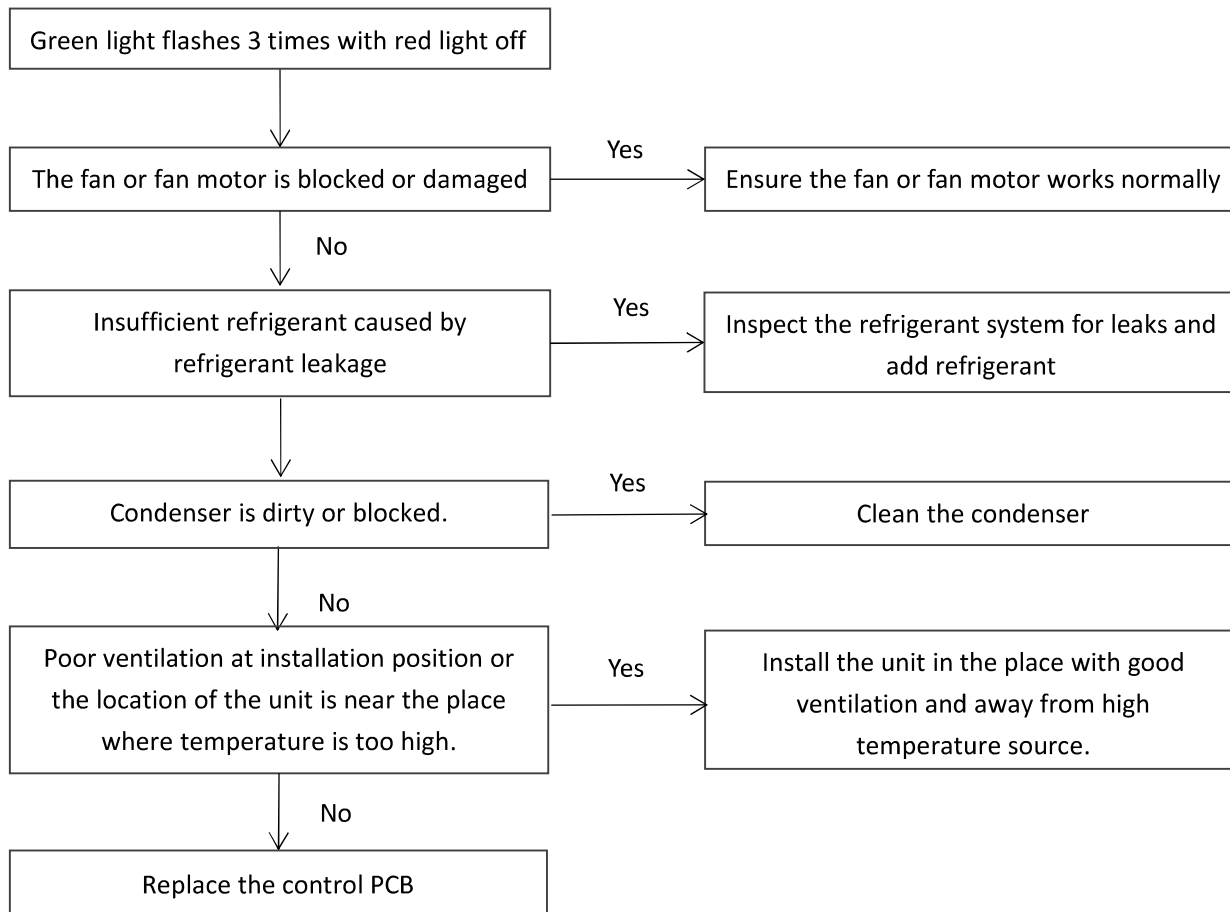

2.5 T3/T4/TP Troubleshooting

- Green light flashes 5 times with red light off indicates Ambient Temperature Protection.
- Green light flashes 5 times with red light off indicates T3 Over-temperature Protection.
- Green light off with red light flashes 1 times indicates T3 Sensor Error.
- Green light off with red light flashes 2 times indicates T4 Sensor Error.
- Green light off with red light flashes 3 times indicates TP Sensor Error.
- Green light off with red light flashes 6 times indicates Exhaust Over-temperature Faults within 60 mins.

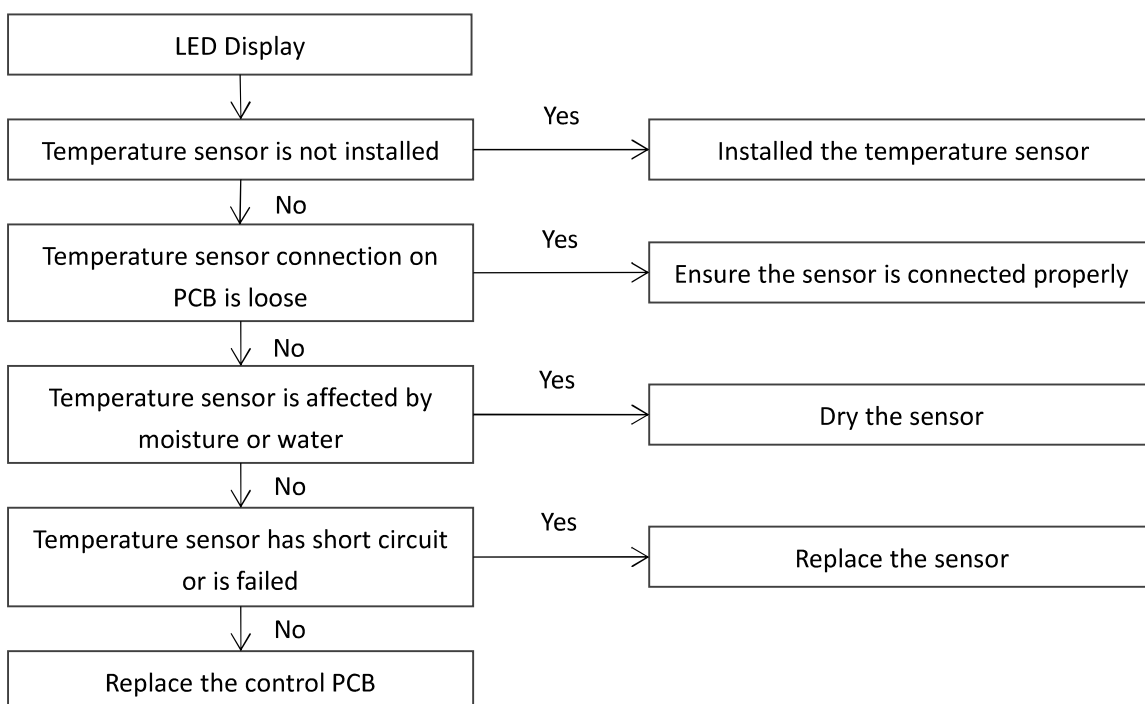

Note:

- 1) Measure sensor resistance. If the resistance is too low, the sensor has short-circuited. If the resistance is not consistent with the sensor's resistance characteristics table, the sensor has failed.

3. Temperature Sensor Resistance Characteristics

Room temperature sensor(T1), condenser coil temperature sensor(T2), condenser coil temperature sensor(T3) and outdoor ambient temperature sensor(T4) resistance characteristics.

Temperature (°C)	Resistance Rmax(kΩ)	Resistance Rnor(kΩ)	Resistance Rmin(kΩ)	Temperature (°C)	Resistance Rmax(kΩ)	Resistance Rnor(kΩ)	Resistance Rmin(kΩ)	Temperature (°C)	Resistance Rmax(kΩ)	Resistance Rnor(kΩ)	Resistance Rmin(kΩ)
-30	65.02	62.77	60.59	11	8.92	8.78	8.65	52	1.94	1.90	1.86
-29	61.52	59.42	57.39	12	8.55	8.42	8.30	53	1.88	1.84	1.80
-28	58.24	56.28	54.39	13	8.20	8.08	7.96	54	1.82	1.78	1.74
-27	55.15	53.32	51.56	14	7.86	7.75	7.64	55	1.76	1.72	1.69
-26	52.24	50.54	48.89	15	7.55	7.44	7.34	56	1.70	1.67	1.63
-25	49.51	47.92	46.38	16	7.24	7.14	7.05	57	1.65	1.61	1.58
-24	46.94	45.46	44.02	17	6.95	6.86	6.77	58	1.60	1.56	1.53
-23	44.51	43.13	41.79	18	6.67	6.59	6.50	59	1.55	1.51	1.48
-22	42.23	40.94	39.69	19	6.41	6.33	6.25	60	1.50	1.46	1.43
-21	40.08	38.88	37.71	20	6.15	6.08	6.01	61	1.45	1.42	1.39
-20	38.05	36.93	35.84	21	5.91	5.85	5.78	62	1.41	1.37	1.34
-19	36.14	35.09	34.07	22	5.68	5.62	5.56	63	1.36	1.33	1.30
-18	34.34	33.36	32.40	23	5.46	5.40	5.35	64	1.32	1.29	1.26
-17	32.63	31.72	30.83	24	5.25	5.20	5.14	65	1.28	1.25	1.22
-16	31.03	30.17	29.34	25	5.05	5.00	4.95	66	1.24	1.21	1.18
-15	29.51	28.71	27.93	26	4.86	4.81	4.76	67	1.21	1.18	1.15
-14	28.07	27.33	26.60	27	4.68	4.63	4.58	68	1.17	1.14	1.11
-13	26.72	26.02	25.34	28	4.51	4.46	4.41	69	1.13	1.11	1.08
-12	25.44	24.78	24.15	29	4.34	4.29	4.24	70	1.10	1.07	1.05
-11	24.22	23.61	23.02	30	4.18	4.13	4.08	71	1.07	1.04	1.02
-10	23.08	22.51	21.95	31	4.03	3.98	3.93	72	1.04	1.01	0.98
-9	21.99	21.46	20.93	32	3.89	3.84	3.79	73	1.01	0.98	0.96
-8	20.96	20.46	19.97	33	3.75	3.70	3.65	74	0.98	0.95	0.93
-7	19.99	19.52	19.06	34	3.61	3.56	3.52	75	0.95	0.92	0.90
-6	19.06	18.63	18.20	35	3.48	3.44	3.39	76	0.92	0.90	0.87
-5	18.19	17.78	17.38	36	3.36	3.31	3.27	77	0.90	0.87	0.85
-4	17.36	16.98	16.61	37	3.24	3.20	3.15	78	0.87	0.85	0.82
-3	16.57	16.22	15.87	38	3.13	3.08	3.04	79	0.85	0.82	0.80
-2	15.83	15.49	15.17	39	3.02	2.97	2.93	80	0.82	0.80	0.78
-1	15.12	14.81	14.50	40	2.91	2.87	2.83	72	1.04	1.01	0.98
0	14.45	14.16	13.87	41	2.81	2.77	2.73	73	1.01	0.98	0.96
1	13.81	13.54	13.27	42	2.72	2.67	2.63	74	0.98	0.95	0.93
2	13.20	12.95	12.70	43	2.63	2.58	2.54	75	0.95	0.92	0.90
3	12.63	12.39	12.15	44	2.54	2.49	2.45	76	0.92	0.90	0.87
4	12.08	11.85	11.64	45	2.45	2.41	2.37	77	0.90	0.87	0.85
5	11.56	11.35	11.14	46	2.37	2.33	2.29	78	0.87	0.85	0.82
6	11.06	10.87	10.67	47	2.29	2.25	2.21	79	0.85	0.82	0.80
7	10.59	10.41	10.23	48	2.21	2.17	2.13	80	0.82	0.80	0.78
8	10.14	9.97	9.80	49	2.14	2.10	2.06	81	0.80	0.78	0.75
9	9.71	9.56	9.40	50	2.07	2.03	1.99	82	0.78	0.75	0.73
10	9.31	9.16	9.01	51	2.00	1.97	1.93	83	0.75	0.73	0.71

Temperature (°C)	Resistance Rmax(kΩ)	Resistance Rnor(kΩ)	Resistance Rmin(kΩ)	Temperature (°C)	Resistance Rmax(kΩ)	Resistance Rnor(kΩ)	Resistance Rmin(kΩ)	Temperature (°C)	Resistance Rmax(kΩ)	Resistance Rnor(kΩ)	Resistance Rmin(kΩ)
84	0.73	0.71	0.69	107	0.40	0.39	0.37	130	0.23	0.22	0.21
85	0.71	0.69	0.67	108	0.39	0.38	0.36	131	0.23	0.22	0.21
86	0.69	0.67	0.65	109	0.38	0.37	0.35	132	0.22	0.21	0.20
87	0.68	0.66	0.64	110	0.37	0.36	0.34	133	0.22	0.21	0.20
88	0.66	0.64	0.62	111	0.36	0.35	0.34	134	0.21	0.20	0.19
89	0.64	0.62	0.60	112	0.35	0.34	0.33	135	0.21	0.20	0.19
90	0.62	0.60	0.58	113	0.34	0.33	0.32	136	0.20	0.19	0.19
91	0.61	0.59	0.57	114	0.34	0.32	0.31	137	0.20	0.19	0.18
92	0.59	0.57	0.55	115	0.33	0.32	0.30	138	0.19	0.19	0.18
93	0.57	0.56	0.54	116	0.32	0.31	0.30	139	0.19	0.18	0.17
94	0.56	0.54	0.52	117	0.31	0.30	0.29	140	0.19	0.18	0.17
95	0.54	0.53	0.51	118	0.31	0.29	0.28	141	0.18	0.17	0.17
96	0.53	0.51	0.50	119	0.30	0.29	0.28	142	0.18	0.17	0.16
97	0.52	0.50	0.48	120	0.29	0.28	0.27	143	0.17	0.17	0.16
98	0.50	0.49	0.47	121	0.28	0.27	0.26	144	0.17	0.16	0.16
99	0.49	0.47	0.46	122	0.28	0.27	0.26	145	0.17	0.16	0.15
100	0.48	0.46	0.45	123	0.27	0.26	0.25	146	0.16	0.16	0.15
101	0.47	0.45	0.43	124	0.27	0.25	0.24	147	0.16	0.15	0.15
102	0.45	0.44	0.42	125	0.26	0.25	0.24	148	0.16	0.15	0.14
103	0.44	0.43	0.41	126	0.25	0.24	0.23	149	0.15	0.15	0.14
104	0.43	0.42	0.40	127	0.25	0.24	0.23	150	0.15	0.14	0.14
105	0.42	0.41	0.39	128	0.24	0.23	0.22				
106	0.41	0.40	0.38	129	0.24	0.23	0.22				

Compressor exhaust temperature sensor (TP) resistance characteristics.

Temperature (°C)	Resistance Rmax(kΩ)	Resistance Rnor(kΩ)	Resistance Rmin(kΩ)	Temperature (°C)	Resistance Rmax(kΩ)	Resistance Rnor(kΩ)	Resistance Rmin(kΩ)	Temperature (°C)	Resistance Rmax(kΩ)	Resistance Rnor(kΩ)	Resistance Rmin(kΩ)
0	165.85	162.28	158.78	51	17.62	17.27	16.91	102	3.18	3.06	2.94
1	157.60	154.29	151.04	52	16.97	16.62	16.27	103	3.08	2.97	2.86
2	149.81	146.74	143.71	53	16.35	16.00	15.66	104	2.99	2.88	2.77
3	142.44	139.59	136.79	54	15.75	15.41	15.08	105	2.90	2.79	2.69
4	135.48	132.84	130.23	55	15.17	14.84	14.52	106	2.82	2.71	2.61
5	128.90	126.45	124.03	56	14.62	14.30	13.98	107	2.74	2.63	2.53
6	122.68	120.40	118.15	57	14.09	13.78	13.46	108	2.66	2.56	2.46
7	116.79	114.68	112.59	58	13.59	13.27	12.97	109	2.58	2.48	2.38
8	111.21	109.26	107.32	59	13.10	12.79	12.50	110	2.51	2.41	2.32
9	105.94	104.12	102.33	60	12.63	12.33	12.04	111	2.44	2.34	2.25
10	100.94	99.26	97.59	61	12.19	11.89	11.61	112	2.37	2.27	2.18
11	96.20	94.64	93.10	62	11.76	11.47	11.19	113	2.30	2.21	2.12
12	91.72	90.27	88.84	63	11.34	11.06	10.79	114	2.24	2.15	2.06
13	87.46	86.13	84.80	64	10.95	10.67	10.40	115	2.18	2.09	2.00
14	83.43	82.19	80.97	65	10.57	10.30	10.03	116	2.11	2.03	1.94
15	79.60	78.46	77.33	66	10.20	9.94	9.68	117	2.06	1.97	1.89
16	75.97	74.92	73.87	67	9.85	9.59	9.34	118	2.00	1.92	1.84
17	72.53	71.55	70.58	68	9.51	9.26	9.01	119	1.94	1.86	1.78
18	69.26	68.36	67.46	69	9.19	8.94	8.70	120	1.89	1.81	1.73
19	66.15	65.32	64.49	70	8.87	8.63	8.40	121	1.84	1.76	1.69
20	63.20	62.43	61.67	71	8.57	8.34	8.11	122	1.79	1.71	1.64
21	60.40	59.69	58.99	72	8.28	8.05	7.83	123	1.74	1.67	1.59
22	57.73	57.08	56.44	73	8.01	7.78	7.56	124	1.69	1.62	1.55
23	55.20	54.60	54.01	74	7.74	7.52	7.30	125	1.65	1.58	1.51
24	52.79	52.25	51.70	75	7.48	7.27	7.06	126	1.60	1.53	1.47
25	50.50	50.00	49.50	76	7.24	7.02	6.82	127	1.56	1.49	1.43
26	48.36	47.86	47.36	77	7.00	6.79	6.59	128	1.52	1.45	1.39
27	46.33	45.83	45.33	78	6.77	6.57	6.37	129	1.48	1.41	1.35
28	44.39	43.89	43.39	79	6.55	6.35	6.16	130	1.44	1.38	1.31
29	42.54	42.04	41.55	80	6.33	6.14	5.95	131	1.40	1.34	1.28
30	40.78	40.28	39.80	81	6.13	5.94	5.76	132	1.37	1.30	1.24
31	39.10	38.61	38.12	82	5.93	5.75	5.57	133	1.33	1.27	1.21
32	37.49	37.01	36.53	83	5.74	5.56	5.39	134	1.30	1.24	1.18
33	35.96	35.49	35.01	84	5.56	5.38	5.21	135	1.26	1.20	1.15
34	34.51	34.03	33.56	85	5.38	5.21	5.04	136	1.23	1.17	1.12
35	33.11	32.65	32.18	86	5.21	5.04	4.88	137	1.20	1.14	1.09
36	31.78	31.32	30.86	87	5.05	4.88	4.72	138	1.17	1.11	1.06
37	30.51	30.06	29.61	88	4.89	4.73	4.57	139	1.14	1.08	1.03
38	29.30	28.85	28.41	89	4.74	4.58	4.43	140	1.11	1.06	1.01
39	28.14	27.70	27.26	90	4.59	4.44	4.29	141	1.08	1.03	0.98
40	27.04	26.60	26.17	91	4.45	4.30	4.15	142	1.05	1.00	0.95
41	25.98	25.55	25.13	92	4.31	4.16	4.02	143	1.03	0.98	0.93
42	24.97	24.55	24.13	93	4.18	4.03	3.89	144	1.00	0.95	0.91
43	24.00	23.59	23.18	94	4.05	3.91	3.77	145	0.98	0.93	0.88
44	23.08	22.67	22.26	95	3.93	3.79	3.66	146	0.95	0.91	0.86
45	22.19	21.79	21.39	96	3.81	3.67	3.54	147	0.93	0.88	0.84
46	21.35	20.95	20.56	97	3.69	3.56	3.43	148	0.91	0.86	0.82
47	20.54	20.15	19.77	98	3.58	3.45	3.33	149	0.88	0.84	0.80
48	19.76	19.38	19.00	99	3.48	3.35	3.23	150	0.86	0.82	0.78
49	19.02	18.64	18.28	100	3.37	3.25	3.13				
50	18.31	17.94	17.58	101	3.27	3.15	3.03				