

**ComfortStar®**

## MULTI OUTDOOR UNITS

### SERVICE MANUAL

*Multi zone*

## CONDENSING UNITS

Revision V 2202



### Model Numbers:

**CVH-18-2SH    CVH-27-3SH    CVH-36-4SH    CVH-48-5SH    CVH-60-5SH**  
**CMZ-18-2Z    CMZ-27-3Z    CMZ-48-4Z    CMZ-54-5Z    CMZ-60-5Z**

### Table of Contents

1. Indoor Unit Combination
2. Dimension Of Outdoor Unit
3. Refrigerant Cycle Diagram
4. Installation Details
5. Electronic Function
6. Wiring Diagrams
7. Trouble Shooting
8. Disassembly Instructions



### **WARNING**

- Installation MUST conform with local building codes or, in the absence of local codes, with the National Electrical Code NFPA70/ANSI C1-1993 or current edition and Canadian Electrical Code Part1 CSA C.22.1.
- The information contained in the manual is intended for use by a qualified service technician familiar with safety procedures and equipped with the proper tools and test instruments
- Installation or repairs made by unqualified persons can result in hazards to you and others.
- Failure to carefully read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.



# CONTENTS

|  |      |
|--|------|
| 1. Indoor Unit Combination .....   | 4    |
| 2. Dimension Of Outdoor Unit .....   | 8    |
| 3. Refrigerant Cycle Diagram .....   | 10   |
| 4. Installation Details .....  | 14   |
| 4.1 Wrench torque sheet for installation .....   | 14   |
| 4.2 Connecting the cables .....  | 14   |
| 4.3 Pipe length and the elevation .....  | 14   |
| 4.4 First-Time Installation .....  | 15   |
| 4.5 Adding Refrigerant after Long-Term System Operation .....                              | 16   |
| 4.6 Procedure when servicing the indoor unit refrigeration circuit. ....                   | 16   |
| 4.7 Evacuation after servicing the outdoor unit refrigeration circuit .....                | 17   |
| 5. Electronic Function .....   | 19   |
| 5.1 Abbreviation .....   | 19   |
| 5.2 Electric Control Working Environment. ....   | 19   |
| 5.3 Main Protection .....  | 19   |
| 5.4 Control and Functions .....  | 21   |
| 6. Wiring Diagrams .....   | 27   |
| 7. Troubleshooting .....   | 42   |
| 7.1 Safety .....   | 42   |
| 7.2 Indoor Unit Error Display .....  | 43   |
| 7.3 Outdoor Unit Display .....   | 46   |
| 7.4 Diagnosis and Solution .....   | 53   |
| 7.5 Trouble Criterion of Main Parts. ....  | 1188 |
| 8. Disassembly Instructions .....  | 128  |
| ➤ <b>CMZ-18-2Z (WX430 metal plate)</b> .....   | 128  |
| ➤ <b>CVH-18-2SH CMZ-27-3Z CVH-27-3SH CMZ-48-4Z (WD30 metal plate)</b> .....                | 135  |
| ➤ <b>CVH-48-5SH, CVH-36-4SH, CMZ-54-5Z, CMZ-60-5Z, CVH-60-5SH (WE30 metal plate)</b> ..... | 143  |



# 1. Indoor Unit Combination

| Multi DC Outdoor Unit | Nominal capacity | Suggested Combination | Limit |
|-----------------------|------------------|-----------------------|-------|
| CMZ-18-2Z             | 5.2kW            | 6+6                   | None  |
|                       |                  | 6+9                   |       |
|                       |                  | 6+12                  |       |
|                       |                  | 9+9                   |       |
|                       |                  | 9+12                  |       |
|                       |                  | 12+12                 |       |
| CVH-18-2SH            | 5.2kW            | 6+6                   | None  |
|                       |                  | 6+9                   |       |
|                       |                  | 6+12                  |       |
|                       |                  | 6+18                  |       |
|                       |                  | 9+9                   |       |
|                       |                  | 9+12                  |       |
|                       |                  | 12+12                 |       |

| Multi DC Outdoor Unit | Nominal capacity | Suggested Combination |             |          | Limit |
|-----------------------|------------------|-----------------------|-------------|----------|-------|
|                       |                  | Two units             | Three units |          |       |
| CMZ-27-3Z             | 7.8kW            | 6+12                  | 6+6+6       | 6+12+12  | None  |
|                       |                  | 6+18                  | 6+6+9       | 6+12+18  |       |
|                       |                  | 9+9                   | 6+6+12      | 9+9+9    |       |
|                       |                  | 9+12                  | 6+6+18      | 9+9+12   |       |
|                       |                  | 9+18                  | 6+9+9       | 9+9+18   |       |
|                       |                  | 12+12                 | 6+9+12      | 9+12+12  |       |
|                       |                  | 12+18                 | 6+9+18      | 12+12+12 |       |
|                       |                  | 18+18                 |             |          |       |
| CVH-27-3SH            | 7.8kW            | 6+12                  | 6+6+6       | 6+12+12  | None  |
|                       |                  | 6+18                  | 6+6+9       | 6+12+18  |       |
|                       |                  | 9+9                   | 6+6+12      | 9+9+9    |       |
|                       |                  | 9+12                  | 6+6+18      | 9+9+12   |       |
|                       |                  | 9+18                  | 6+9+9       | 9+9+18   |       |
|                       |                  | 12+12                 | 6+9+12      | 9+12+12  |       |
|                       |                  | 12+18                 | 6+9+18      | 12+12+12 |       |
|                       |                  | 18+18                 |             |          |       |




| Multi DC Outdoor Unit | Nominal capacity | Suggested Combination |             |          |            |             | Limit |
|-----------------------|------------------|-----------------------|-------------|----------|------------|-------------|-------|
|                       |                  | Two units             | Three units |          | Four units |             |       |
| CMZ-48-4Z             | 10.5kW           | 6+18                  | 6+6+12      | 9+9+12   | 6+6+6+6    | 6+9+9+18    | None  |
|                       |                  | 6+24                  | 6+6+18      | 9+9+18   | 6+6+6+9    | 6+9+9+24    |       |
|                       |                  | 9+18                  | 6+6+24      | 9+9+24   | 6+6+6+12   | 6+9+12+12   |       |
|                       |                  | 9+24                  | 6+9+12      | 9+12+12  | 6+6+6+18   | 6+9+12+18   |       |
|                       |                  | 12+12                 | 6+9+18      | 9+12+18  | 6+6+6+24   | 6+12+12+12  |       |
|                       |                  | 12+18                 | 6+9+24      | 9+12+24  | 6+6+9+9    | 6+12+12+18  |       |
|                       |                  | 12+24                 | 6+12+12     | 9+18+18  | 6+6+9+12   | 9+9+9+9     |       |
|                       |                  | 18+18                 | 6+12+18     | 12+12+12 | 6+6+9+18   | 9+9+9+12    |       |
|                       |                  | 18+24                 | 6+12+24     | 12+12+18 | 6+6+9+24   | 9+9+9+18    |       |
|                       |                  | 24+24                 | 6+18+18     | 12+12+24 | 6+6+12+12  | 9+9+12+12   |       |
|                       |                  |                       | 6+18+24     | 12+18+18 | 6+6+12+18  | 9+9+12+18   |       |
|                       |                  |                       | 9+9+9       |          | 6+6+12+24  | 9+12+12+12  |       |
|                       |                  |                       |             |          | 6+9+9+9    | 12+12+12+12 |       |
|                       |                  |                       |             |          | 6+9+9+12   |             |       |
| CVH-36-4SH            | 10.5kW           | 6+18                  | 6+6+12      | 9+9+12   | 6+6+6+6    | 6+9+9+18    | None  |
|                       |                  | 6+24                  | 6+6+18      | 9+9+18   | 6+6+6+9    | 6+9+9+24    |       |
|                       |                  | 9+18                  | 6+6+24      | 9+9+24   | 6+6+6+12   | 6+9+12+12   |       |
|                       |                  | 9+24                  | 6+9+12      | 9+12+12  | 6+6+6+18   | 6+9+12+18   |       |
|                       |                  | 12+12                 | 6+9+18      | 9+12+18  | 6+6+6+24   | 6+12+12+12  |       |
|                       |                  | 12+18                 | 6+9+24      | 9+12+24  | 6+6+9+9    | 6+12+12+18  |       |
|                       |                  | 12+24                 | 6+12+12     | 9+18+18  | 6+6+9+12   | 9+9+9+9     |       |
|                       |                  | 18+18                 | 6+12+18     | 12+12+12 | 6+6+9+18   | 9+9+9+12    |       |
|                       |                  | 18+24                 | 6+12+24     | 12+12+18 | 6+6+9+24   | 9+9+9+18    |       |
|                       |                  | 24+24                 | 6+18+18     | 12+12+24 | 6+6+12+12  | 9+9+12+12   |       |
|                       |                  |                       | 6+18+24     | 12+18+18 | 6+6+12+18  | 9+9+12+18   |       |
|                       |                  |                       | 9+9+9       |          | 6+6+12+24  | 9+12+12+12  |       |
|                       |                  |                       |             |          | 6+9+9+9    | 12+12+12+12 |       |
|                       |                  |                       |             |          | 6+9+9+12   |             |       |




| Multi DC Outdoor Unit | Nominal capacity | Suggested Combination |             |             |             |                |             |               | Limit   |
|-----------------------|------------------|-----------------------|-------------|-------------|-------------|----------------|-------------|---------------|---|
|                       |                  | Two units             | Three units |             | Four units  |                | Five units  |               |   |
| CVH-48-5SH&CMZ-54-5Z  | 14kW             | 9+24                  | 6+6+24      | 9+12+18     | 6+6+6+18    | 6+9+18+30      | 6+6+6+6+9   | 6+6+12+12+12  | When matching 30K/36K AHU models, additional 500g/17.64oz refrigerant is needed. Don't match with two 30K AHU with this multi zone. |
|                       |                  | 9+30                  | 6+6+30      | 9+12+24     | 6+6+6+24    | 6+12+12+12     | 6+6+6+6+12  | 6+6+12+12+18  |   |
|                       |                  | 9+36                  | 6+6+36      | 9+12+30     | 6+6+6+30    | 6+12+12+18     | 6+6+6+6+18  | 6+6+12+12+24  |   |
|                       |                  | 12+24                 | 6+9+24      | 9+12+36     | 6+6+6+36    | 6+12+12+24     | 6+6+6+6+24  | 6+6+12+18+18  |   |
|                       |                  | 12+30                 | 6+9+30      | 9+18+18     | 6+6+9+18    | 6+12+12+30     | 6+6+6+6+30  | 6+9+9+9+9     |   |
|                       |                  | 12+36                 | 6+9+36      | 9+18+24     | 6+6+9+24    | 6+12+18+18     | 6+6+6+6+36  | 6+9+9+9+12    |   |
|                       |                  | 18+18                 | 6+12+18     | 9+18+30     | 6+6+9+30    | 6+12+18+24     | 6+6+6+9+9   | 6+9+9+9+18    |   |
|                       |                  | 18+24                 | 6+12+24     | 9+18+36     | 6+6+9+36    | 9+9+9+9        | 6+6+6+9+12  | 6+9+9+9+24    |   |
|                       |                  | 18+30                 | 6+12+30     | 9+24+24     | 6+6+12+12   | 9+9+9+12       | 6+6+6+9+18  | 6+9+9+9+30    |   |
|                       |                  | 18+36                 | 6+12+36     | 9+24+30     | 6+6+12+18   | 9+9+9+18       | 6+6+6+9+24  | 6+9+9+12+12   |   |
|                       |                  | 24+30                 | 6+18+18     | 12+12+12    | 6+6+12+24   | 9+9+9+24       | 6+6+6+9+30  | 6+9+9+12+18   |   |
|                       |                  | 24+36                 | 6+18+24     | 12+12+18    | 6+6+12+30   | 9+9+9+30       | 6+6+6+9+36  | 6+9+9+12+24   |   |
|                       |                  | 30+30                 | 6+18+30     | 12+12+24    | 6+6+12+36   | 9+9+9+36       | 6+6+6+12+12 | 6+9+9+18+18   |   |
|                       |                  |                       | 6+18+36     | 12+12+30    | 6+6+18+18   | 9+9+12+12      | 6+6+6+12+18 | 6+9+12+12+12  |   |
|                       |                  |                       | 6+24+24     | 12+12+36    | 6+6+18+24   | 9+9+12+18      | 6+6+6+12+24 | 6+9+12+12+18  |   |
|                       |                  |                       | 6+24+30     | 12+18+18    | 6+6+18+30   | 9+9+12+24      | 6+6+6+12+30 | 6+9+12+12+24  |   |
|                       |                  |                       | 9+9+18      | 12+18+24    | 6+6+24+24   | 9+9+12+30      | 6+6+6+18+18 | 6+12+12+12+12 |   |
|                       |                  |                       | 9+9+24      | 12+18+30    | 6+9+9+12    | 9+9+18+18      | 6+6+6+18+24 | 6+12+12+12+18 |   |
|                       |                  |                       | 9+9+30      | 12+24+24    | 6+9+9+18    | 9+9+18+24      | 6+6+9+9+9   | 9+9+9+9+9     |   |
|                       |                  |                       | 9+9+36      | 18+18+18    | 6+9+9+24    | 9+12+12+12     | 6+6+9+9+12  | 9+9+9+9+12    |   |
|                       |                  |                       | 9+12+12     | 18+18+24    | 6+9+9+30    | 9+12+12+18     | 6+6+9+9+18  | 9+9+9+9+18    |   |
|                       |                  |                       |             |             | 6+9+9+36    | 9+12+12+24     | 6+6+9+9+24  | 9+9+9+9+24    |   |
|                       |                  |                       |             |             | 6+9+12+12   | 9+12+12+30     | 6+6+9+9+30  | 9+9+9+12+12   |   |
|                       |                  |                       |             |             | 6+9+12+18   | 9+12+18+18     | 6+6+9+12+12 | 9+9+9+12+18   |   |
|                       |                  |                       |             |             | 6+9+12+24   | 9+12+18+24     | 6+6+9+12+18 | 9+9+9+12+24   |   |
|                       |                  |                       |             |             | 6+9+12+30   | 12+12+12+12    | 6+6+9+12+24 | 9+9+12+12+12  |   |
|                       |                  |                       | 6+9+12+36   | 12+12+12+18 | 6+6+9+12+30 | 9+9+12+12+18   |             |               |   |
|                       |                  |                       | 6+9+18+18   | 12+12+12+24 | 6+6+9+18+18 | 9+12+12+12+12  |             |               |   |
|                       |                  |                       | 6+9+18+24   | 12+12+18+18 | 6+6+9+18+24 | 12+12+12+12+12 |             |               |   |

| Multi DC Outdo or Unit | Nominal capacity | Suggested Combination |             |          |            |            |             |               |              |                | Limit  |
|------------------------|------------------|-----------------------|-------------|----------|------------|------------|-------------|---------------|--------------|----------------|--|
|                        |                  | Two units             | Three units |          | Four units |            |             | Five units    |              |                |  |
| CVH-60-5SH& CVH-60-5SH | 16kW             | 9+30                  | 6+6+24      | 9+18+24  | 6+6+6+18   | 6+9+12+24  | 9+9+12+30   | 6+6+6+6+12    | 6+6+9+12+36  | 6+9+12+12+24   | When matching 30K/36K AHU models, additional 500g/17.6 4oz refrigerant is needed. Don't match with 30K+30K and 30K+36K AHU with this multi zone. |
|                        |                  | 9+36                  | 6+6+30      | 9+18+30  | 6+6+6+24   | 6+9+12+30  | 9+9+12+36   | 6+6+6+6+18    | 6+6+9+18+18  | 6+9+12+12+30   |  |
|                        |                  | 12+24                 | 6+6+36      | 9+18+36  | 6+6+6+30   | 6+9+12+36  | 9+9+18+18   | 6+6+6+6+24    | 6+6+9+18+24  | 6+12+12+12+12  |  |
|                        |                  | 12+30                 | 6+9+24      | 9+24+24  | 6+6+6+36   | 6+9+18+18  | 9+9+18+24   | 6+6+6+6+30    | 6+6+9+18+30  | 6+12+12+12+18  |  |
|                        |                  | 12+36                 | 6+9+30      | 9+24+30  | 6+6+9+18   | 6+9+18+24  | 9+9+18+30   | 6+6+6+6+36    | 6+6+12+12+12 | 6+12+12+12+24  |  |
|                        |                  | 18+18                 | 6+9+36      | 9+24+36  | 6+6+9+24   | 6+9+18+30  | 9+9+18+36   | 6+6+6+6+9+9   | 6+6+12+12+18 | 6+12+12+12+30  |  |
|                        |                  | 18+24                 | 6+12+18     | 12+12+12 | 6+6+9+30   | 6+9+18+36  | 9+12+12+12  | 6+6+6+6+9+12  | 6+6+12+12+24 | 9+9+9+9+9      |  |
|                        |                  | 18+30                 | 6+12+24     | 12+12+18 | 6+6+9+36   | 6+12+12+12 | 9+12+12+18  | 6+6+6+6+9+18  | 6+6+12+12+30 | 9+9+9+9+12     |  |
|                        |                  | 18+36                 | 6+12+30     | 12+12+24 | 6+6+12+12  | 6+12+12+18 | 9+12+12+24  | 6+6+6+6+9+24  | 6+6+12+12+36 | 9+9+9+9+18     |  |
|                        |                  | 24+30                 | 6+12+36     | 12+12+30 | 6+6+12+18  | 6+12+12+24 | 9+12+12+30  | 6+6+6+6+9+30  | 6+6+12+18+18 | 9+9+9+9+24     |  |
|                        |                  | 24+36                 | 6+18+18     | 12+12+36 | 6+6+12+24  | 6+12+12+30 | 9+12+12+36  | 6+6+6+6+9+36  | 6+6+12+18+24 | 9+9+9+9+30     |  |
|                        |                  | 30+30                 | 6+18+24     | 12+18+18 | 6+6+12+30  | 6+12+12+36 | 9+12+18+18  | 6+6+6+6+12+12 | 6+6+12+18+30 | 9+9+9+9+36     |  |
|                        |                  | 30+36                 | 6+18+30     | 12+18+24 | 6+6+12+36  | 6+12+18+18 | 9+12+18+24  | 6+6+6+6+12+18 | 6+9+9+9+9    | 9+9+9+12+12    |  |
|                        |                  |                       | 6+18+36     | 12+18+30 | 6+6+18+18  | 6+12+18+24 | 9+12+18+30  | 6+6+6+6+12+24 | 6+9+9+9+12   | 9+9+9+12+18    |  |
|                        |                  |                       | 6+24+24     | 12+18+36 | 6+6+18+24  | 6+12+18+30 | 12+12+12+12 | 6+6+6+6+12+30 | 6+9+9+9+18   | 9+9+9+12+24    |  |
|                        |                  |                       | 6+24+30     | 12+24+24 | 6+6+18+30  | 6+12+18+36 | 12+12+12+18 | 6+6+6+6+12+36 | 6+9+9+9+24   | 9+9+9+12+30    |  |
|                        |                  |                       | 6+24+36     | 12+24+30 | 6+6+18+36  | 9+9+9+9    | 12+12+12+24 | 6+6+6+6+18+18 | 6+9+9+9+30   | 9+9+12+12+12   |  |
|                        |                  |                       | 9+9+18      | 12+24+36 | 6+6+24+24  | 9+9+9+12   | 12+12+12+30 | 6+6+6+6+18+24 | 6+9+9+9+36   | 9+9+12+12+18   |  |
|                        |                  |                       | 9+9+24      | 18+18+18 | 6+9+9+12   | 9+9+9+18   | 12+12+12+36 | 6+6+9+9+9     | 6+9+9+12+12  | 9+9+12+12+24   |  |
|                        |                  |                       | 9+9+30      | 18+18+24 | 6+9+9+18   | 9+9+9+24   | 12+12+18+18 | 6+6+9+9+12    | 6+9+9+12+18  | 9+9+12+12+30   |  |
|                        |                  |                       | 9+9+36      | 18+18+30 | 6+9+9+24   | 9+9+9+30   | 12+12+18+24 | 6+6+9+9+18    | 6+9+9+12+24  | 9+12+12+12+12  |  |
|                        |                  |                       | 9+12+18     | 18+18+36 | 6+9+9+30   | 9+9+9+36   | 12+12+18+30 | 6+6+9+9+24    | 6+9+9+12+30  | 9+12+12+12+18  |  |
|                        |                  |                       | 9+12+24     | 18+24+24 | 6+9+9+36   | 9+9+12+12  | 12+18+18+18 | 6+6+9+9+30    | 6+9+9+12+36  | 9+12+12+12+24  |  |
|                        |                  |                       | 9+12+30     | 18+24+30 | 6+9+12+12  | 9+9+12+18  | 12+18+18+24 | 6+6+9+9+36    | 6+9+9+18+18  | 12+12+12+12+12 |  |
|                        |                  |                       | 9+12+36     | 24+24+24 | 6+9+12+18  | 9+9+12+24  | 18+18+18+18 | 6+6+9+12+12   | 6+9+9+18+24  | 12+12+12+12+18 |  |
|                        |                  |                       | 9+18+18     |          |            |            |             | 6+6+9+12+18   | 6+9+9+18+30  | 12+12+12+12+24 |  |
|                        |                  |                       |             |          |            |            |             | 6+6+9+12+24   | 6+9+12+12+12 | 12+12+12+18+18 |  |
|                        |                  |                       |             |          |            |            |             | 6+6+9+12+30   | 6+9+12+12+18 |                |  |

## 2. Dimension Of Outdoor Unit

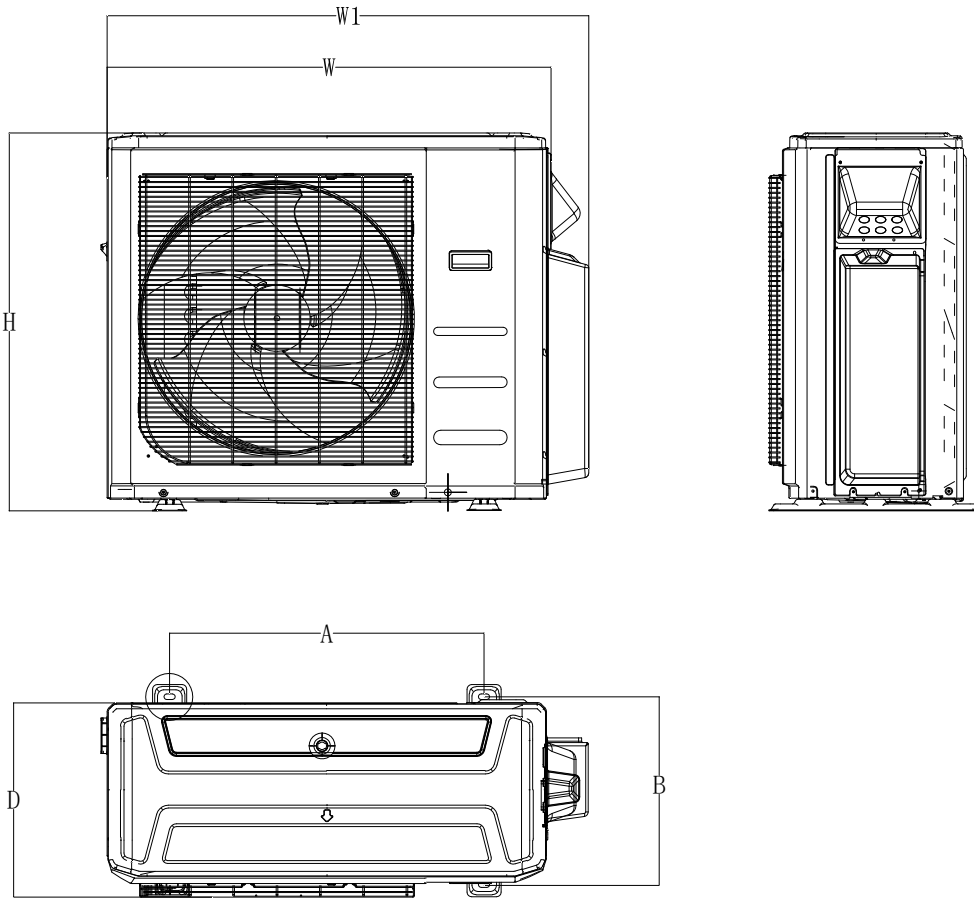


| Model                                 | Unit | W     | D     | H     | W1    | A     | B     |
|---------------------------------------|------|-------|-------|-------|-------|-------|-------|
| CMZ-18-2Z                             | mm   | 890   | 342   | 673   | 990   | 663   | 354   |
|                                       | inch | 35.04 | 13.46 | 26.50 | 38.98 | 26.10 | 13.94 |
| CVH-18-2SH<br>CMZ-27-3Z<br>CVH-27-3SH | mm   | 946   | 410   | 810   | 1034  | 673   | 403   |
|                                       | inch | 37.2  | 16.5  | 31.9  | 40.6  | 26.5  | 15.9  |
| CMZ-48-4Z                             | mm   | 946   | 410   | 810   | 1034  | 673   | 403   |
|                                       | inch | 37.2  | 16.5  | 31.9  | 40.6  | 26.5  | 15.9  |

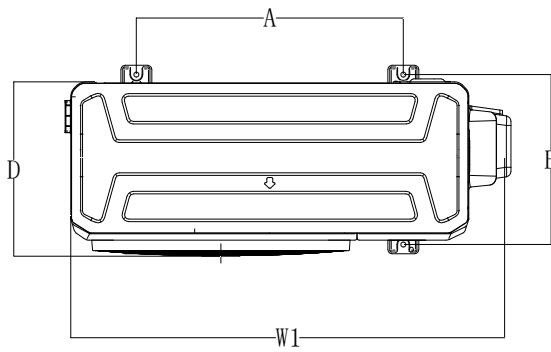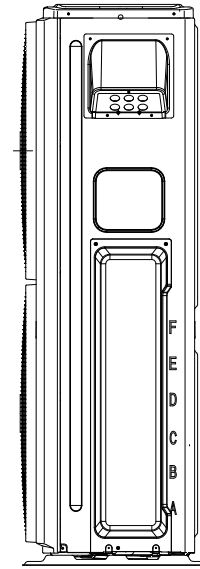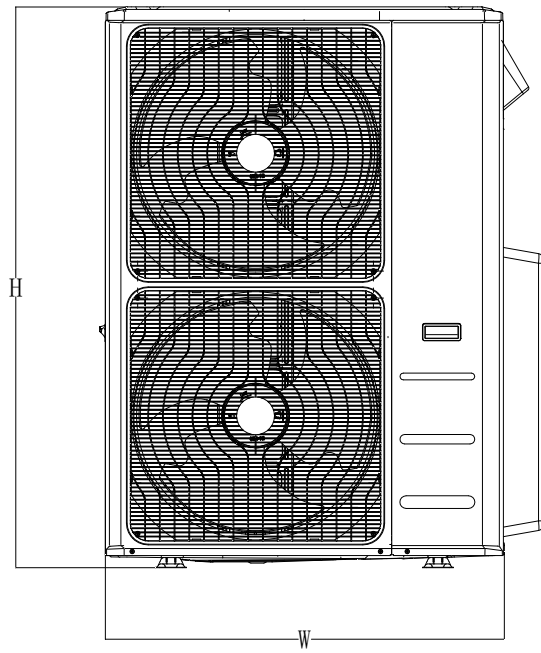


| Model      | Unit | W    | D    | H    | W1   | A    | B    |
|------------|------|------|------|------|------|------|------|
| CVH-48-5SH | mm   | 952  | 415  | 1333 | 1060 | 634  | 404  |
| CVH-36-4SH | inch | 37.5 | 16.3 | 52.5 | 41.7 | 25.0 | 15.9 |
| CMZ-54-5Z  |      |      |      |      |      |      |      |
| CMZ-60-5Z  |      |      |      |      |      |      |      |
| CVH-60-5SH |      |      |      |      |      |      |      |

### 3. Refrigerant Cycle Diagram


#### 3.1 Refrigeration circuit drawing of CMZ-18-2Z

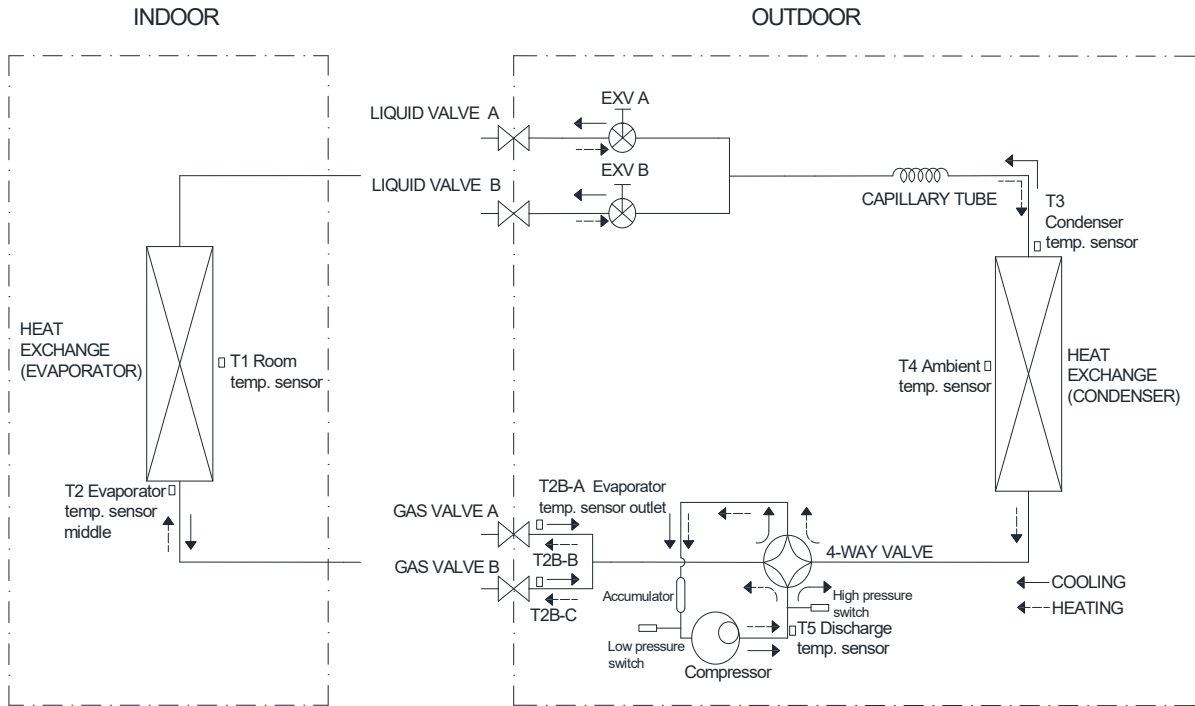


#### 3.2 Refrigeration circuit drawing of CVH-18-2SH

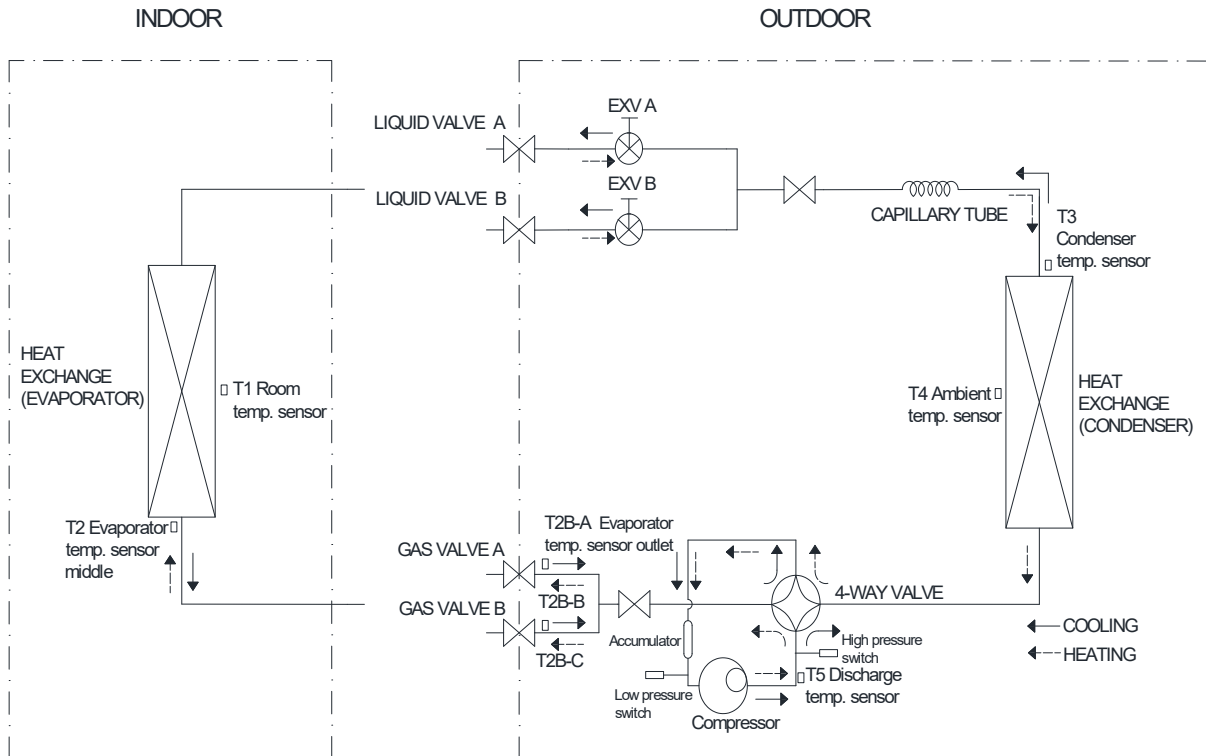


**3.3 Refrigeration circuit drawing of CMZ-27-3Z, CVH-27-3SH**

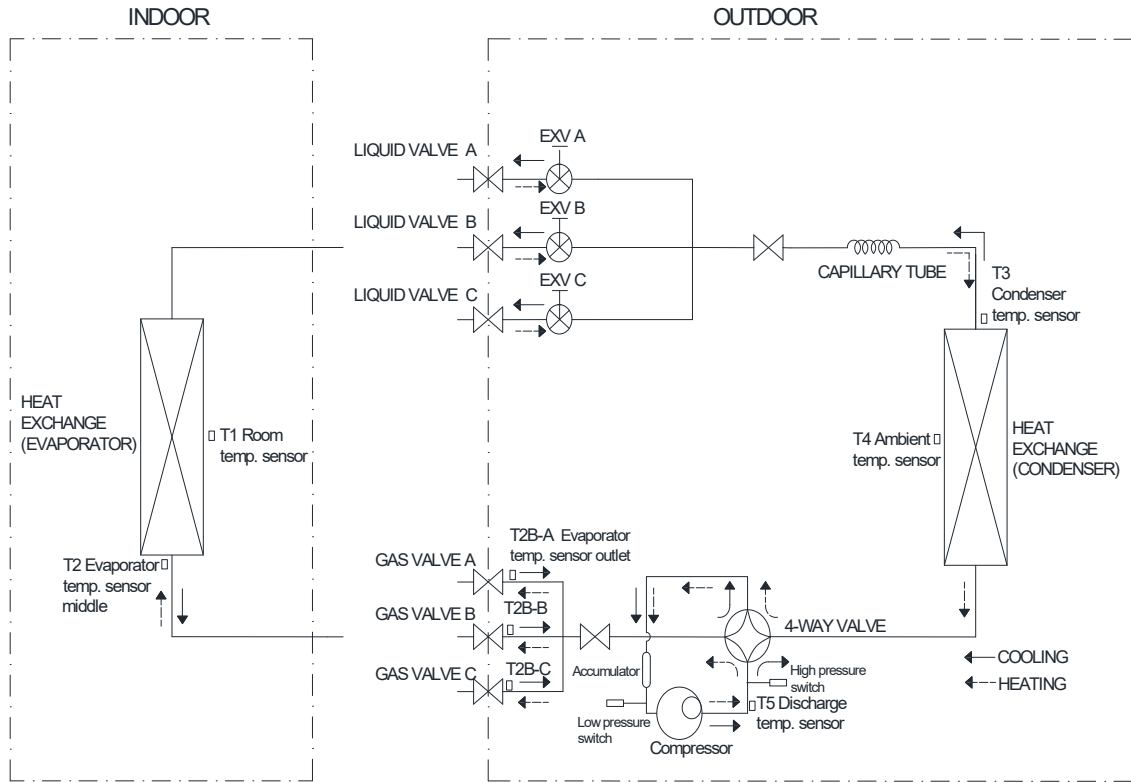


**3.4 Refrigeration circuit drawing of CMZ-48-4Z**

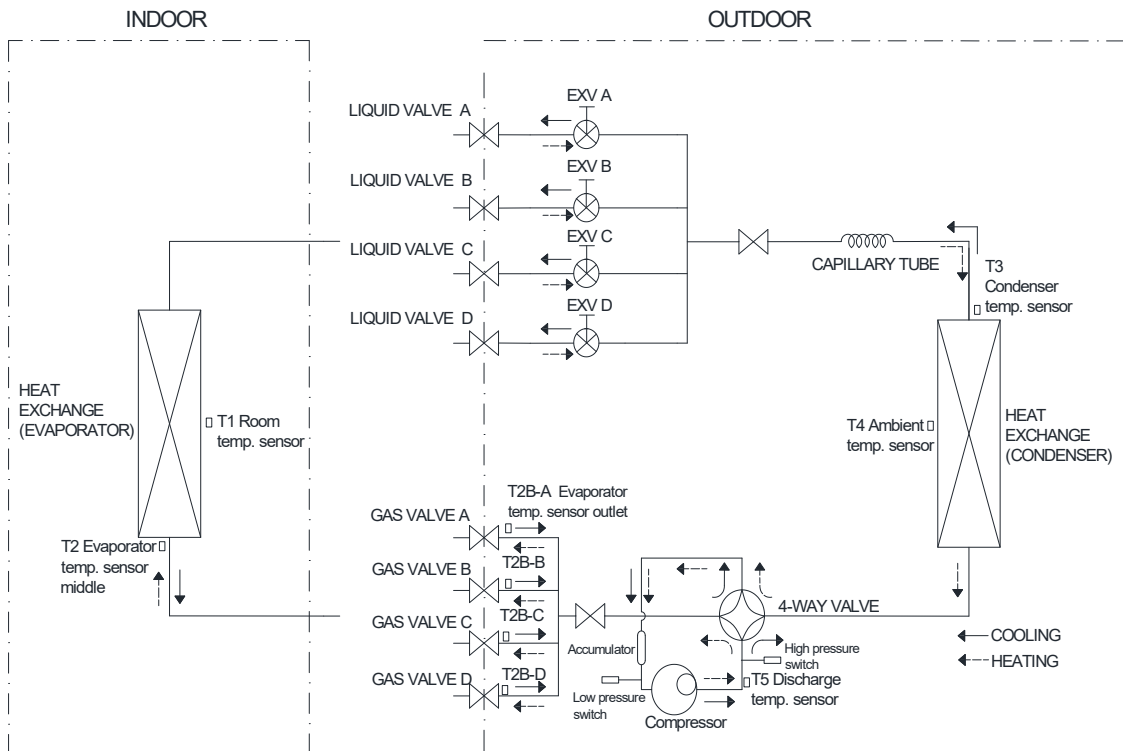

### 3.5 Refrigeration circuit drawing of CVH-36-4SH

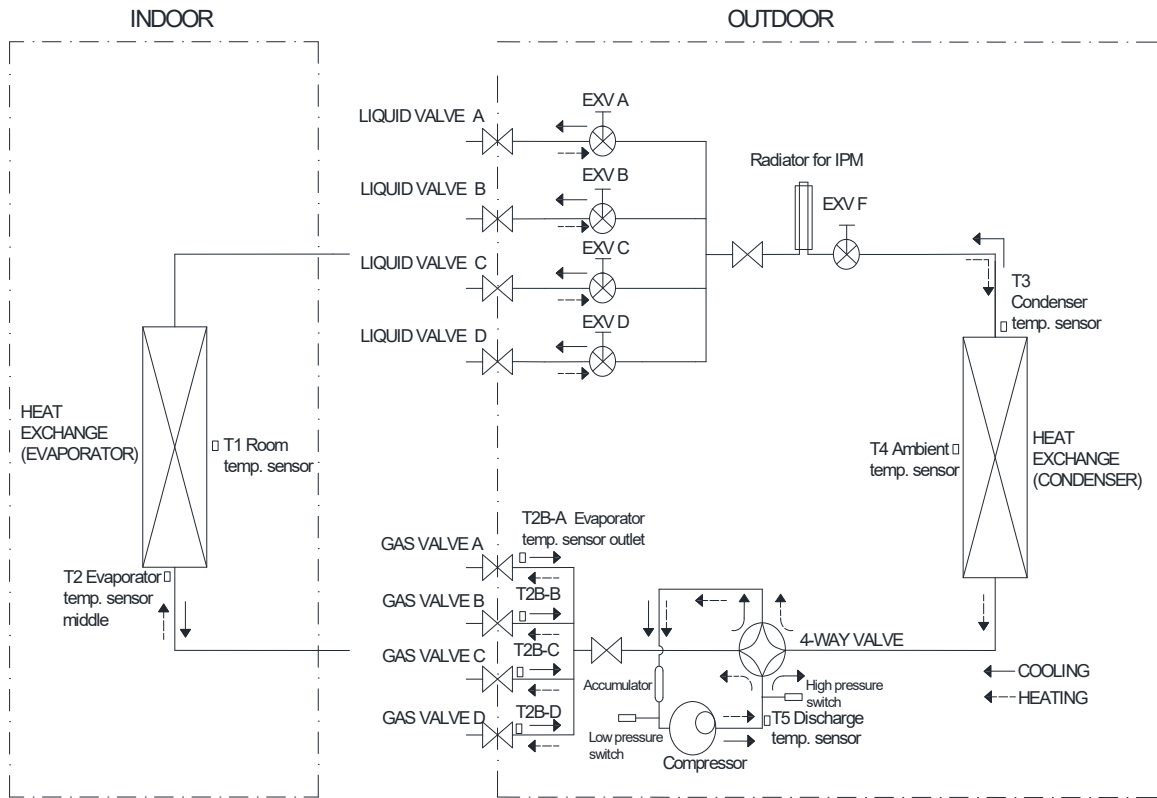


### 3.6 Refrigeration circuit drawing of CVH-48-5SH

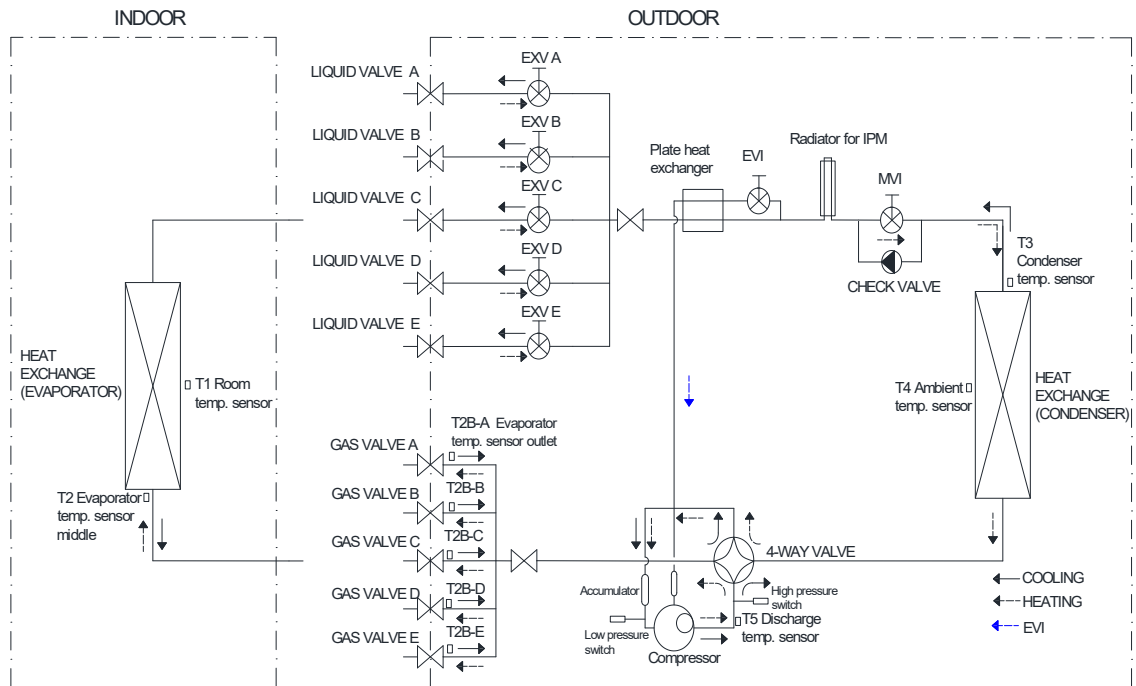




### 3.7 Refrigeration circuit drawing of CMZ-54-5Z& CMZ-60-5Z

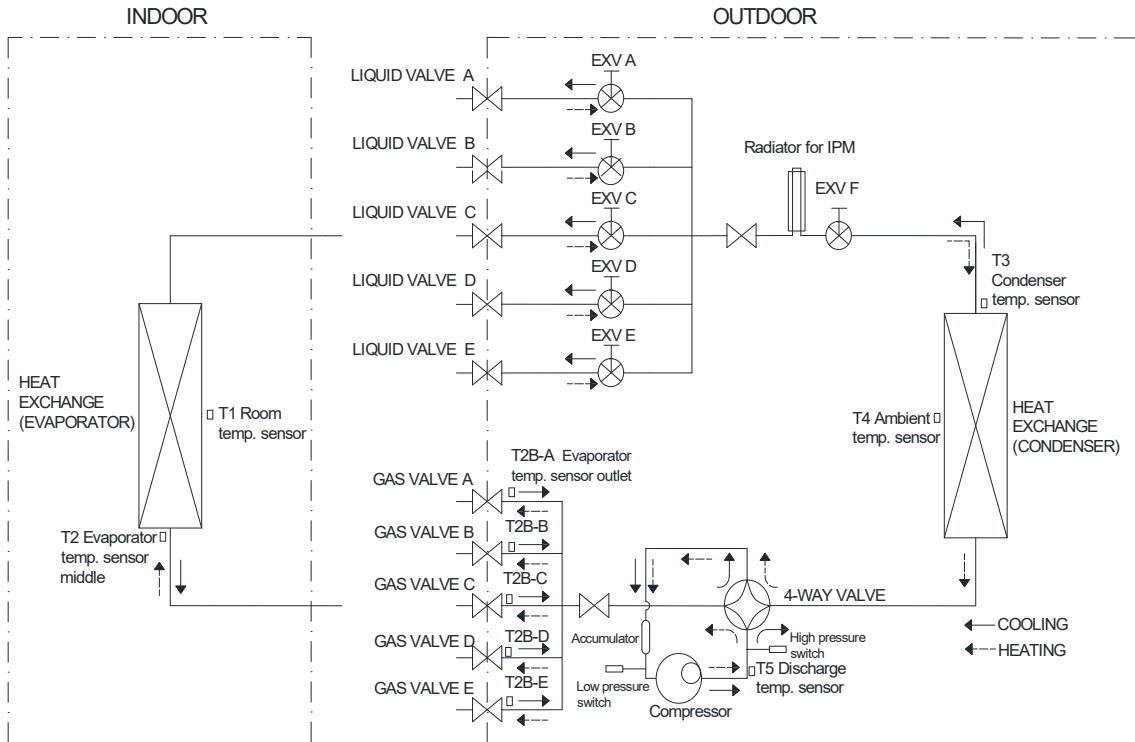

### 3.8 Refrigeration circuit drawing of CVH-60-5SH

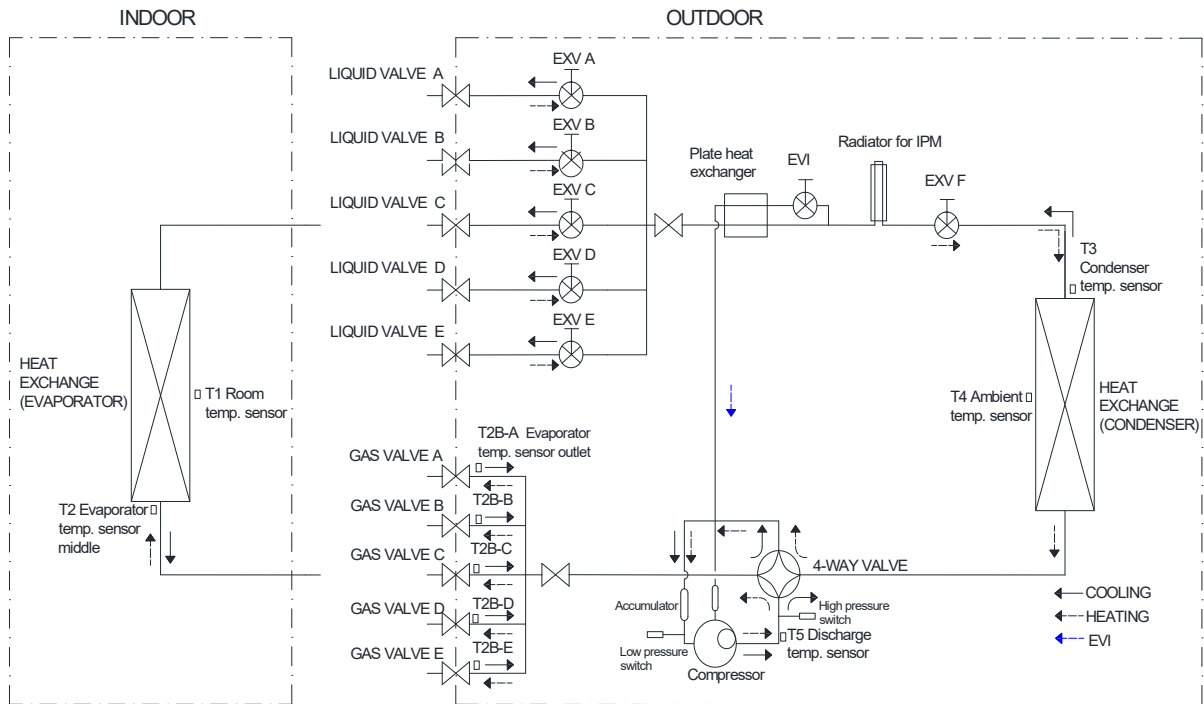

## 4. Installation Details

### 4.1 Wrench torque sheet for installation

| Outside diameter |      | Torque          | Additional tightening torque |
|------------------|------|-----------------|------------------------------|
| mm               | inch | N.cm            | N.cm                         |
| Φ6.35            | 1/4  | 1500(153kgf.cm) | 1600(163kgf.cm)              |
| Φ9.52            | 3/8  | 2500(255kgf.cm) | 2600(265kgf.cm)              |
| Φ12.7            | 1/2  | 3500(357kgf.cm) | 3600(367kgf.cm)              |

### 4.2 Connecting the cables

The power cord connection should be selected according to the following specifications sheet.

| Unit                               | AWG |
|------------------------------------|-----|
| 1 drive 2 type (18K outdoor unit)  | 14  |
| 1 drive 3 type (27K outdoor unit). | 14  |
| 1 drive 4 type (36K outdoor unit)  | 12  |
| 1 drive 5 type (48K outdoor unit)  | 10  |

For indoor unit and outdoor unit connection line, 16AWG is ok for all.

### 4.3 Pipe length and the elevation

#### Maximum piping length and height difference

|  | 1 drive 2      | 1 drive 3      | 1 drive 4      | 1 drive 5      |
|--|----------------|----------------|----------------|----------------|
| Max. length for all rooms (m)                | 40<br>(131ft)  | 60<br>(197ft)  | 80<br>(262ft)  | 80<br>(262ft)  |
| Max. length for one IU (m)                   | 25 (82ft)      | 30 (98ft)      | 35<br>(115ft)  | 35<br>(115ft)  |
| Max. height difference between IU and OU (m) | 15<br>(49.2ft) | 15<br>(49.2ft) | 15<br>(49.2ft) | 15<br>(49.2ft) |
| Max. height difference between IUs (m)       | 10 (33ft)      | 10 (33ft)      | 10 (33ft)      | 10 (33ft)      |

#### Additional refrigerant charge

| Connective Pipe Length(m)                                     | Additional refrigerant   |  |
|---|--|--|
|   | Liquid Side  | Gas Side   |
| Pre-charge pipe length (ft/m)<br>(pre-charge pipe length xN ) | Ø 6.35 (1/4")  | Ø 9.52 (3/8")  |
| More than (pre-charge pipe lengthxN) ft/m                     | (Total pipe length - pre-charge pipe lengthxN) x15g/m<br>(Total pipe length - pre-charge pipe lengthxN) x0.16oz/ft | (Total pipe length - pre-charge pipe lengthxN) x30g/m<br>(Total pipe length - pre-charge pipe lengthxN) x0.32oz/ft |

Note:The standard pipe length is 7.5m/25ft

Caution:

- Refrigerant pipe diameter is different according to indoor unit to be connected. When using the extension pipe, refer to the tables below.
- When refrigerant pipe diameter is different from that of the outdoor unit connector (18K indoor unit) an additional adapter is required.

| Indoor unit                           |                         | Extension pipe diameter (mm/inch) |                              |            |
|---------------------------------------|-------------------------|-----------------------------------|------------------------------|------------|
| Model                                 | Pipe diameter (mm/inch) |                                   |                              |            |
| 9K                                    | Liquid                  | 6.35(1/4)                         | Liquid                       | 6.35(1/4)  |
|                                       | Gas                     | 9.52(3/8)                         | Gas                          | 9.52(3/8)  |
| 12K 18K                               | Liquid                  | 6.35(1/4)                         | Liquid                       | 6.35(1/4)  |
|                                       | Gas                     | 12.7(1/2)                         | Gas                          | 12.7(1/2)  |
| 24K                                   | Liquid                  | 9.52 (3/8)                        | Liquid                       | 9.52 (3/8) |
|                                       | Gas                     | 15.9(5/8)                         | Gas                          | 15.9(5/8)  |
| Outdoor unit union diameter (mm/inch) |                         |                                   |                              |            |
| 1 drive 2                             | Liquid                  |                                   | 6.35(1/4) *2                 |            |
|                                       | Gas                     |                                   | 9.52(3/8) *2                 |            |
| 1 drive 3                             | Liquid                  |                                   | 6.35(1/4) *3                 |            |
|                                       | Gas                     |                                   | 9.52(3/8) *3                 |            |
| 1 drive 3(Hyper heat)                 | Liquid                  |                                   | 6.35(1/4) *3                 |            |
|                                       | Gas                     |                                   | 9.52(3/8) *2<br>12.7(1/2) *1 |            |
| 1 drive 4                             | Liquid                  |                                   | 6.35(1/4) *4                 |            |
|                                       | Gas                     |                                   | 9.52(3/8) *3<br>12.7(1/2) *1 |            |
| 1 drive 4(Hyper heat)                 | Liquid                  |                                   | 6.35(1/4) *3                 |            |
|                                       | Gas                     |                                   | 9.52(3/8) *2<br>12.7(1/2) *2 |            |
| 1 drive 5                             | Liquid                  |                                   | 6.35(1/4) *5                 |            |
|                                       | Gas                     |                                   | 9.52(3/8) *3<br>12.7(1/2) *2 |            |
| Outdoor unit                          | Adaptor                 | Adaptor quantity                  |                              |            |
| 1 drive 2                             | 3/8"-->1/2"             | 2                                 |                              |            |
| 1 drive 3                             | 3/8"-->1/2"             | 3                                 |                              |            |
| 1 drive 3(Hyper heat)                 | 3/8"-->1/2"             | 2                                 |                              |            |
|                                       | 1/2"-->3/8"             | 1                                 |                              |            |
|                                       | 1/4"-->3/8"             | 1                                 |                              |            |
| 1 drive 4                             | 1/2"-->5/8"             | 1                                 |                              |            |
|                                       | 3/8"-->1/2"             | 3                                 |                              |            |
|                                       | 1/2"-->3/8"             | 1                                 |                              |            |
| 1 drive 4(Hyper heat)                 | 1/4"-->3/8"             | 1                                 |                              |            |
|                                       | 1/2"-->5/8"             | 1                                 |                              |            |
|                                       | 3/8"-->1/2"             | 2                                 |                              |            |
| 1 drive 5                             | 1/2"-->3/8"             | 2                                 |                              |            |
|                                       | 1/4"-->3/8"             | 2                                 |                              |            |
|                                       | 1/2"-->5/8"             | 2                                 |                              |            |
|                                       | 3/8"-->1/2"             | 3                                 |                              |            |

## 4.4 First-Time Installation

Air and moisture in the refrigerant system cause the following problems:


- Increases in system pressure
- Increases in operating current
- Decreases in cooling and heating efficiency
- Blocks in capillary piping caused by moisture in the refrigerant circuit freezing
- Corrosion of parts in the refrigerant system caused by water

The indoor units and the pipes between indoor and outdoor units must be tested for leakages and evacuated to remove gas and moisture from the system.

Gas leak check with soap water:

Apply soap water or a liquid neutral detergent on the connections with a soft brush to check for leakage in the pipe connecting points. If bubbles emerge, the pipes are leaking.

### 1. Air Purging Using the Vacuum Pump

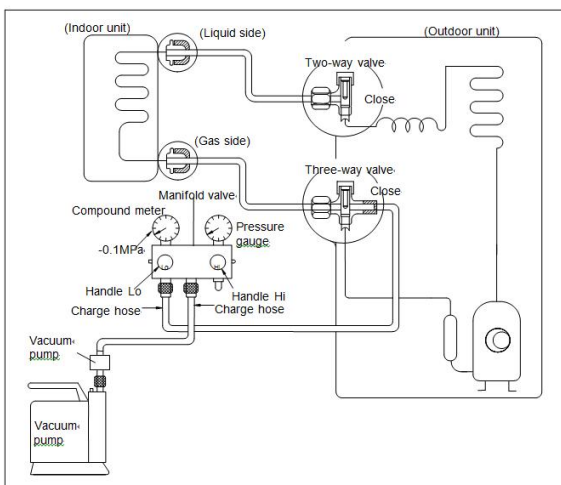


1. Completely tighten the flare nuts on the indoor and outdoor units. Confirm that both the 2-way and 3-way valves are set to the closed position.
2. Connect the charge hose with the push pin of the Handle Lo to the 3-way valve gas service port.
3. Connect the charge hose of the Handle Hi to the vacuum pump.
4. Fully open the Handle Lo of the manifold valve.
5. Turn on the vacuum pump to begin evacuation.

6. Conduct a 30-minute evacuation. Check whether the compound meter indicates -0.1Mpa(14.5Psi). If the meter does not indicate -0.1Mpa(14.5Psi) after 30 minutes has elapsed, continue evacuation for 20 more minutes. If the pressure does not reach -0.1Mpa(14.5Psi) after 50 minutes has elapsed, check if there are any leaks.

Fully close the Handle Lo valve of the manifold valve and turn off the vacuum pump. After 5 minutes, confirm that the gauge needle is not moving.

7. Turn the flare nut on the 3-way valve 45° counterclockwise for 6-7 seconds. Once gas begins to come out, tighten the flare nut. Make sure the pressure display on the pressure indicator is higher than atmospheric pressure. Then remove the charge hose from the 3-way valve.
8. Fully open the 2-way and 3-way valves and securely tighten the cap on the 3-way valve.

### 2. Adding refrigerant if the pipe length exceeds chargeless pipe length

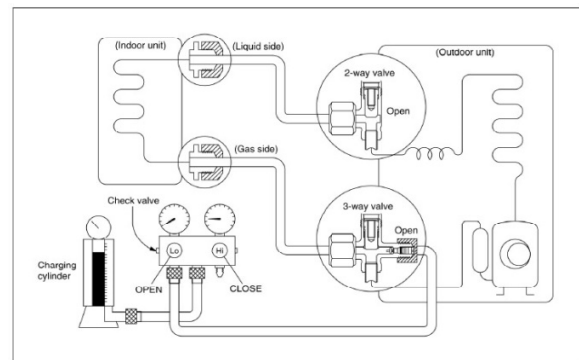

#### Procedure:

- 1) Connect the charge hose to the charging cylinder and open the 2-way and 3-way valves. With the charge hose you disconnected from the vacuum pump, connect it to the valve at the bottom of the cylinder.

If the refrigerant is R410A, place the cylinder bottom-up to ensure liquid charging is possible.

- 2). Purge the air from the charge hose.

Open the valve at the bottom of the cylinder and press the check valve on the charge set (be careful of the liquid refrigerant).

3) Place the charging cylinder onto the electronic scale and record the weight.

4) Turn on the air conditioner in cooling mode.

5) Open the valves (Low side) on the charge set. Charge the system with liquid refrigerant.

6).When the electronic scale displays the proper weight (refer to the table), disconnect the charge hose from the 3-way valve's service port immediately and turn off the air conditioner before disconnecting the hose.

7). Mount the valve stem caps and the service port. Use a torque wrench to tighten the service port cap to a torque of 18N.m(13.27 ft·lbs).

Be sure to check for gas leaks.

4) Turn on the air conditioner in cooling mode.

5) Open the valves (Low side) on the charge set and charge the system with liquid refrigerant.

6).When the electronic scale displays the proper weight (refer to the gauge and the pressure of the low side), disconnect the charge hose from the 3-way valve's service port immediately and turn off the air conditioner before disconnecting the hose.


7). Mount the valve stem caps and the service port. Use torque wrench to tighten the service port cap to a torque of 18N.m(13.27 ft·lbs).

Be sure to check for gas leaks.

## 4.6 Procedure when servicing the indoor unit refrigeration circuit.

### 1. Collecting the refrigerant into the outdoor unit

## 4.5 Adding Refrigerant after Long-Term System Operation

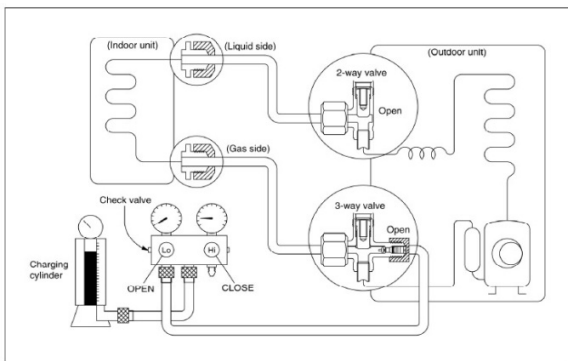


### Procedure

1) Connect the charge hose to the 3-way service port and open the 2-way and 3-way valve. Connect the charge hose to the valve at the bottom of the cylinder. If the refrigerant is R410A, place the cylinder bottom-up to ensure liquid charge.

2). Purge the air from the charge hose. Open the valve at the bottom of the cylinder and press the check valve on the charge set to purge the air (be careful of the liquid refrigerant).

3) Place the charging cylinder onto the electronic scale and record the weight.

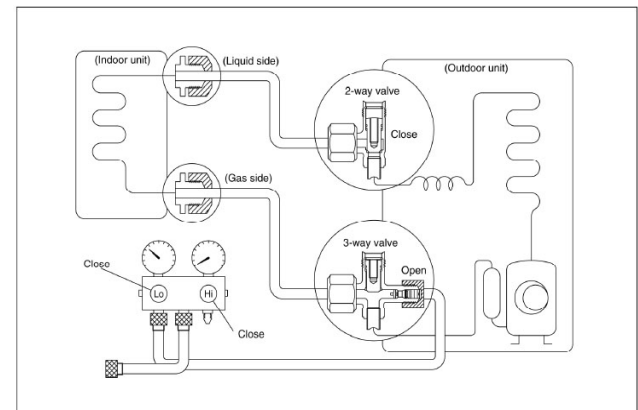

### Procedure

1). Confirm that both the 2-way and 3-way valves are set to the opened position

Remove the valve stem caps and confirm that the valve stems are in the opened position.

Be sure to use a hexagonal wrench to operate the valve stems.

2). Connect the charge hose with the push pin of handle lo to the 3-way valves gas service port.

3). Air purging of the charge hose.

Open the handle Lo valve of the manifold valve slightly to purge air from the charge hose for 5 seconds and then close it quickly.

4). Set the 2-way valve to the close position.

5). Operate the air conditioner at the cooling cycle and stop it when the gauge indicates 0.1MPa.

6). Set the 3-way valve to the closed position immediately


Do this quickly so that the gauge ends up indicating 0.3 to 0.5Mpa.

Disconnect the charge set, and tighten the 2-way and 3-way valve's stem nuts.

Use a torque wrench to tighten the 3-way valves service port cap to a torque of 18N.m.

Be sure to check for gas leakage.

## 2. Air purging with vacuum pump

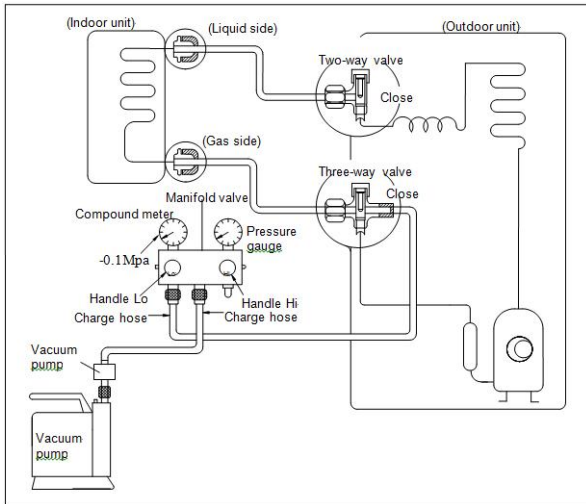

- 1) Completely tighten the flare nuts of the indoor and outdoor units, confirm that both the 2-way and 3-way valves are set to the closed position.
- 2) Connect the charge hose with the push pin of handle lo to the 3-way valves gas service port.
- 3) Connect the charge hose of handle hi connection to the vacuum pump.
- 4) Fully open the handle Lo of the manifold valve.
- 5) Operate the vacuum pump to evacuate.
- 6) Make evacuation for 30 minutes and check whether the compound meter indicates -0.1Mpa. If the meter does not indicate -0.1Mpa after pumping 30 minutes, it should be pumped 20 minutes more. If the pressure can't achieve -0.1Mpa after pumping 50 minutes, please check if there are some leakage points.

Fully close the handle Lo valve of the manifold valve and stop the operation of the vacuum pump. Confirm that the gauge needle does not move (approximately 5 minutes after turning off the vacuum pump).


- 7) Turn the flare nut of the 3-way valves about 45° counterclockwise for 6 or 7seconds after the

gas coming out, then tighten the flare nut again. Make sure the pressure display in the pressure indicator is a little higher than the atmosphere pressure. Then remove the charge hose from the 3 way valve.

- 8) Fully open the 2 way valve and 3 way valve and securely tighten the cap of the 3 way valve.

## 4.7 Evacuation after servicing the outdoor unit refrigeration circuit

### 1. Evacuation of the complete refrigeration circuit, Indoor and outdoor unit.

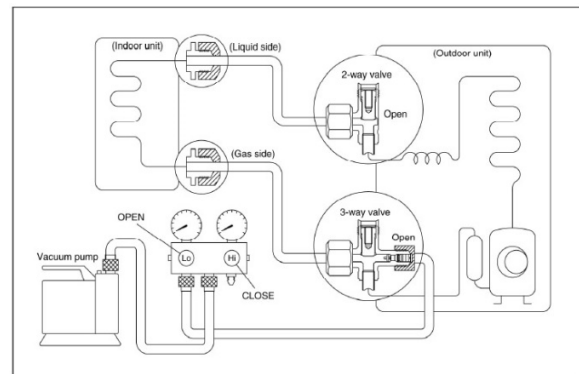


#### Procedure:

- 1). Confirm that both the 2-way and 3-way valves are set to the opened position.
- 2). Connect the vacuum pump to 3-way valve's service port.
- 3). Evacuation for approximately one hour. Confirm that the compound meter indicates -0.1Mpa (500 Microns / 29.9 in,hg).
- 4). Close the valve (Low side) on the charge set, turn off the vacuum pump, and confirm that the gauge needle does not move (approximately 5 minutes after turning off the vacuum pump).
- 5). Disconnect the charge hose from the vacuum pump.

## 2. Refrigerant charging

and recycle refrigerant.

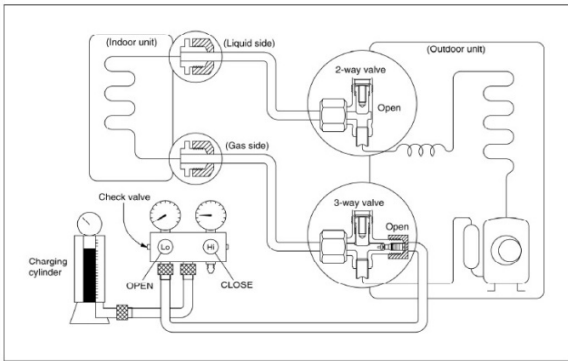


### Procedure:

- 1). Connect the charge hose to the charging cylinder, open the 2-way valve and the 3-way valve. Connect the charge hose which you disconnected from the vacuum pump to the valve at the bottom of the cylinder. If the refrigerant is R410A, make the cylinder bottom up to ensure liquid charge.
- 2). Purge the air from the charge hose  
Open the valve at the bottom of the cylinder and press the check valve on the charge set to purge the air (be careful of the liquid refrigerant).
- 3) Put the charging cylinder onto the electronic scale and record the weight.
- 4). Open the valves (Low side) on the charge set and charge the system with liquid refrigerant  
If the system cannot be charge with the specified amount of refrigerant, or can be charged with a little at a time (approximately 150g each time) , operating the air conditioner in the cooling cycle; however, one time is not sufficient, wait approximately 1 minute and then repeat the procedure.
- 5).When the electronic scale displays the proper weight, disconnect the charge hose from the 3-way valve's service port immediately  
If the system has been charged with liquid refrigerant while operating the air conditioner, turn off the air conditioner before disconnecting the hose.
- 6). Mounted the valve stem caps and the service port. Use torque wrench to tighten the service port cap to a torque of 18N·m (13.27 ft·lbs).  
Always leak check after servicing the refrigerant system.

**For CVH-18-2SH, CMZ-27-3Z,CVH-27-3SH, CMZ-48-4Z CVH-36-4SH, CMZ-60-5Z, CVH-48-5SH& CVH-60-5SH**

*There are one low-pressure centralized valve and one high-pressure centralized valve, it will be more time saving when vacuum and recycle refrigerant. But refer to the previous instruction when vacuum*

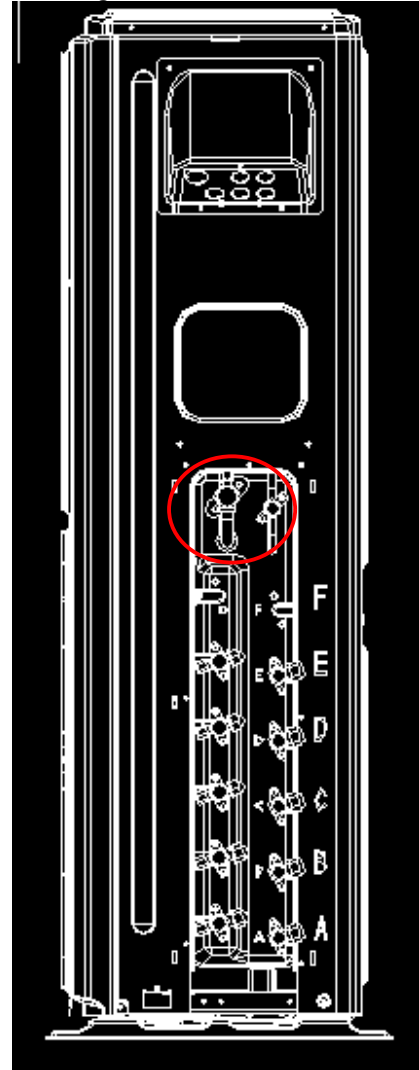

## 5. Electronic Function

### 5.1 Abbreviation

T1: Indoor ambient temperature

T2: Middle indoor heat exchanger coil temperature

T2B: Indoor heat exchanger exhaust coil temperature (located on the outdoor unit)

T3: Outdoor heat exchanger pipe temperature

T4: Outdoor ambient temperature

T5: Compressor discharge temperature

### 5.2 Electric Control Working Environment.

5.2.1 Input voltage: 230V.

5.2.2 Input power frequency: 60Hz.

5.2.3 Indoor fan standard working amp.: <1A

5.2.4 Outdoor fan standard working amp.: <1.5A.

5.2.5 Four-way valve standard amp.: <1A.

### 5.3 Main Protection

#### 5.3.1 Compressor Restart Delay

---- The compressor takes 1 minute to start up the first time. Further restarts take 3 minutes.

#### 5.3.2 Temperature Protection of Compressor Discharge.

When the discharge temperature of the compressor rises, the running frequency is limited according to the following rules:

----If  $105^{\circ}\text{C}$  ( $221^{\circ}\text{F}$ )  $\leq T5 < 110^{\circ}\text{C}$  ( $230^{\circ}\text{F}$ ), maintain the current frequency.

----If the temperature increase and  $T5 \geq 110^{\circ}\text{C}$  ( $230^{\circ}\text{F}$ ), decrease the frequency to a lower level every 2 minutes till to F1.

---If  $T5 \geq 115^{\circ}\text{C}$  ( $239^{\circ}\text{F}$ ) for 10 seconds, the compressor stops and then restart until  $T5 < 90^{\circ}\text{C}$  ( $194^{\circ}\text{F}$ ).

#### 5.3.3 Fan Speed Malfunction

---- If outdoor fan speed is lower than **100RPM** or higher than 2400RPM for 60 seconds or more, the unit stops and LED displays failure code.


#### 5.3.4 Inverter Module Protection.

---- The inverter protection module ensures that faults related to current, voltage, or temperature does not damage the inverter.

If these protections are triggered, the A/C unit stops and the LED displays the failure code.

The unit restarts 3 minutes after the protection mechanism has turned off.

#### 5.3.5 Low Voltage Protection

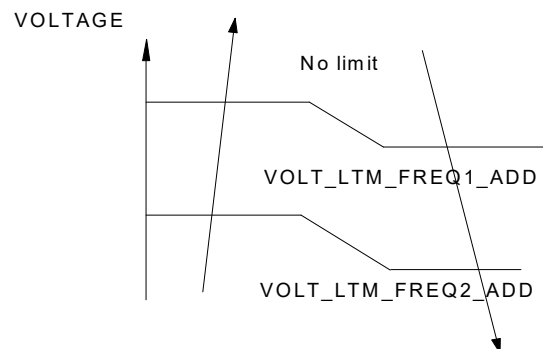


Note: If low voltage protection triggers and voltage is not restored to normal within 3 minutes, the protection remains active even after a machine restart.

#### 5.3.6 Compressor Current Limit Protection


The temperature interval for the current limit is the same as the range of the T4 frequency limit.

**Cooling mode:**

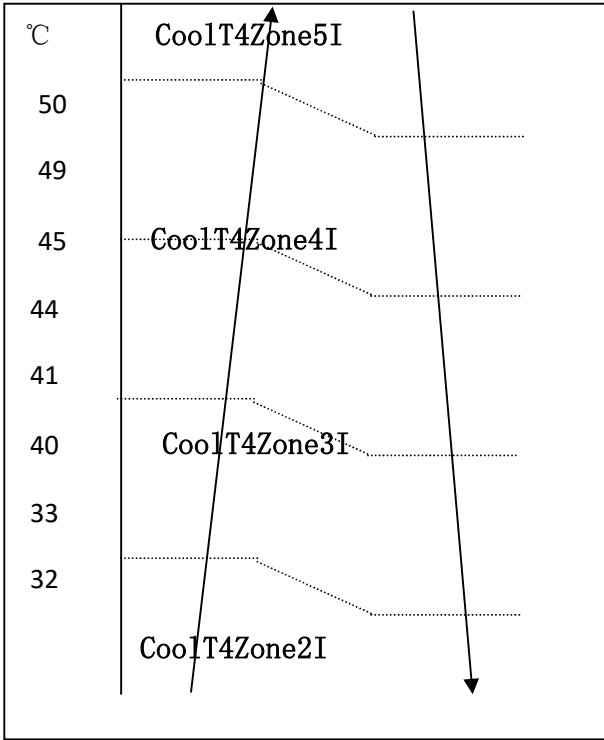

|                     |   |
|---------------------|---|
| <b>HeatReturnI</b>  | The difference between current limit and shutdown current                 |
| <b>HeatT4Zone4I</b> | Heating $T4 \geq 15^\circ\text{C}$ current limit value                    |
| <b>HeatT4Zone3I</b> | Heating $14^\circ\text{C} > T4 \geq 10^\circ\text{C}$ current limit value |
| <b>HeatT4Zone2I</b> | Heating $9^\circ\text{C} > T4 \geq 6^\circ\text{C}$ current limit value   |
| <b>HeatT4Zone1I</b> | Heating $5^\circ\text{C} > T4$ current limit value                        |
| <b>HeatStopI</b>    | Heating stop protection current value                                     |


For M4OI-36HFN1-M, M5OG-48HFN1-M, M5OG-48HFN1-M-[X], M5OA-55HFN1-M-[X]

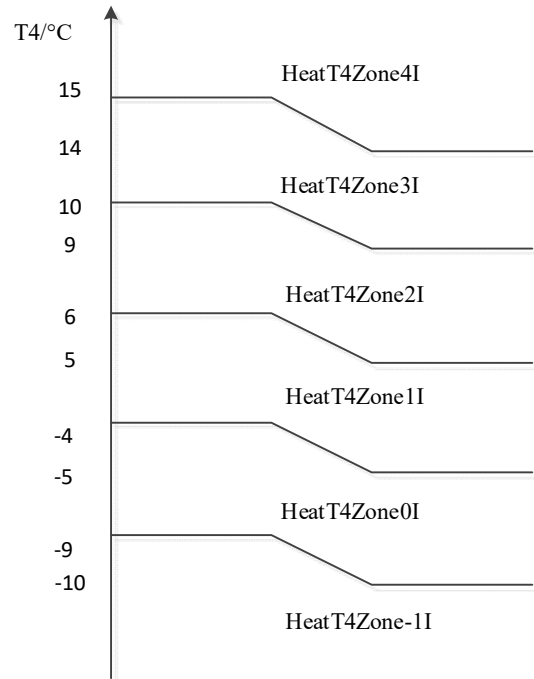

|                     |   |
|---------------------|---|
| <b>CoolReturnI</b>  | The difference between current limit and shutdown current   |
| <b>CoolT4Zone5I</b> | Cooling $T4 \geq 50^\circ\text{C}$ current limit value      |
| <b>CoolT4Zone4I</b> | Cooling $49 > T4 \geq 45^\circ\text{C}$ current limit value |
| <b>CoolT4Zone3I</b> | Cooling $44 > T4 \geq 41^\circ\text{C}$ current limit value |
| <b>CoolT4Zone2I</b> | Cooling $40 > T4 \geq 33^\circ\text{C}$ current limit value |
| <b>CoolT4Zone1I</b> | Cooling $32 > T4$ current limit value                       |
| <b>CoolStopI</b>    | Cooling stop protection current value                       |

### Heating mode:

For other models,

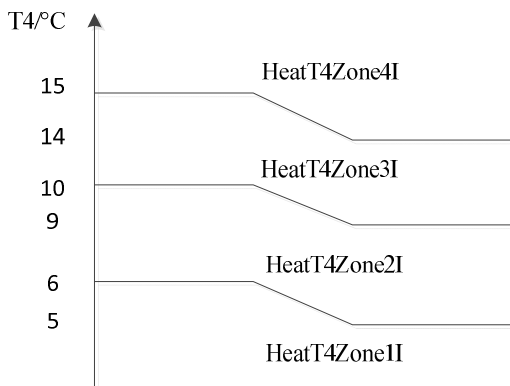

|                     |   |
|---------------------|---|
| <b>HeatReturnI</b>  | The difference between current limit and shutdown current                 |
| <b>HeatT4Zone4I</b> | Heating $T4 \geq 15^\circ\text{C}$ current limit value                    |
| <b>HeatT4Zone3I</b> | Heating $14^\circ\text{C} > T4 \geq 10^\circ\text{C}$ current limit value |
| <b>HeatT4Zone2I</b> | Heating $9^\circ\text{C} > T4 \geq 6^\circ\text{C}$ current limit value   |
| <b>HeatT4Zone1I</b> | Heating $5^\circ\text{C} > T4 \geq -4^\circ\text{C}$ current limit value  |
| <b>HeatT4Zone0I</b> | Heating $-5^\circ\text{C} > T4 \geq -9^\circ\text{C}$ current             |




|                      |   |
|----------------------|---|
|                      | limit value   |
| <b>HeatT4Zone-11</b> | Heating $-10^{\circ}\text{C} > \text{T4}$ current limit value |
| <b>HeatStopI</b>     | Heating stop protection current value                         |

### 5.3.7 Indoor / Outdoor Units Communication Protection

If the indoor units do not receive the feedback signal from the outdoor units for 2 consecutive minutes, the unit stops. The unit displays the failure code.

### 5.3.8 High Condenser Coil Temp. Protection

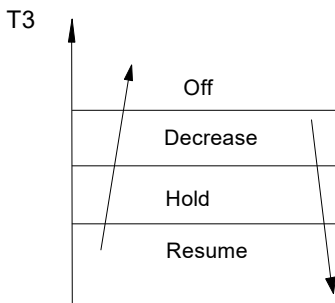

### 5.3.9 Outdoor Unit Anti-Freezing Protection

When  $\text{T2} < 4^{\circ}\text{C}$  for 250seconds or  $\text{T2} < 0^{\circ}\text{C}$ , the indoor unit capacity demand is zero and resumes normal operation when  $\text{T2} > 8^{\circ}\text{C}$  and the protection time is no less than 3 minutes.

### 5.3.10 Oil Return

#### Rules for Operation

1. If the compressor frequency continues to be lower than the frequency set for setting time, the unit raises the frequency to the frequency set for setting time and then resumes with the former frequency.

2. The EXV continues at 300p while indoor units maintain their operation.

If the outdoor ambient temperature is higher than the set frequency during oil return, the unit stops the oil return process.

### 5.3.11 Low Outdoor Ambient Temperature Protection

When the compressor is off and T4 is lower than  $-35^{\circ}\text{C}$  for 10 seconds, the unit stops and displays "LP" or "PCOL"

When the compressor is on and T4 remains lower than  $-40^{\circ}\text{C}$  for 10 seconds, the unit stops and displays "LP" or "PCOL"

When T4 is no lower than  $-32^{\circ}\text{C}$  for 10 seconds, the unit exits protection.

## 5.4 Control and Functions

### 5.4.1 Capacity Request Calculation


For Old Console series, Old Duct/Cassette/Floor Ceiling, Old Vertu/Luna Series:

Total capacity Request =  $\sum(\text{Norm code} \times \text{HP}) / 10 \times \text{modify rate} + \text{correction}$

For All new models(New Wall mounted(Hi-Wall) series, New Duct/Cassette/Console/Floor Ceiling):

Total capacity Request =  $\sum(\text{Norm code} \times \text{HP}) / 40 \times \text{modify rate} + \text{correction}$

#### Cooling Mode:

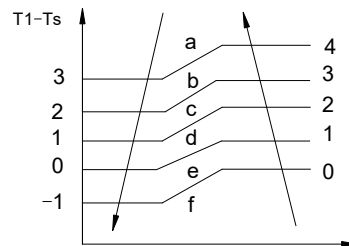

|               |   |   |     |   |     |   |
|---------------|---|---|-----|---|-----|---|
| Capacity area | a | b | c   | d | e   | f |
| Norm code (N) | 3 | 2 | 1.5 | 1 | 0.5 | 0 |


|       |     |     |     |     |
|-------|-----|-----|-----|-----|
| Model | 9K  | 12K | 18K | 24K |
| HP    | 1.0 | 1.2 | 1.5 | 2.5 |

**Note: The final result is an integer.**

Use the following table and final capacity request to confirm the operating frequency.

|                             |   |         |         |     |          |          |
|-----------------------------|---|---------|---------|-----|----------|----------|
| Frequency (Hz)              | 0 | COOL_F1 | COOL_F2 | ... | COOL_F24 | COOL_F25 |
| Amendatory capacity demand. | 0 | 1       | 2       | ... | 24       | 25       |

The maximum running frequency is adjusted according to the outdoor ambient temperature

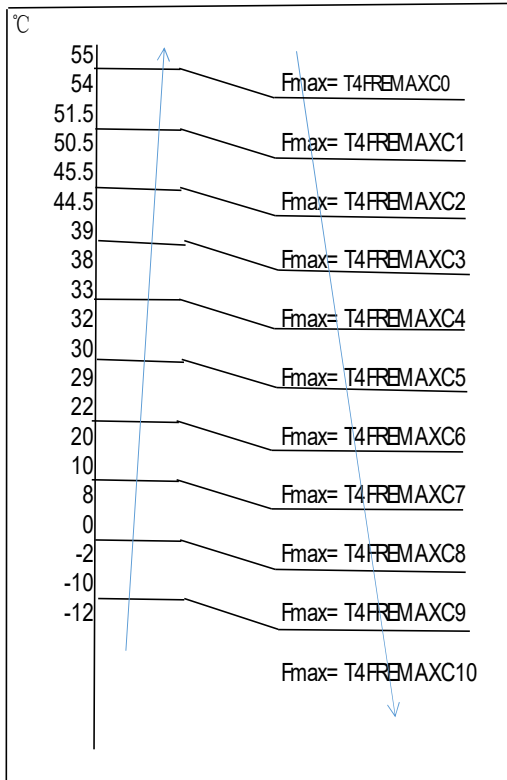


|       |     |     |     |     |
|-------|-----|-----|-----|-----|
| Model | 9K  | 12K | 18K | 24K |
| HP    | 1.0 | 1.2 | 1.5 | 2.5 |

Note: The final result is an integer.

Then modify it according to a T2 average (correction):

Note: Average value of T2: Sum T2 value of all indoor units) / (indoor units number)

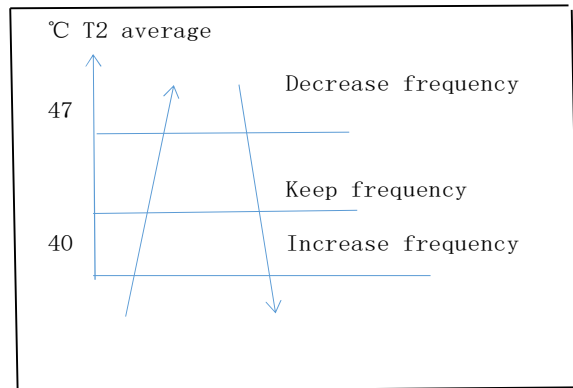


Use the following table and final capacity request to confirm the operating frequency.


|                             |   |         |         |     |          |          |
|-----------------------------|---|---------|---------|-----|----------|----------|
| Frequency (Hz)              | 0 | HEAT_F1 | HEAT_F2 | ... | HEAT_F24 | HEAT_F25 |
| Amendatory capacity demand. | 0 | 1       | 2       | ... | 24       | 25       |

The maximum running frequency is adjusted according to the outdoor ambient temperature

### Heating Mode

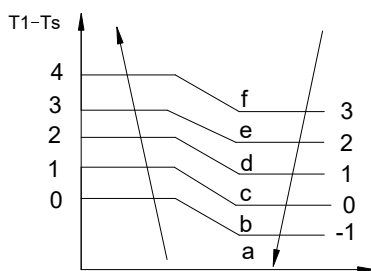

|               |   |   |     |   |     |   |
|---------------|---|---|-----|---|-----|---|
| Capacity area | a | b | c   | d | e   | f |
| Norm code (N) | 3 | 2 | 1.5 | 1 | 0.5 | 0 |

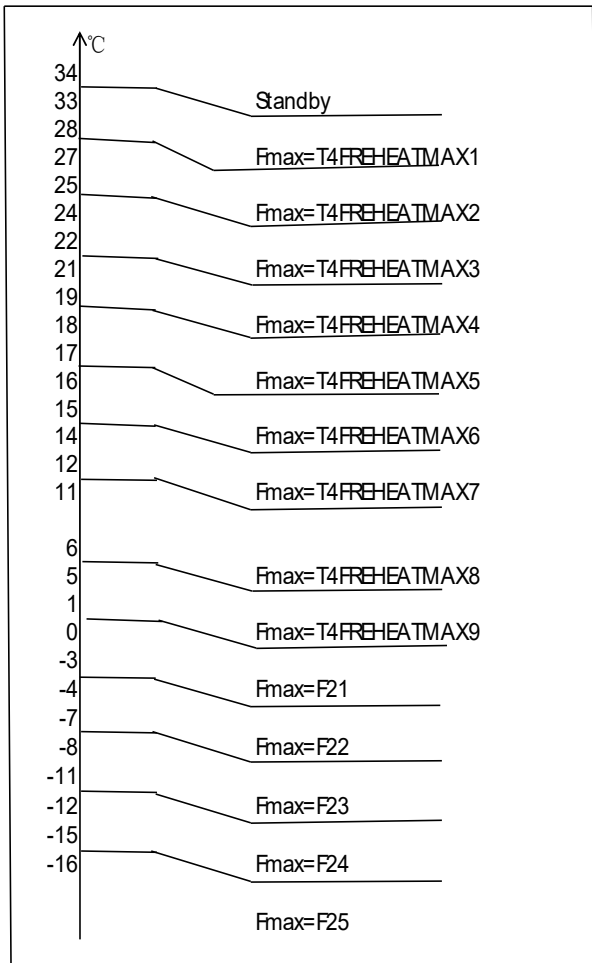

## 5.4.2 Defrosting Control

### Conditions for Defrosting:

After the compressor starts and enters normal operation, mark the minimum value of T3 from the 10th to 15th minute as T30.

If any one of the following conditions is satisfied, the unit enters defrosting mode:

- 1) If the compressor's cumulative running time reaches 29 minutes and  $T3 < TCDI1$  and  $T3 + T30SUBT3ONE \leq T30$ .
- 2) If the compressor cumulative running time reaches 35 minutes and  $T3 < TCDI2$  and  $T3 + T30SUBT3TWO \leq T30$ .
- 3) If the compressor cumulative running time reaches 40 minutes and  $T3 < -24C$  for 3 minutes.

4) If the compressor cumulative running time reaches 120 minutes and  $T3 < -15^{\circ}C$ .

5) If the air conditioner is shut down from heating mode, it will enter defrost if any of the following conditions are met (this condition can be shielded by parameters):

- a) The continuous operation time of the press exceeds 30 minutes, and  $T3 < -7$  degrees;
- b) The continuous operation time of the press is more than 30 minutes, and  $T30 < -15$  degrees;

6) For the first defrosting when the machine is turned on, after the compressor has been running for 30 minutes, when  $T4 - T3 > (0.5T4 + KDELTT\_ADD)$  and  $T3 < TCDIN5\_ADD$ , it will immediately enter the defrosting action. After performing this defrosting action once, this rule will be invalid until the next restarting operation.

7) If any one of the following conditions is satisfied, the unit enters defrosting mode,


- a) If T3 or T4 is lower than  $-3^{\circ}C$  for 30 seconds,  $Ts - T1$  is lower than  $5^{\circ}C$  and compressor running time is more than DEFROST\_COND6\_IN\_TIM.
- b) If T3 or T4 is lower than  $-3^{\circ}C$  for 30 seconds and compressor running time is more than DEFROST\_COND6\_IN\_TIM + 30.

### Defrost Stop Conditions


If any one of the following conditions is satisfied, defrosting ends and the unit returns to normal heating mode:

- T3 rises above than  $TCDE1^{\circ}C$ .
- T3 remains at  $TCDE2^{\circ}C$  or above for 80 seconds.
- The machine runs for 10 consecutive minutes in defrosting mode.

### Defrosting Action:

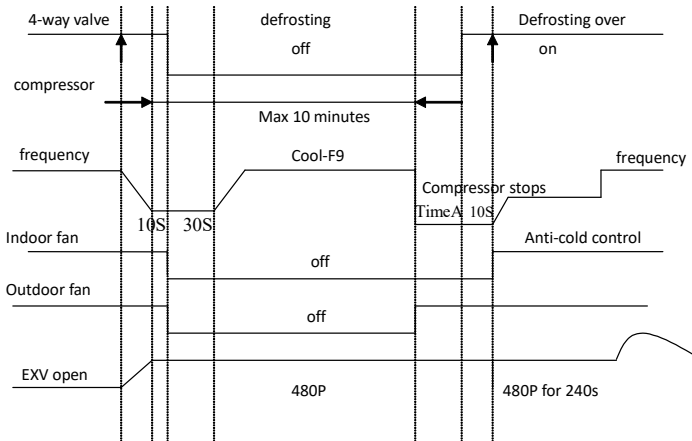



When  $T3 \geq 38^\circ\text{C}$  ( $100.4^\circ\text{F}$ ) or when  $T4 \geq 15^\circ\text{C}$  ( $59^\circ\text{F}$ ), the outdoor fan chooses a speed according to  $T4$  again.

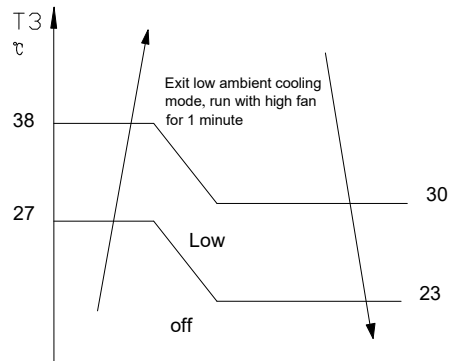

### 5.4.3 Outdoor Fan Control

#### 5.4.3.1 Cooling Mode

Under normal operating conditions, the system chooses the running fan speed according to the ambient temperature:

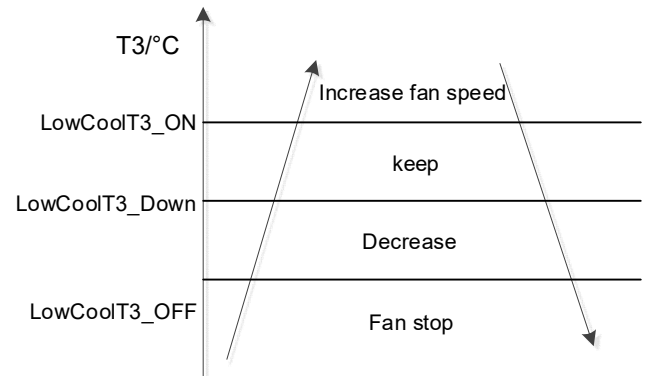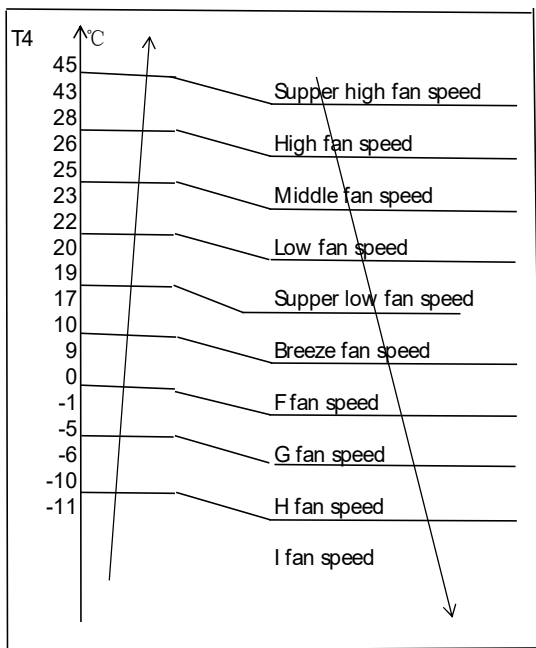


#### 5.4.3.2 Heating Mode

Under normal operating conditions, the system chooses a running fan speed according to ambient temperature:

When low ambient cooling is in effect::

Outdoor fan speed control logic (low ambient cooling)

When  $T4 < 15^\circ\text{C}$  ( $59^\circ\text{F}$ ) and  $T3 < 30^\circ\text{C}$  ( $86^\circ\text{F}$ ), the unit enters into low ambient cooling mode. The outdoor fan chooses a speed according to  $T3$ .

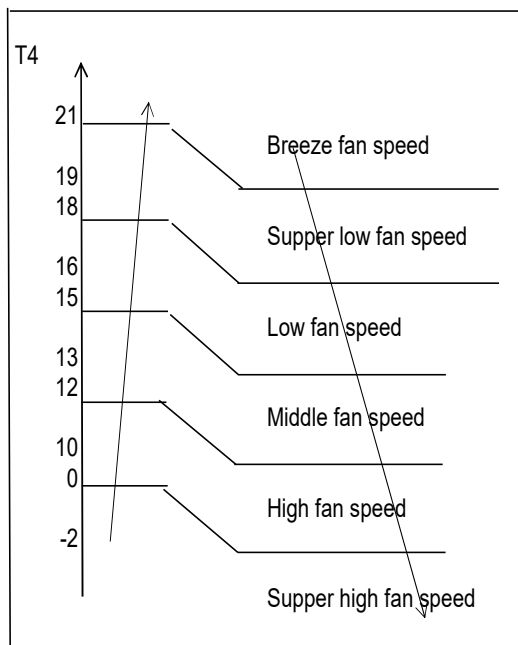

#### 5.4.4 Electronic Expansion Valve (EXV) For CVH-48-5SH, CVH-60-5SH

➤ After the outdoor unit is powered on again, the EXV is first closed -520P, and then in standby mode (if the current mode is heating mode, the initial heating degree is run, otherwise the initial cooling degree is run, and the internal machine is not connected. deal with 7k unit). The main valve first opens 510P, then opens 530P, and then is in the standby state (if the current outdoor mode is the heating mode or the standby mode, it maintains 0P, and the cooling mode opens to the initial cooling opening). The EVI valve opens 510P first, then 530P, then the counter is cleared to 0P.

2. After the compressor is stopped,

2.1 If the EVI valve has a valve opening action before the stop, the PMV\_CLOSE\_EE step is closed in the reverse direction after the stop, and then the EXV opening counter is cleared to 0P. If the EVI valve does not operate before the stop, 0P will be maintained.

2.2 Reverse the valve to close the PMV\_CLOSE\_EE step (after closing the valve to the 0P, and then continue to run PMV\_CLOSE\_EE in the valve closing direction, the EXV opening counter is cleared. If the current opening is 300P, go to the valve Run the 320P in the closing direction to close the EXV.), then in the standby state (if the current outdoor mode is the heating

mode, the initial heating opening is run, otherwise the initial cooling opening is run, and the internal machine is not connected. deal with 7k unit).

2.3 Main EXV action: When the compressor is off, the main EXV keeps the opening degree when the compressor is turned off within the first 90 seconds. If it is currently heating mode, -20P, clear and keep 0P, otherwise adjust to 480P.

3. Other EXV(except for EVI valve) cannot be operated at the same time. The action priority order is A-B-C-D-E-main valve. The EVI valve can be operated together with other EXV.

#### For other models, Control

1. EXV remains fully closed while the device is powering up. EXV then remains on standby with 350P open. It opens to the target angle after the compressor starts.

2. EXV closes with -40P when the compressor stops. Then it remains on standby with 350P open. It opens to the target angle after the compressor starts.

3. The action priority for the EXVs is A-B-C-D-E.

4. The compressor and outdoor fan commence operation only after EXV initializes.

#### 5.4.4.1 Cooling Mode

The initial open angle of the EXV depends on the size of the indoor model. The adjustment range is 100-400p.

When the unit has been running for 3 minutes, the outdoor receives indoor units' capacity demand and T2B information and then calculates their average. After comparing each indoor's T2B with the average, the outdoor gives the following modification commands:

---- If the  $T2B > \text{average}$ , the relevant valve needs to open 16p more

---- If the  $T2B = \text{average}$ , the relevant valve's open range remains as is

---- If the  $T2B < \text{average}$ , the relevant valve needs to close 16p more

This modification is carried out every 2 minutes.

#### 5.4.4.2 Heating Mode

The initial open angle of the EXV depends on the size of the indoor model. The adjustment range is 150-350p.

When the unit has been running for 3 minutes, the outdoor unit receives the indoor units' indoor units' capacity demand and T2 information and then calculates their average.

After comparing each indoor unit's T2 with the average, the outdoor gives the following modification commands:

----If the  $T2 > \text{average} + 2$ , the relevant valve needs to close 16p more

---- If  $\text{average} + 2 \geq T2 \geq \text{average} - 2$ , the relevant valve's open range remains as is

----If the  $T2 < \text{average} - 2$ , the relevant valve needs to open 16p more

This modification is carried out every 2 minutes.

#### **5.4.5 Four-Way Valve Control**

In heating mode, a four-way valve is opened.

In defrosting, a four-way valve operates according to the current defrosting action.


In other modes, a four-way valve is closed.


When the unit is switched from heating to other modes, the four-way valve turns off after the compressor has been off for 2 consecutive minutes.

Failure or protection (excluding discharge temperature protection and high/low pressure protection) causes the four-way valve to immediately shut down.

# 6. Wiring Diagrams

## 6.1 Wiring diagram of 1 drive 2 outdoor CVH-18-2SH

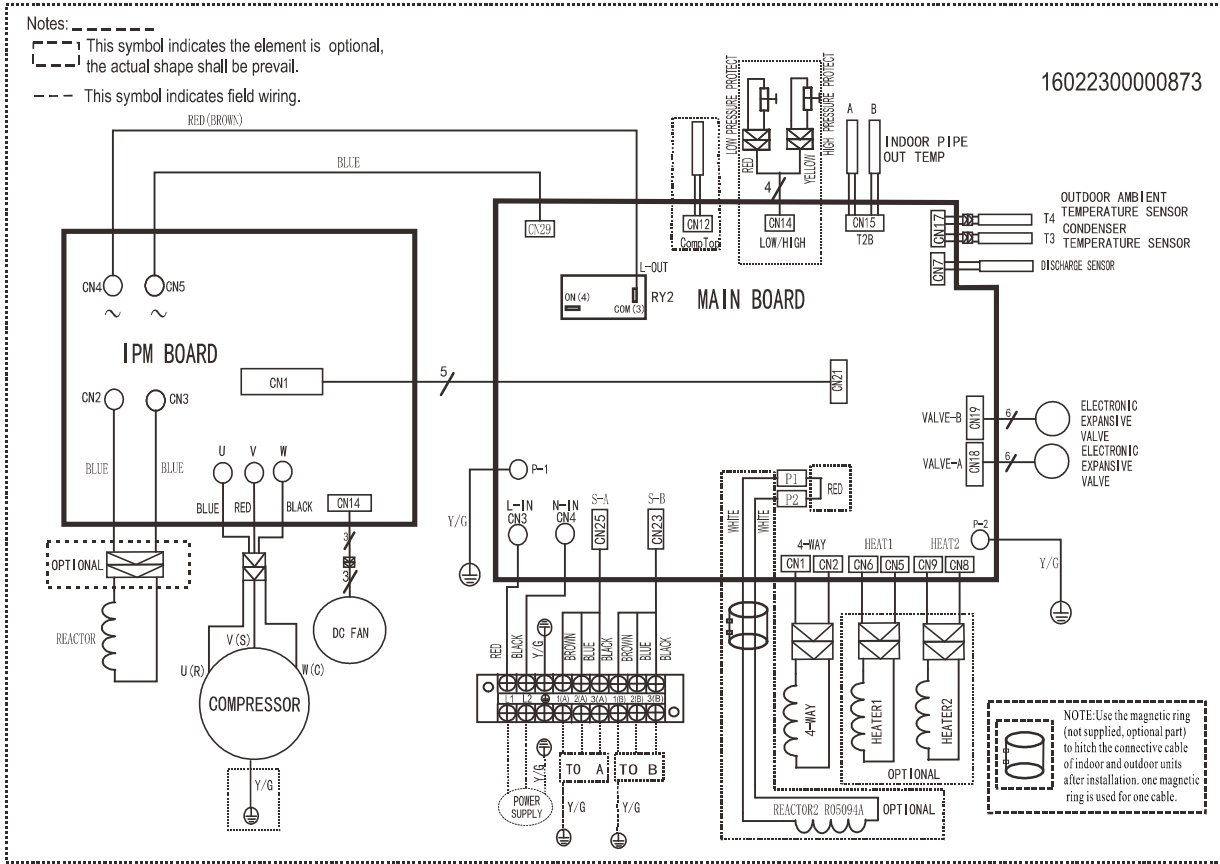

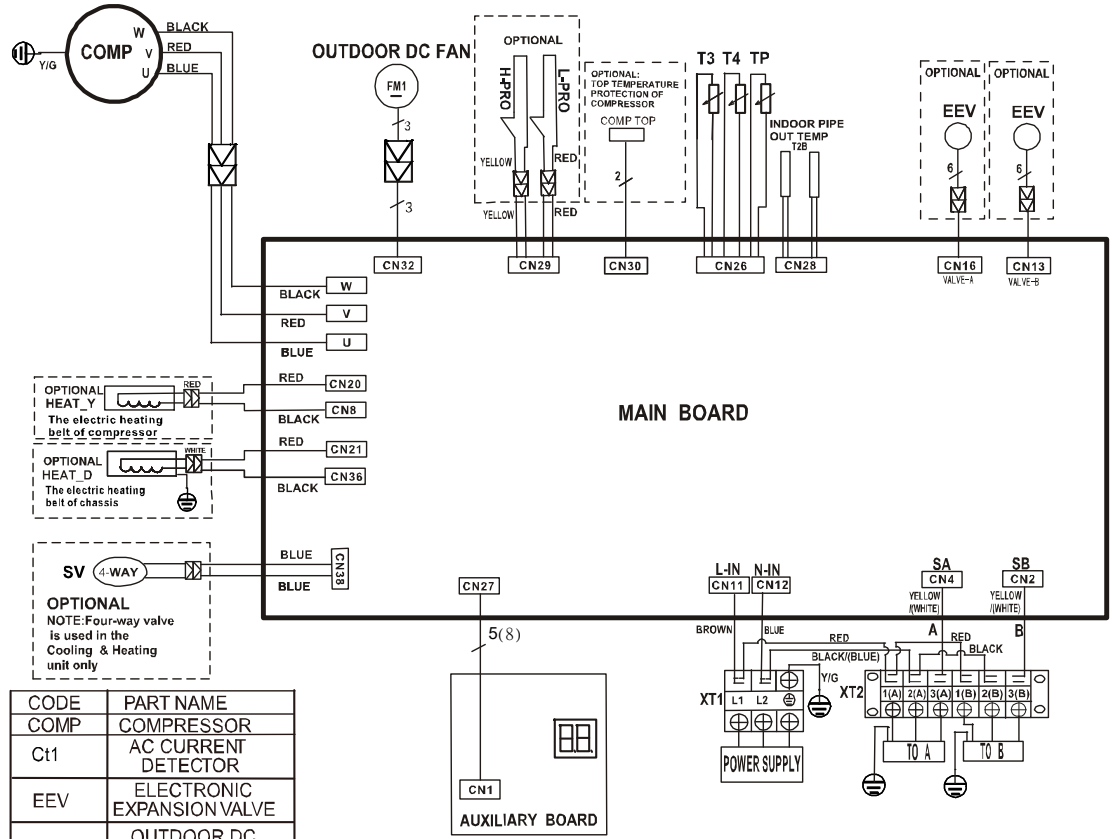


| CODE     | PART NAME                    |
|----------|------------------------------|
| COMP     | COMPRESSOR                   |
| Ct1      | AC CURRENT DETECTOR          |
| EEV      | ELECTRONIC EXPANSION VALVE   |
| FM1      | OUTDOOR DC FAN MOTOR         |
| HEAT_D   | CHASSIS HEATER               |
| HEAT_Y   | CRANKCASE HEATER             |
| H-PRO    | HIGH PRESSURE SWITCH         |
| L-PRO    | LOW PRESSURE SWITCH          |
| SV       | REVERSE VALVE                |
| TP       | COMP. DISCHARGE TEMP. SENSOR |
| T3       | COIL TEMP. SENSOR            |
| T4       | OUTDOOR AMBIENT TEMP. SENSOR |
| COMP TOP | COMP. TOP OLP TEMP. SENSOR   |

Notes:       
 This symbol indicates the element is optional, the actual shape shall be prevail.



## 6.2 Wiring diagram of 1 drive 3 outdoor

### CMZ-27-3Z, CVH-27-3SH

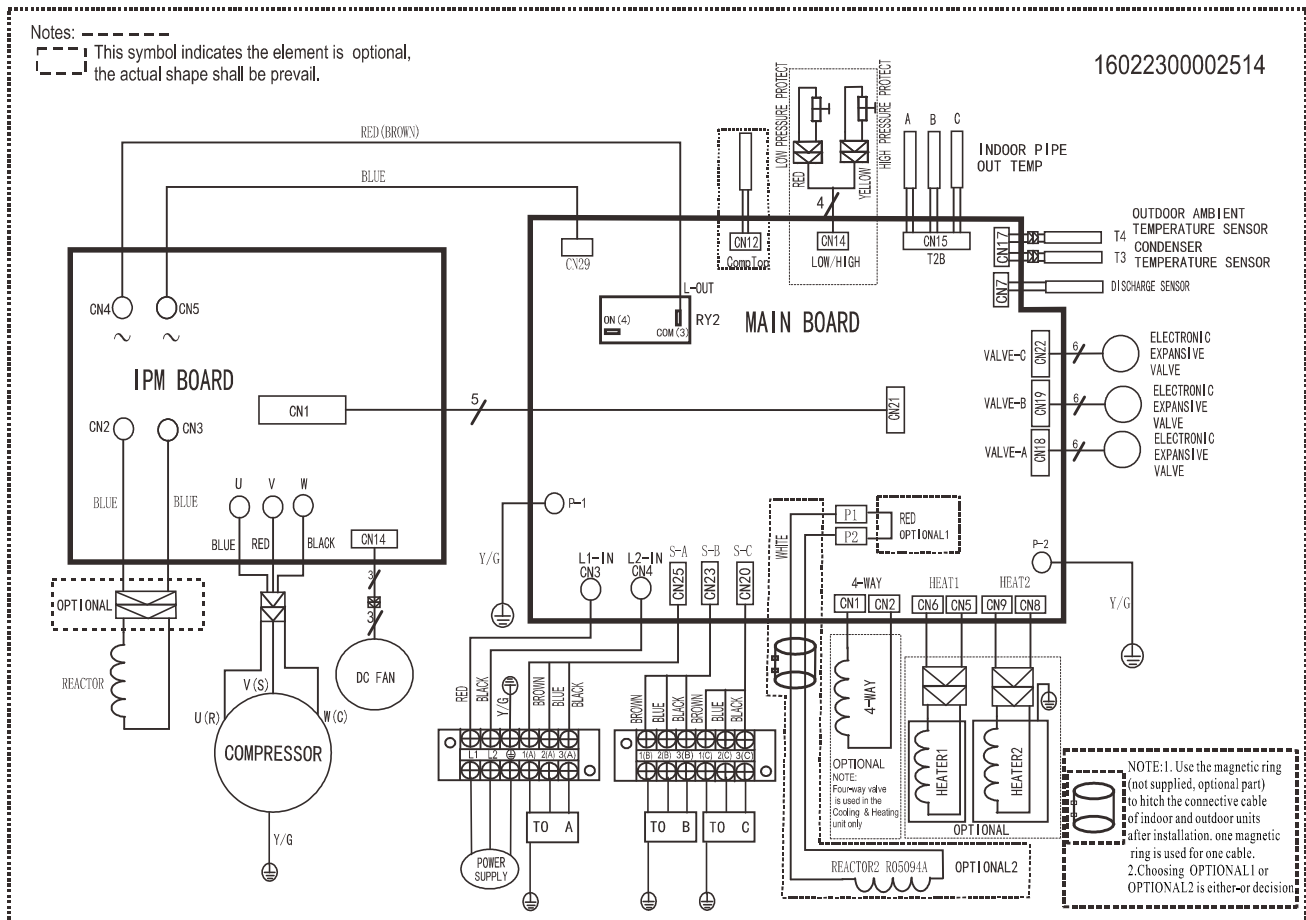


### 6.3 Wiring diagram of 1 drive 4 outdoor CMZ-48-4Z


16022300002633

Notes:

- This symbol indicates the element is optional,
- the actual shape shall be prevail.

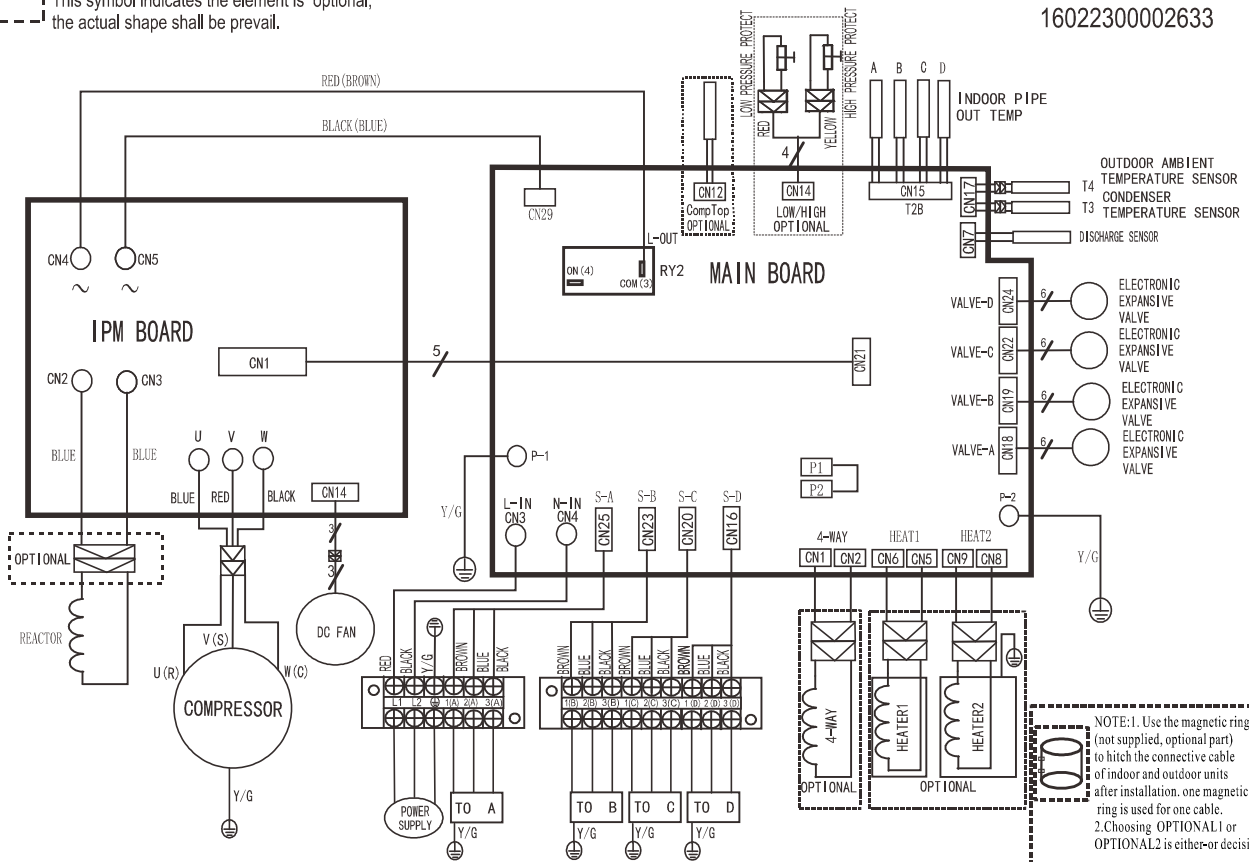


# CVH-36-4SH

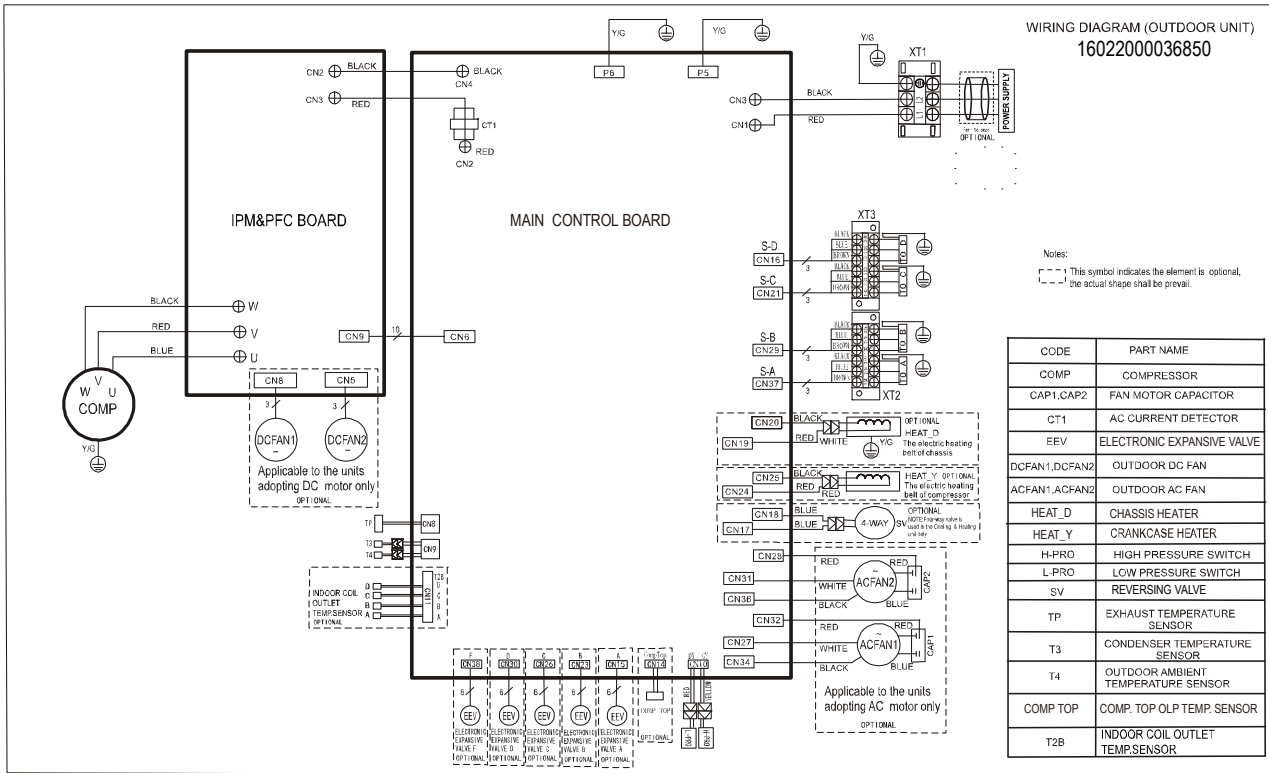


## 6.4 Wiring diagram of 1 drive 5 outdoor


### CVH-48-5SH, CVH-60-5SH

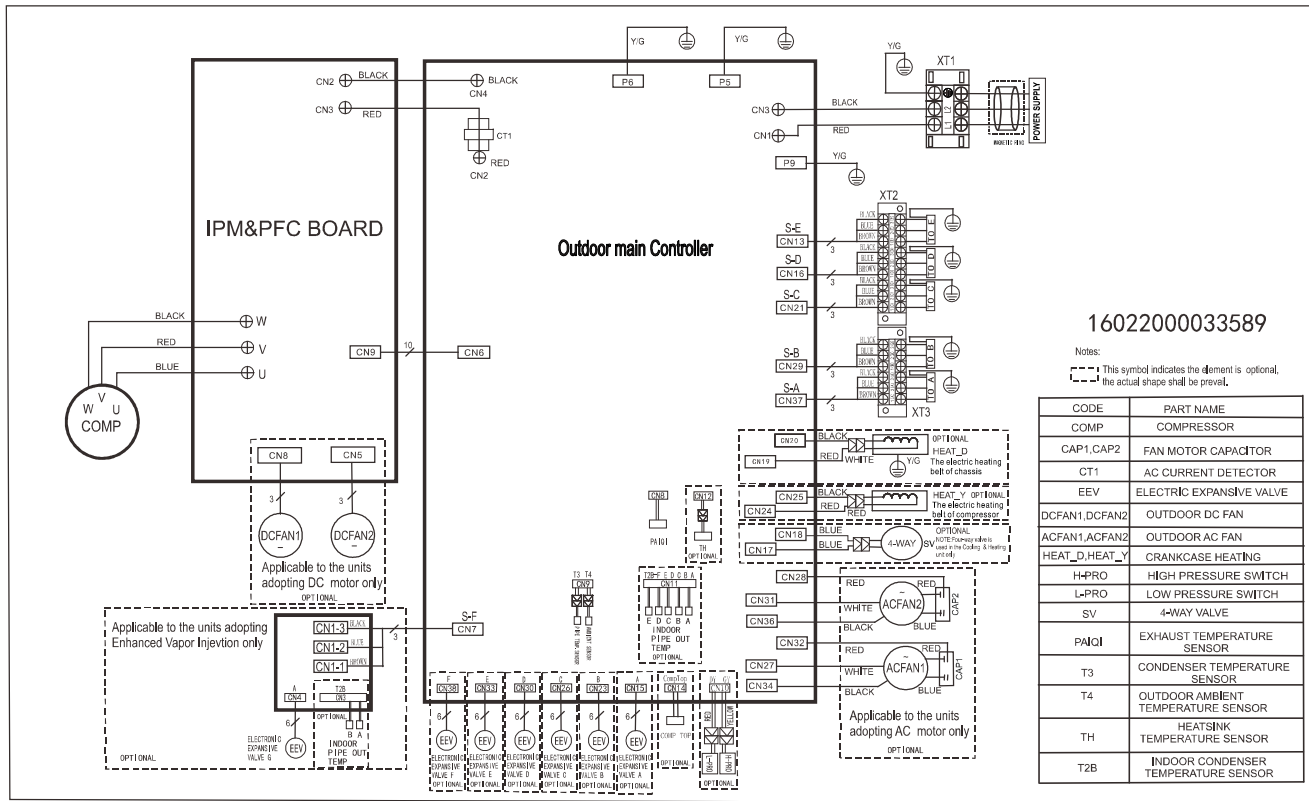

### CMZ-54-5Z, CMZ-60-5Z

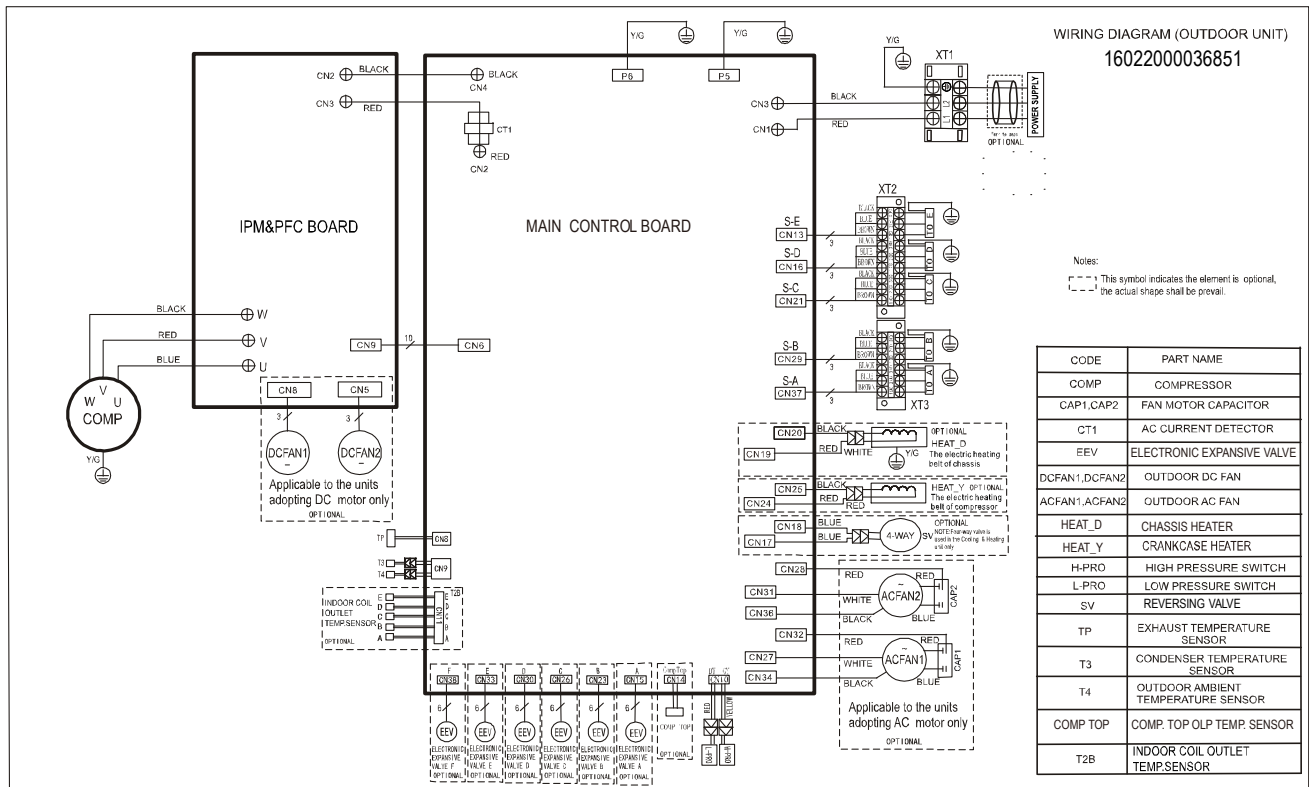


PCB board of CVH-18-2SH, CMZ-27-3Z, CVH-27-3SH, CMZ-48-4Z

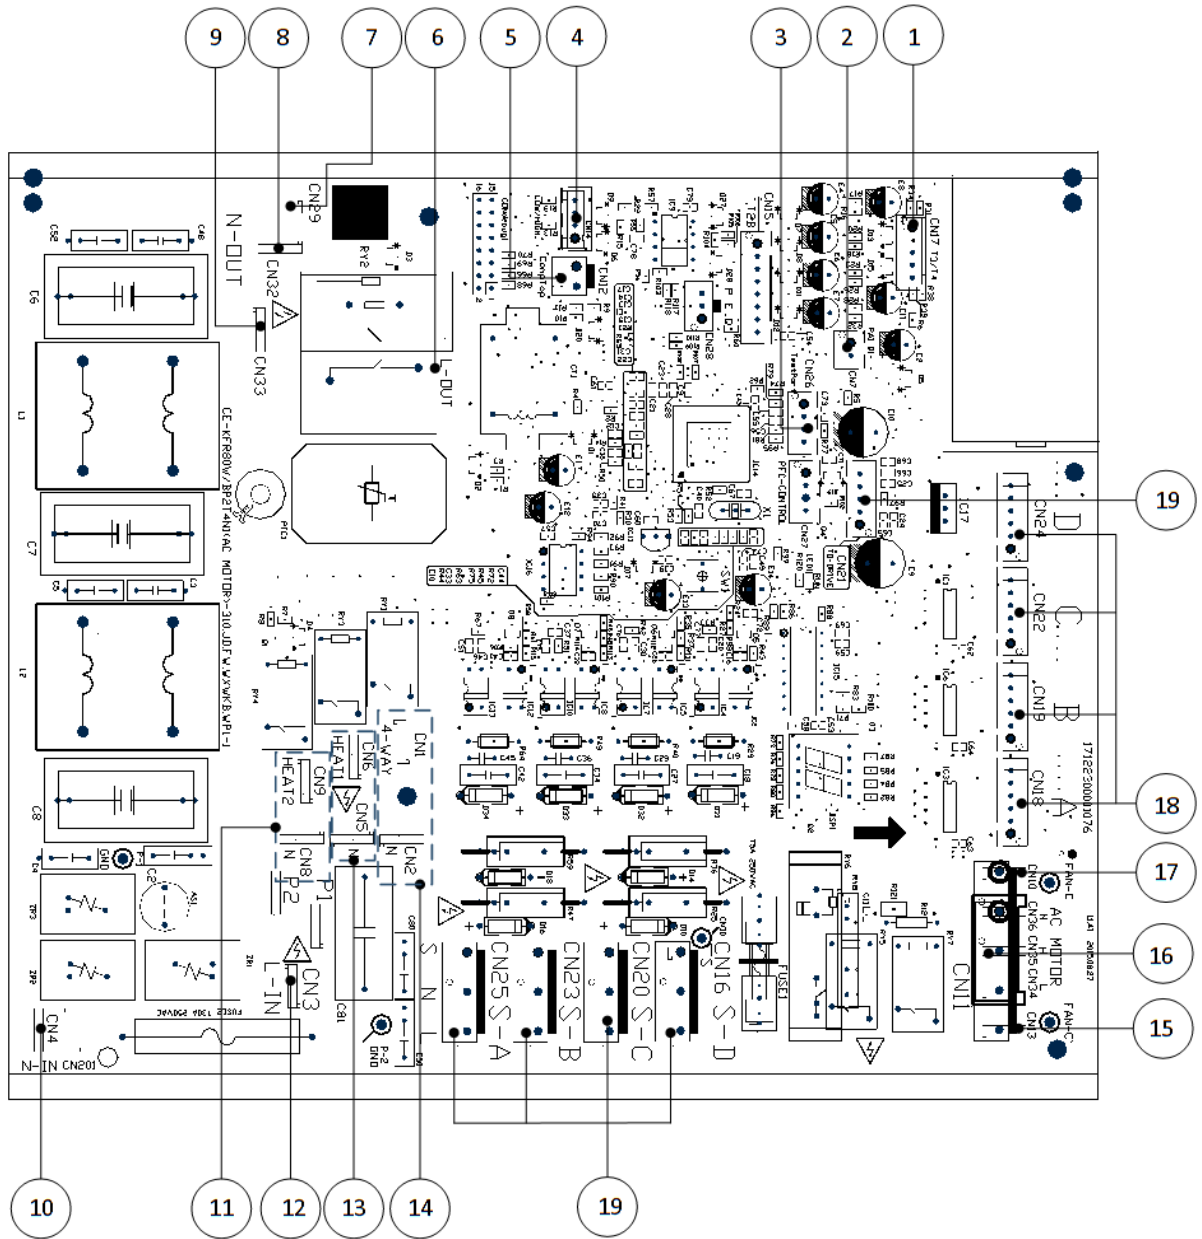

| No. | Name     | CN#  | Meaning  |
|-----|----------|------|--|
| 1   | T3/T4    | CN17 | T3: condenser temperature sensor<br>T4: outdoor ambient temperature sensor |
| 2   | CN7      | CN7  | connect to discharge sensor  |
| 3   | TESTPORT | CN26 | connect to DR board CN1  |
| 4   | LOW/HIGH | CN14 | Red: low pressure protect<br>Yellow: high pressure protect                 |
| 5   | Comp Top | CN12 | compressor top temperature sensor  |


|    |                            |         |  |
|----|----------------------------|---------|--|
| 6  | L-OUT                      | L-OUT   | connect to IPM board CN4   |
| 7  | N-OUT                      | N-OUT   | connect to IPM board CN5   |
| 8  | CN32                       | CN32    | connect to DR board CN5  |
| 9  | CN33                       | CN33    | connect to DR board CN5  |
| 10 | N-in                       | CN4     | N_in: connect to N-line (208-230V AC input)  |
| 11 | HEAT2                      | CN8/CN9 | connect to chassis heater, 208-230V AC when is ON                                      |
| 12 | L-in                       | CN3     | L_in: connect to L-line (208-230V AC input)  |
| 13 | HEAT1                      | CN5/CN6 | connect to compressor heater, 208-230V AC when is ON                                   |
| 14 | 4-way                      | CN1/CN2 | connect to 4 way valve, 208-230V AC when is ON.  |
| 15 | Fan-C                      | CN13    | connect to fan capacitor   |
| 16 | Outdoor AC Fan             | CN11    | connect to outdoor AC fan  |
| 17 | Fan-C                      | CN10    | connect to fan capacitor   |
| 18 | Electronic Expansion valve | CN18    | connect to Electric Expansion Valve A  |
|    |                            | CN19    | connect to Electric Expansion Valve B  |
|    |                            | CN22    | connect to Electric Expansion Valve C  |
|    |                            | CN24    | connect to Electric Expansion Valve D  |
| 19 | S-A                        | CN25    | Current loop communication A, signal wire, connect to the terminal (24V DC Pulse wave) |
|    | S-B                        | CN23    | Current loop communication B, signal wire, connect to the terminal (24V DC Pulse wave) |
|    | S-C                        | CN20    | Current loop communication C, signal wire, connect to the terminal (24V DC Pulse wave) |
|    | S-D                        | CN16    | Current loop communication D, signal wire, connect to the terminal (24V DC Pulse wave) |

**IPM board of CVH-18-2SH, CMZ-27-3Z, CVH-27-3SH, CMZ-48-4Z**

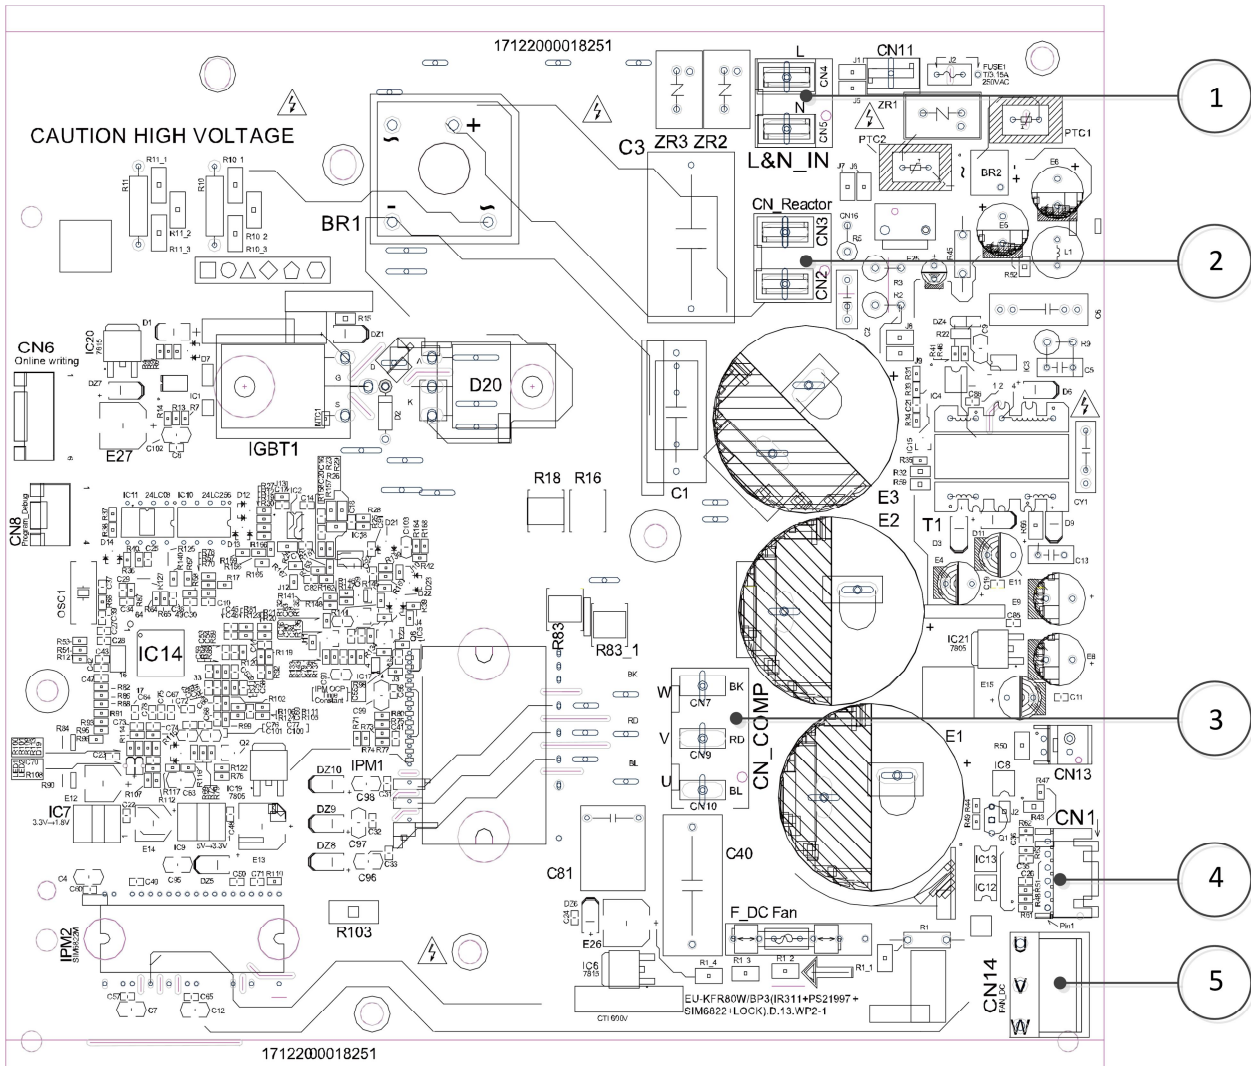

| No. | Name       | CN#     | Meaning                     |
|-----|------------|---------|-----------------------------|
| 1   | CN4        | CN4     | connect to main board L-Out |
|     | CN5        | CN5     | connect to main board N-Out |
| 2   | CN_Reactor | CN2/CN3 | connect to reactor          |
| 3   | CN_COMP    | CN_COMP | connect to compressor       |
| 4   | CN1        | CN1     | connect to main board CN21  |
| 5   | AN_DC      | CN14    | connect to outdoor DC fan   |

**PCB board of CMZ-18-2Z**

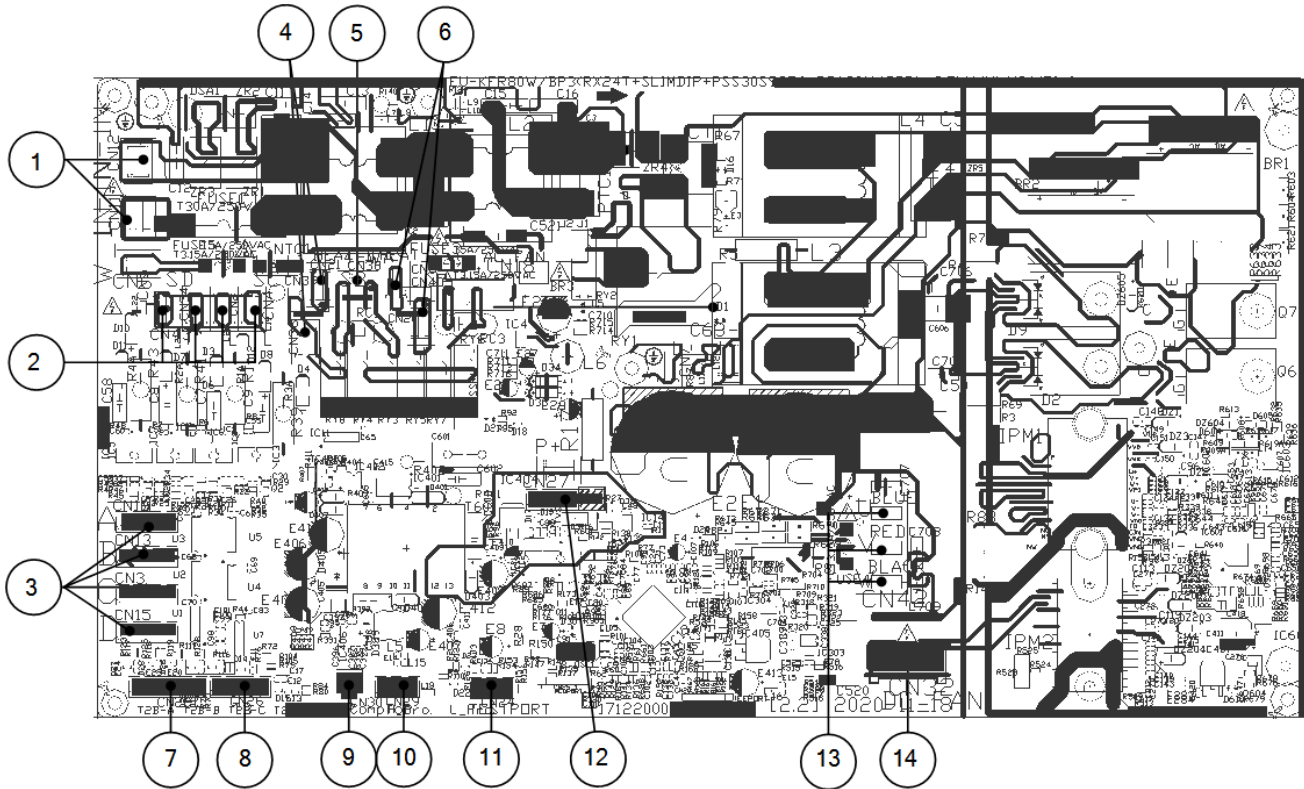


| No. | Name                       | CN#       | Meaning  |
|-----|----------------------------|-----------|--|
| 1   | Power Supply               | CN11      | L_in: connect to N-line (208-230V AC input)  |
|     |                            | CN12      | N_in: connect to L-line (208-230V AC input)  |
| 2   | Electronic Expansion valve | CN4       | connect to Electric Expansion Valve A  |
|     |                            | CN2       | connect to Electric Expansion Valve B  |
|     |                            | CN34      | connect to Electric Expansion Valve C  |
|     |                            | CN5       | connect to Electric Expansion Valve D  |
| 3   | S-A                        | CN10      | S: connect to indoor unit communication(pin1-pin2: 24VDC Pulse wave; pin2-pin3: 208-230V AC input) |
|     | S-B                        | CN13      |  |
|     | S-C                        | CN3       |  |
|     | S-D                        | CN15      |  |
| 4   | HEAT_D                     | CN21/CN36 | connect to chassis heater, 208-230V AC when is ON  |
| 5   | 4-way                      | CN38      | connect to 4 way valve, 208-230V AC when is ON.  |
| 6   | HEAT_Y                     | CN8/CN20  | connect to compressor heater, 208-230V AC when is ON   |
| 7   | T2B                        | CN28      | connect to evaporator coil outlet temperature sensor T2B   |




|    |                  |      |   |
|----|------------------|------|---|
| 8  | T3 T4 TP         | CN26 | connect to pipe temp. sensor T3, ambient temp. sensor T4, exhaust temp. sensor TP |
| 9  | OLP TEMP. SENSOR | CN30 | connect to compressor top temp. sensor (5VDC Pulse wave)                          |
| 10 | H-PRO,L-RPO      | CN29 | connect to high and low pressure swtich(pin1-pin2&pin3-pin4:5VDC pulse wave)      |
| 11 | TESTPORT         | CN24 | used for testing  |
| 12 | /                | CN27 | connect to key board CN1  |

PCB Board of CVH-48-5SH, CVH-36-4SH, CMZ-54-5Z, CMZ-60-5Z & CVH-60-5SH

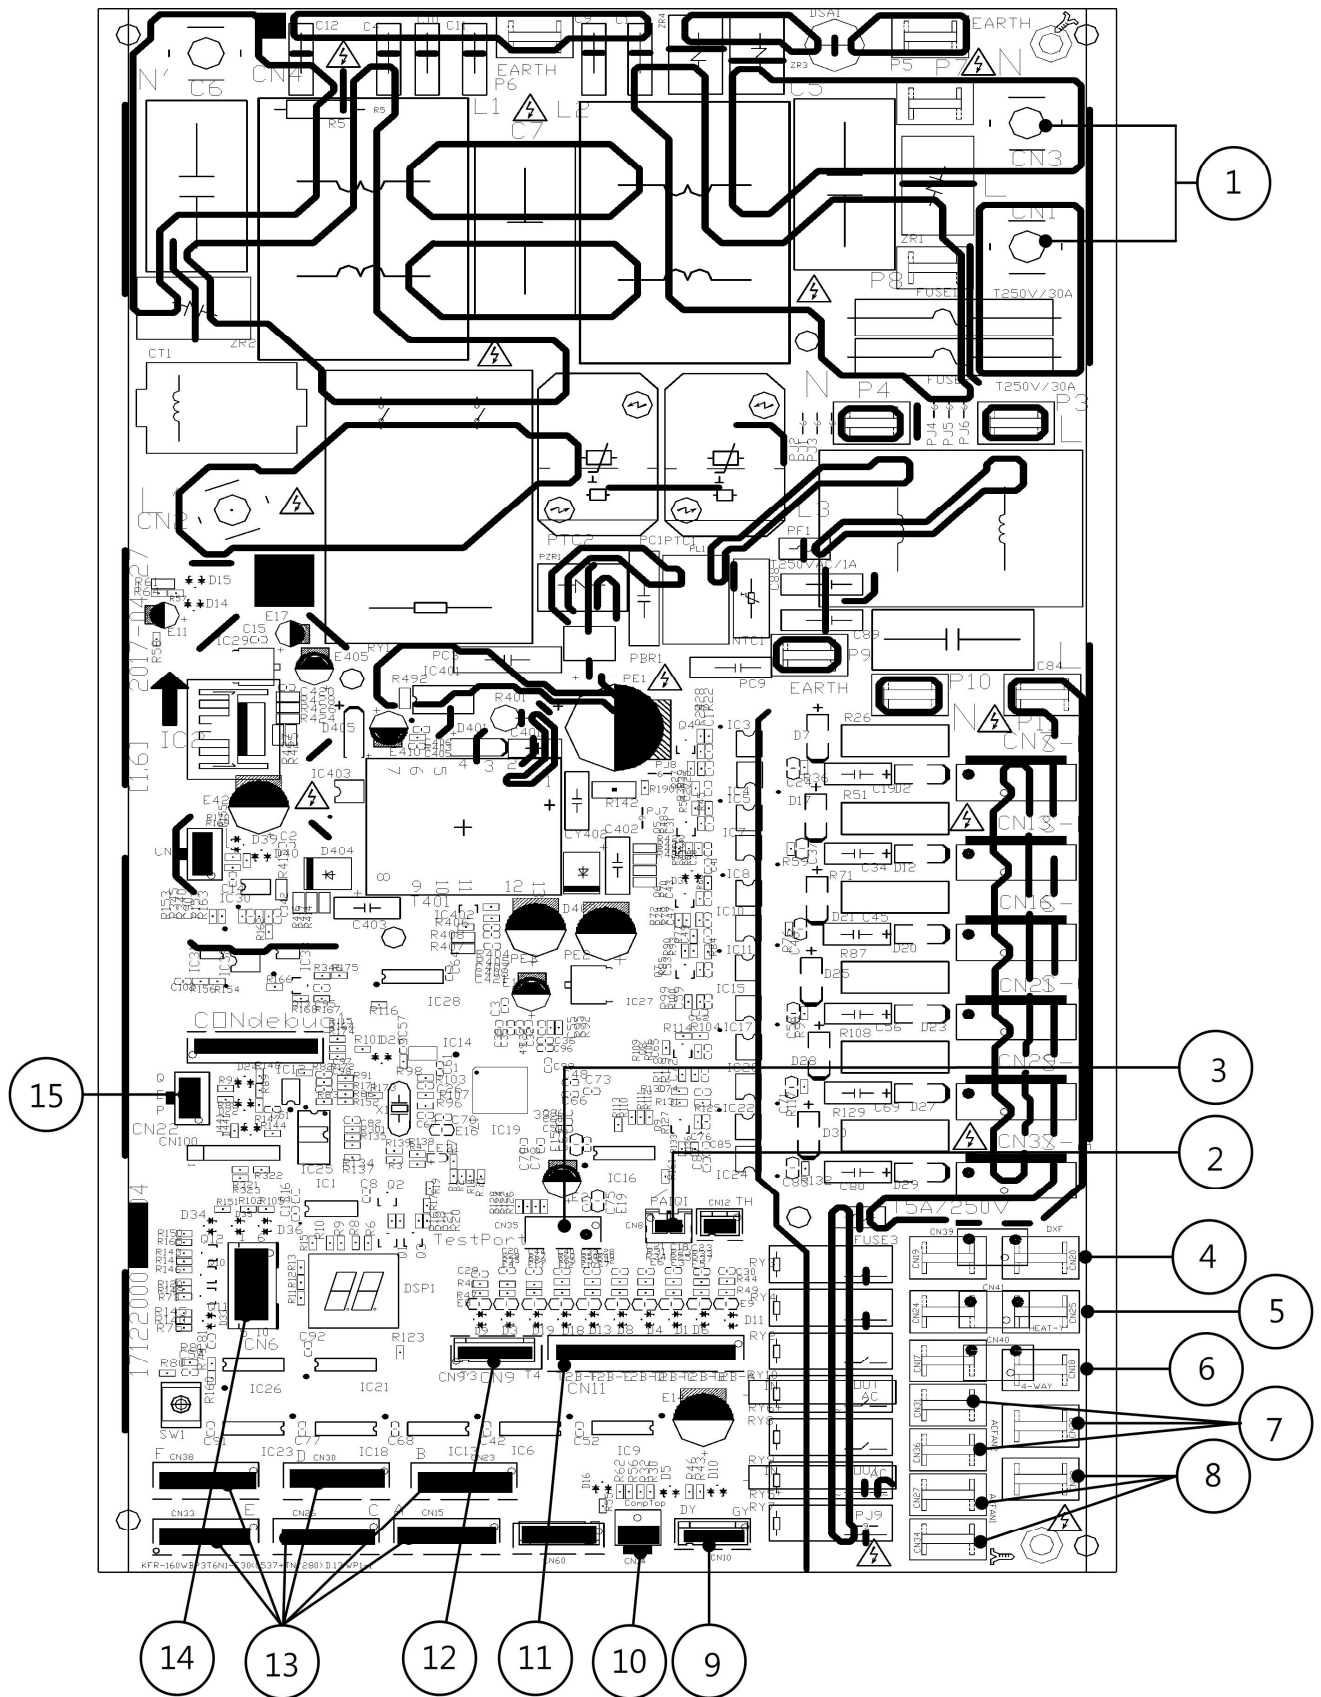

| No. | Name                       | CN#                    | Meaning  |
|-----|----------------------------|------------------------|--|
| 1   | Power Supply               | CN1                    | L1_in: connect to L1-line (230V AC input)                                    |
|     |                            | CN3                    | L2_in: connect to L2-line (230V AC input)                                    |
| 2   | TP                         | CN8                    | Exhaust temp. sensor TP  |
| 3   | TESTPORT                   | CN35                   | used for testing   |
| 4   | HEAT1                      | CN19/CN20              | connect to chassis heater, 208-230V AC when is ON                            |
| 5   | HEAT2                      | CN24/CN25              | connect to compressor heater, 208-230V AC when is ON                         |
| 6   | 4-WAY                      | CN17/<br>CN18          | connect to 4 way valve, 208-230V AC when is ON.                              |
| 7   | AC-FAN2                    | CN28/<br>CN31/<br>CN36 | connect to AC fan2   |
| 8   | AC-FAN1                    | CN27/<br>CN32/<br>CN34 | connect to AC fan1   |
| 9   | H-PRO,L-RPO                | CN10                   | connect to high and low pressure swtich(pin1-pin2&pin3-pin4:5VDC pulse wave) |
| 10  | OLP TEMP. SENSOR           | CN14                   | connect to compressor top temp. sensor (5VDC Pulse wave)                     |
| 11  | T2B                        | CN11                   | connect to pipe temp. sensor T2B   |
| 12  | T3 T4                      | CN9                    | connect to pipe temp. sensor T3, ambient temp. sensor T4                     |
| 13  | Electronic Expansion valve | CN15                   | connect to Electric Expansion Valve A  |
|     |                            | CN23                   | connect to Electric Expansion Valve B  |
|     |                            | CN26                   | connect to Electric Expansion Valve C  |
|     |                            | CN30                   | connect to Electric Expansion Valve D  |
|     |                            | CN33                   | connect to Electric Expansion Valve E  |
|     |                            | CN38                   | connect to Electric Expansion Valve F  |
| 14  | /                          | CN6                    | connect to IPM&PFC board CN9   |
| 15  | PQE                        | CN22                   | 485 communication  |

**IPM board of CVH-48-5SH , CVH-36-4SH, CMZ-54-5Z, CMZ-60-5Z& CVH-60-5SH**

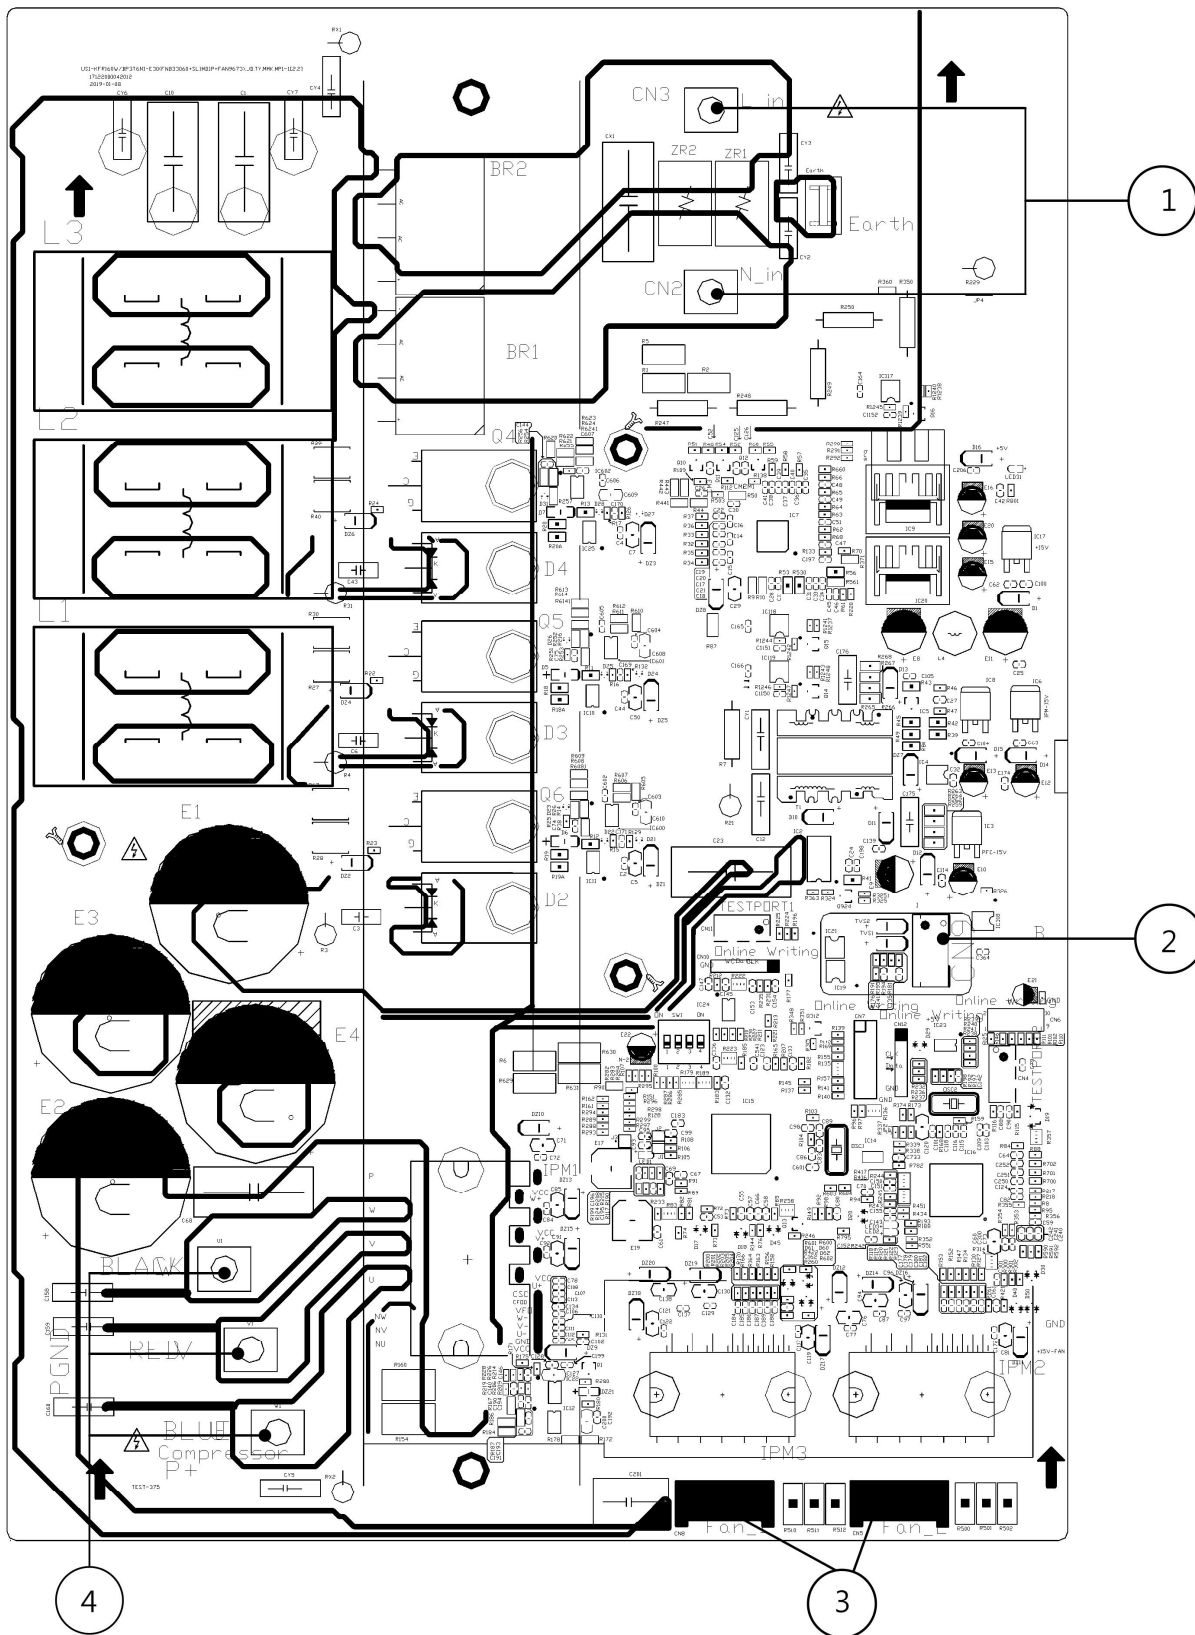


| No. | Name         | CN#         | Meaning                               |
|-----|--------------|-------------|---------------------------------------|
| 1   | Power Supply | CN3         | connect to main board L-Out           |
|     |              | CN2         | connect to main board N-Out           |
| 2   | /            | CN9         | Connect to main PCB CN6               |
| 3   | FAN_DC       | FAN_1/FAN_2 | connect to outdoor DC fan 1& DC fan 2 |
| 4   | CN_COMP      | U1          | Connect to compressor                 |
|     |              | V1          |                                       |
|     |              | W1          |                                       |

## 7. Troubleshooting

### 7.1 Safety

Electricity is stored in capacitors, even when the power supply is shut off. Do not forget to discharge the electricity in the capacitors.

The value of resistance is about 1500 ohm to 2000 ohm

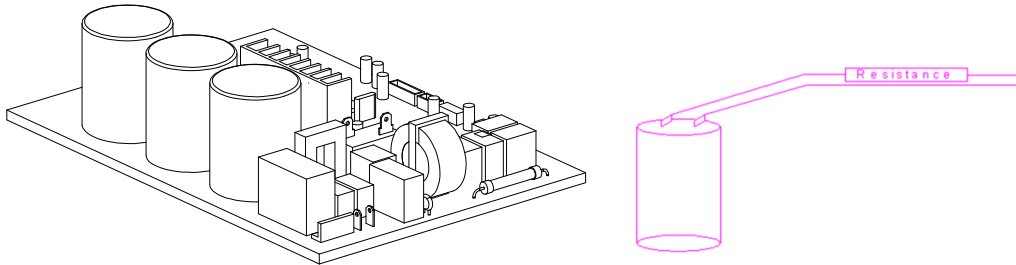

Electrolytic Capacitors

(HIGH VOLTAGE! CAUTION!)

Bulb (25-40W)

The voltage in P3 and P4 in outdoor PCB is high voltage about 310V

The voltage in P5 and P6 in outdoor PCB is high voltage about 310V

## 7.2 Indoor Unit Error Display

For All new models(Wall mounted(Hi-Wall) series, Duct/Cassette/Floor Ceiling):

### 1) Duct:

CPA-09B , CPA-12B , CPA-18B,CPA-24B

### 2) Cassette:

TPA-09, TPA-12, TPA-18

### 3) Floor Ceiling:

FPA-18, FPA-24;

| Operation lamp | Timer lamp | Display     | LED STATUS   | ODU Error |
|----------------|------------|-------------|--|-----------|
| ★ 1 time       | X          | E0          | Indoor unit EEPROM parameter error   | —         |
| ★ 2 times      | X          | E1          | Communication malfunction between indoor and outdoor units                   | E2        |
| ★ 4 times      | X          | E3          | Indoor fan speed malfunction   | —         |
| ★ 5 times      | X          | E4          | Indoor room temperature sensor (T1 ) malfunction                             | —         |
| ★ 6 times      | X          | E5          | Evaporator coil temperature sensor (T2) malfunction                          | —         |
| ★ 9 times      | X          | EH<br>0b/Eb | Indoor PCB/Display board communication error                                 | —         |
| ★ 8 times      | X          | EE          | Water-level alarm malfunction  | —         |
| ★ 7 times      | X          | EC          | Refrigerant leakage detection  | —         |
| ★ 1 time       | ●          | F0          | Current overload protection  | —         |
| ★ 2 times      | ●          | F1          | Outdoor ambient temperature sensor (T4 ) malfunction                         | E4        |
| ★ 3 times      | ●          | F2          | Condenser coil temperature sensor (T3) malfunction                           | E4        |
| ★ 4 times      | ●          | F3          | Compressor discharge temperature sensor (T5) malfunction                     | E4        |
| ★ 5 times      | ●          | F4          | Outdoor unit EEPROM parameter error  | E0        |
| ★ 6 times      | ●          | F5          | Outdoor fan speed malfunction  | E8        |
| ★ 7 times      | ●          | F6          | Indoor coil outlet pipe sensor(Located on outdoor unit low pressure valve)   | —         |
| ★ 8 times      | ●          | F7          | Communication malfunction between Cassette optional lift panel and the unit. | —         |
| ★ 9 times      | ●          | F8          | Cassette optional lift panel malfunction                                     | —         |
| ★ 10 times     | ●          | F9          | Cassette optional lift panel not closed                                      | —         |
| ★ 11 times     | ●          | FA          | Communication error between indoor two chips(For A6 Duct)                    | —         |
| ★ 1 time       | ★          | P0          | Inverter module (IPM) malfunction  | P6        |
| ★ 2 times      | ★          | P1          | Over-voltage or under-voltage protection                                     | E5        |
| ★ 3 times      | ★          | P2          | High temperature protection of compressor top(OLP)/ High                     | —         |

|                                   |   |           |                                     |    |
|-----------------------------------|---|-----------|-------------------------------------|----|
|                                   |   |           | temperature protection of IPM board |    |
| ★ 4 times                         | ★ | P3        | Low ambient temperature protection  | LP |
| ★ 5 times                         | ★ | P4        | Compressor drive malfunction        | —  |
| ★ 6 times                         | ★ | P5<br>(—) | Indoor units mode conflict          | —  |
| ★ 7 times                         | ★ | P6        | Low pressure protection             | P2 |
| ★ flash , ● light, X extinguished |   |           |                                     |    |

**For All new models(Wall mounted(Hi-Wall) series,Cassette/AHU/1-Way Cassette):**

**1) CHF Series**

CHF09CD(I), CHF12CD(I), CHF18CD(I), CHF24CD(I)

**2) CGS Series**

CGS09CA(I),CGS09CD(I),CGS12CA(I),CGS12CD(I),CGS18CD(I),CGS24CD(I),  
CGS30CD(I),CGS36CD(I)

**3) Cassette:**

TIP24

**4) AHU Series**

AHU18-M, AHU24-M, AHU30-M, AHU36-M

**5) 1-Way Cassette**

T1W9P,T1W12P,T1W18P

| Operation lamp | Timer lamp | Display           | LED STATUS   | ODU Error |
|----------------|------------|-------------------|--|-----------|
| ★ 1 time       | X          | EH<br>00/EH<br>0A | Indoor unit EEPROM parameter error                         | —         |
| ★ 2 times      | X          | EL 01             | Communication malfunction between indoor and outdoor units | E2        |
| ★ 4 times      | X          | EH 03             | Indoor fan speed malfunction                               | —         |
| ★ 6 times      | X          | EH 60             | Indoor room temperature sensor (T1 ) malfunction           | —         |
| ★ 6 times      | X          | EH 61             | Evaporator coil temperature sensor (T2) malfunction        | —         |
| ★ 1 time       | ★          | PC 08             | Current overload protection                                | —         |
| ★ 5 times      | X          | EC 53             | Outdoor ambient temperature sensor (T4 ) malfunction       | E4        |
| ★ 5 times      | X          | EC 52             | Condenser coil temperature sensor (T3) malfunction         | E4        |
| ★ 5 times      | X          | EC 54             | Compressor discharge temperature sensor (T5) malfunction   | E4        |
| ★ 5 times      | X          | EC 51             | Outdoor unit EEPROM parameter error                        | E0        |




|                                   |    |        |  |    |
|-----------------------------------|----|--------|--|----|
| ★ 12 times                        | X  | EC 07  | Outdoor fan speed malfunction  | E8 |
| ★ 5 times                         | X  | EC 56  | Indoor coil outlet pipe sensor(Located on outdoor unit low pressure valve)                     | —  |
| ★ 9 times                         | X  | EH 0b  | Indoor PCB/Display board communication error   | —  |
| ★ 8 times                         | X  | EL 0C  | Refrigerant leakage detection  | —  |
| ★ 7 times                         | ★  | PC 00  | Inverter module (IPM) malfunction  | P6 |
| ★ 2 times                         | ★  | PC 01  | Over-voltage or under-voltage protection   | E5 |
| ★ 3 times                         | ★  | PC 02  | High temperature protection of compressor top(OLP)/ High temperature protection of IPM board   | —  |
| ★4 times                          | ★  | PC 0L  | Low ambient temperature protection   | LP |
| ★ 5 times                         | ★  | PC 04  | Compressor drive malfunction   | —  |
| ★ 1 time                          | ●  | —      | Indoor units mode conflict   | —  |
| ★ 7 times                         | ★  | PC 03  | Low pressure protection  | P2 |
| ★ 5 times                         | X  | EC 55  | Outdoor IPM module temperature sensor fault  | —  |
| ★2 times                          | X  | EL 16  | Communication malfunction between adapter board and outdoor main board(for AHU type)           | —  |
| ★6 times                          | X  | EH 62  | Evaporator coil temperature sensor T2B is in open circuit or has short circuited(for AHU type) | —  |
| ★6 times                          | X  | EH 65  | Evaporator coil temperature sensor T2A is in open circuit or has short circuited(for AHU type) | —  |
| --                                | -- | EH b A | Communication malfunction between external fan module and indoor unit(for new cassette type)   | —  |
| ★4 times                          | X  | EH 3A  | External fan DC bus voltage is too low protection(for new cassette type)                       | —  |
| ★4 times                          | X  | EH 3b  | External fan DC bus voltage is too high fault(for new cassette type)                           | —  |
| ★4 times                          | X  | EH 31  | Upper indoor fan speed is operating outside of the normal range(for new console type)          | —  |
| ★4 times                          | X  | EH 32  | Lower indoor fan speed is operating outside of the normal range(for new console type)          | —  |
| ★ flash , ● light, X extinguished |    |        |  |    |

## 7.3 Outdoor Unit Display

### 7.3.1 Outdoor Unit Point Check Function

A check switch is included on the outdoor PCB.

Push SW1 to check the unit's status while running. The digital display shows the following codes each time the SW1 is pushed.

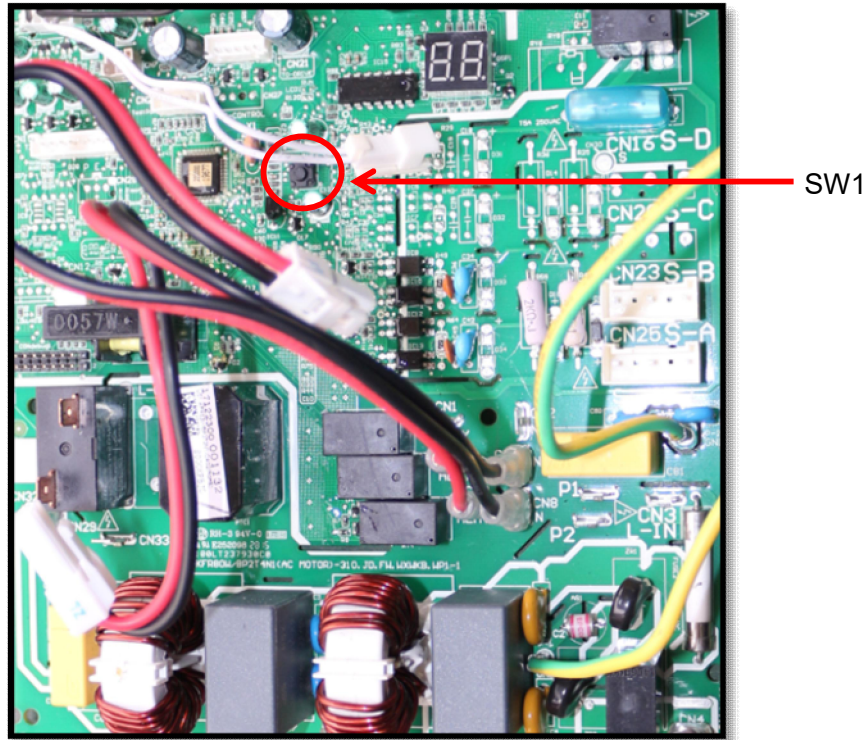

| Number of Presses | Display  | Remark   |         |                       |   |   |   |   |   |   |   |   |   |   |
|-------------------|--|--|---------|-----------------------|---|---|---|---|---|---|---|---|---|---|
| 0                 | Normal display                                   | Displays running frequency, running state, or malfunction code   |         |                       |   |   |   |   |   |   |   |   |   |   |
| 1                 | Quantity of indoor units with working connection | Actual data <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Display</th> <th>Number of indoor unit</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> </tr> <tr> <td>2</td> <td>2</td> </tr> <tr> <td>3</td> <td>3</td> </tr> <tr> <td>4</td> <td>4</td> </tr> <tr> <td>5</td> <td>5</td> </tr> </tbody> </table> | Display | Number of indoor unit | 1 | 1 | 2 | 2 | 3 | 3 | 4 | 4 | 5 | 5 |
| Display           | Number of indoor unit                            |  |         |                       |   |   |   |   |   |   |   |   |   |   |
| 1                 | 1  |  |         |                       |   |   |   |   |   |   |   |   |   |   |
| 2                 | 2  |  |         |                       |   |   |   |   |   |   |   |   |   |   |
| 3                 | 3  |  |         |                       |   |   |   |   |   |   |   |   |   |   |
| 4                 | 4  |  |         |                       |   |   |   |   |   |   |   |   |   |   |
| 5                 | 5  |  |         |                       |   |   |   |   |   |   |   |   |   |   |
| 2                 | Outdoor unit running mode code                   | Off: 0, Fan only: 1, Cooling: 2, Heating: 3, Forced cooling: 4, Forced defrost: A  |         |                       |   |   |   |   |   |   |   |   |   |   |
| 3                 | Indoor unit A capacity                           | The capacity unit is horse power. If the indoor unit is not connected, the digital display shows the following: "____"<br>(9K:1HP, 12K:1.2HP, 18K:1.5HP, 24K:2.0HP)  |         |                       |   |   |   |   |   |   |   |   |   |   |
| 4                 | Indoor unit B capacity                           |  |         |                       |   |   |   |   |   |   |   |   |   |   |
| 5                 | Indoor unit C capacity                           |  |         |                       |   |   |   |   |   |   |   |   |   |   |

|    |   |   |   |   |
|----|---|---|---|---|
| 6  | Indoor unit D capacity  | Norm code*HP<br>(9K: 1HP,12K: 1.2HP,18K: 1.5HP,24K:2.0HP)   |   |   |
| 7  | Indoor unit E capacity  |   |   |   |
| 8  | Indoor unit A capacity demand code  |   |   |   |
| 9  | Indoor unit B capacity demand code  |   |   |   |
| 10 | Indoor unit C capacity demand code  |   |   |   |
| 11 | Indoor unit D capacity demand code  |   |   |   |
| 12 | Indoor unit E capacity demand code  |   |   |   |
| 13 | Outdoor unit amandatory capacity demand code                                      |   |   |   |
| 14 | The frequency corresponding to the total indoor units' amandatory capacity demand |   |   |   |
| 15 | The frequency after the frequency limit   |   |   |   |
| 16 | The frequency sending to compressor control chip                                  |   |   |   |
| 17 | Indoor unit A evaporator outlet temperature (T <sub>2B</sub> A)                   | If the temperature is lower than -9 °C, the digital display shows "-9." If the temperature is higher than 70 °C, the digital display shows "70." If the indoor unit is not connected, the digital display shows: "——"   |   |   |
| 18 | Indoor unit B evaporator outlet temperature (T <sub>2B</sub> B)                   |   |   |   |
| 19 | Indoor unit C evaporator outlet temperature (T <sub>2B</sub> C)                   |   |   |   |
| 20 | Indoor unit D evaporator outlet temperature (T <sub>2B</sub> D)                   |   |   |   |
| 21 | Indoor unit E evaporator outlet temperature (T <sub>2B</sub> E)                   |   |   |   |
| 22 | Indoor unit A room temperature (T <sub>1</sub> A)                                 | If the temperature is lower than 0 °C, the digital display shows "0." If the temperature is higher than 50 °C, the digital display shows "50." If the indoor unit is not connected, the digital display shows: "——"   |   |   |
| 23 | Indoor unit B room temperature (T <sub>1</sub> B)                                 |   |   |   |
| 24 | Indoor unit C room temperature (T <sub>1</sub> C)                                 |   |   |   |
| 25 | Indoor unit D room temperature (T <sub>1</sub> D)                                 |   |   |   |
| 26 | Indoor unit E room temperature (T <sub>1</sub> E)                                 |   |   |   |
| 27 | Indoor unit A evaporator temperature (T <sub>2</sub> A)                           | If the temperature is lower than -9 °C, the digital display shows "-9." If the temperature is higher than 70 °C, the digital display shows "70." If the indoor unit is not connected, the digital display shows: "——"   |   |   |
| 28 | Indoor unit B evaporator temperature (T <sub>2</sub> B)                           |   |   |   |
| 29 | Indoor unit C evaporator temperature (T <sub>2</sub> C)                           |   |   |   |
| 30 | Indoor unit D evaporator temperature (T <sub>2</sub> D)                           |   |   |   |
| 31 | Indoor unit E evaporator temperature (T <sub>2</sub> E)                           |   |   |   |
| 32 | Condenser pipe temperature (T <sub>3</sub> )                                      |   |   |   |
| 33 | Outdoor ambient temperature (T <sub>4</sub> )                                     |   |   |   |
| 34 | Compressor discharge temperature (TP)   | The display value is between 30–129 °C. If the temperature is lower than 30 °C, the digital display shows "30." If the temperature is higher than 99 °C, the digital display shows single and double digits. For example, if the digital display shows "0.5", the compressor discharge temperature is 105 °C. |   |   |
| 35 | AD value of current   | The display value is a hex number.<br>For example, the digital display tube shows "Cd", it means AD value is 205.   |   |   |
| 36 | AD value of voltage   |   |   |   |
| 37 | EXV open angle for A indoor unit  | Actual data/4.<br>If the value is higher than 99, the digital display shows single and double digits.<br>For example, if the digital display shows "2.0", the EXV open angle is 120×4=480p.   |   |   |
| 38 | EXV open angle for B indoor unit  |   |   |   |
| 39 | EXV open angle for C indoor unit  |   |   |   |
| 40 | EXV open angle for D indoor unit  |   |   |   |
| 41 | EXV open angle for E indoor unit  |   |   |   |
| 42 | Frequency limit symbol  | Bit7  | Frequency limit caused by IGBT radiator | The display value is a hexadecimal number. For example, the digital display |
|    |   | Bit6  | Frequency limit caused by PFC           |   |
|    |   | Bit5  | Frequency limit caused by T4.           |   |

|    |   |   |                                   |   |
|----|---|---|-----------------------------------|---|
|    |   | Bit4  | Frequency limit caused by T2.     | show 2A, then Bit5=1, Bit3=1, and Bit1=1.<br>This means that a frequency limit may be caused by T4, T3, or the current. |
|    |   | Bit3  | Frequency limit caused by T3.     |   |
|    |   | Bit2  | Frequency limit caused by T5.     |   |
|    |   | Bit1  | Frequency limit caused by current |   |
|    |   | Bit0  | Frequency limit caused by voltage |   |
| 43 | Average value of T2   | (Sum T2 value of all indoor units)/(number of indoor units in good connection)                  |                                   |   |
| 44 | Outdoor unit fan motor state  | Off: 0, Super high speed:1, High speed:2, Med speed: 3, Low speed: 4, Breeze:5, Super breeze: 6 |                                   |   |
| 45 | The last error or protection code                                     | 00 means no malfunction and protection  |                                   |   |
| 46 | F indoor unit capacity  |   |                                   |   |
| 47 | F indoor unit capacity demand code                                    |   |                                   |   |
| 48 | F indoor unit evaporator outlet temperature (T <sub>2b</sub> F)       |   |                                   |   |
| 49 | F indoor unit room temperature (T <sub>1</sub> F)                     |   |                                   |   |
| 50 | F indoor unit evaporator temperature (T <sub>2</sub> F)               |   |                                   |   |
| 51 | EXV open angle for F indoor unit                                      |   |                                   |   |
| 52 | Reason of stop  |   |                                   |   |
| 53 | EVI valve target angle(only for M5OG-48HFN1-M-[X]& M5OA-55HFN1-M-[X]) | Actual data/4.  |                                   |   |
| 54 | EVI valve open angle(only for M5OG-48HFN1-M-[X]& M5OA-55HFN1-M-[X])   | If the value is higher than 99, the digital display tube will show single digit and tens digit. |                                   |   |
| 55 | MVI valve angle(only for M5OG-48HFN1-M-[X]& M5OA-55HFN1-M-[X])        | For example, the digital display tube show "2.0",it means the EXV open angle is 120×4=480p.)    |                                   |   |

For CMZ-18-2Z



| Number of Presses | Display  | Remark   |         |                       |   |   |   |   |   |   |
|-------------------|--|--|---------|-----------------------|---|---|---|---|---|---|
| 0                 | Normal display                                   | Displays running frequency, running state, or malfunction code   |         |                       |   |   |   |   |   |   |
| 1                 | Quantity of indoor units with working connection | Actual data <table border="1" style="margin-left: 20px;"> <tr> <th>Display</th> <th>Number of indoor unit</th> </tr> <tr> <td>1</td> <td>1</td> </tr> <tr> <td>2</td> <td>2</td> </tr> <tr> <td>3</td> <td>3</td> </tr> </table> | Display | Number of indoor unit | 1 | 1 | 2 | 2 | 3 | 3 |
| Display           | Number of indoor unit                            |  |         |                       |   |   |   |   |   |   |
| 1                 | 1  |  |         |                       |   |   |   |   |   |   |
| 2                 | 2  |  |         |                       |   |   |   |   |   |   |
| 3                 | 3  |  |         |                       |   |   |   |   |   |   |

|    |   |   |   |   |  |
|----|---|---|---|---|--|
|    |   |   | 4 | 4 |  |
|    |   |   | 5 | 5 |  |
| 2  | Outdoor unit running mode code  | Off: 0,Fan only: 1, Cooling: 2, Heating: 3, Forced cooling: 4. Forced defrost:A   |   |   |  |
| 3  | Indoor unit A capacity  | The capacity unit is horse power. If the indoor unit is not connected, the digital display shows the following: "____"<br>(9K:1HP,12K:1.2HP,18K:1.5HP,24K:2.0HP)  |   |   |  |
| 4  | Indoor unit B capacity  |   |   |   |  |
| 5  | Indoor unit C capacity  |   |   |   |  |
| 6  | Indoor unit D capacity  |   |   |   |  |
| 7  | Indoor unit E capacity  |   |   |   |  |
| 8  | Indoor unit A capacity demand code  | Norm code*HP<br>(9K: 1HP,12K: 1.2HP,18K: 1.5HP,24K:2.0HP)   |   |   |  |
| 9  | Indoor unit B capacity demand code  |   |   |   |  |
| 10 | Indoor unit C capacity demand code  |   |   |   |  |
| 11 | Indoor unit D capacity demand code  |   |   |   |  |
| 12 | Indoor unit E capacity demand code  |   |   |   |  |
| 13 | Outdoor unit amendatory capacity demand code                                      |   |   |   |  |
| 14 | The frequency corresponding to the total indoor units' amendatory capacity demand |   |   |   |  |
| 15 | The frequency after the frequency limit   |   |   |   |  |
| 16 | The frequency sending to compressor control chip                                  |   |   |   |  |
| 17 | Indoor unit A evaporator outlet temperature (T <sub>2B</sub> A)                   | If the temperature is lower than -9 °C, the digital display shows "-9." If the temperature is higher than 70 °C, the digital display shows "70." If the indoor unit is not connected, the digital display shows: "____"   |   |   |  |
| 18 | Indoor unit B evaporator outlet temperature (T <sub>2B</sub> B)                   |   |   |   |  |
| 19 | Indoor unit C evaporator outlet temperature (T <sub>2B</sub> C)                   |   |   |   |  |
| 20 | Indoor unit D evaporator outlet temperature (T <sub>2B</sub> D)                   |   |   |   |  |
| 21 | Indoor unit E evaporator outlet temperature (T <sub>2B</sub> E)                   |   |   |   |  |
| 22 | Indoor unit A room temperature (T <sub>1</sub> A)                                 | If the temperature is lower than 0 °C, the digital display shows "0." If the temperature is higher than 50 °C, the digital display shows "50." If the indoor unit is not connected, the digital display shows: "____"   |   |   |  |
| 23 | Indoor unit B room temperature (T <sub>1</sub> B)                                 |   |   |   |  |
| 24 | Indoor unit C room temperature (T <sub>1</sub> C)                                 |   |   |   |  |
| 25 | Indoor unit D room temperature (T <sub>1</sub> D)                                 |   |   |   |  |
| 26 | Indoor unit E room temperature (T <sub>1</sub> E)                                 |   |   |   |  |
| 27 | Indoor unit A evaporator temperature (T <sub>2</sub> A)                           | If the temperature is lower than -9 °C, the digital display shows "-9." If the temperature is higher than 70 °C, the digital display shows "70." If the indoor unit is not connected, the digital display shows: "____"   |   |   |  |
| 28 | Indoor unit B evaporator temperature (T <sub>2</sub> B)                           |   |   |   |  |
| 29 | Indoor unit C evaporator temperature (T <sub>2</sub> C)                           |   |   |   |  |
| 30 | Indoor unit D evaporator temperature (T <sub>2</sub> D)                           |   |   |   |  |
| 31 | Indoor unit E evaporator temperature (T <sub>2</sub> E)                           |   |   |   |  |
| 32 | Condenser pipe temperature (T3)   |   |   |   |  |
| 33 | Outdoor ambient temperature (T4)  |   |   |   |  |
| 34 | Compressor discharge temperature (TP)   | The display value is between 30–129 °C. If the temperature is lower than 30 °C, the digital display shows "30." If the temperature is higher than 99 °C, the digital display shows single and double digits. For example, if the digital display shows "0.5", the compressor discharge temperature is 105 °C. |   |   |  |
| 35 | AD value of current   | The display value is a hex number.<br>For example, the digital display tube shows "Cd", it means AD value is 205.   |   |   |  |
| 36 | AD value of AC voltage  |   |   |   |  |
| 37 | AD value of DC voltage  |   |   |   |  |
| 38 | EXV open angle for A indoor unit  | Actual data/4.  |   |   |  |

|    |                                  |   |                                    |   |
|----|----------------------------------|---|------------------------------------|---|
| 39 | EXV open angle for B indoor unit | If the value is higher than 99, the digital display shows single and double digits.<br>For example, if the digital display shows "2.0", the EXV open angle is 120×4=480p. |                                    |   |
| 40 | EXV open angle for C indoor unit |   |                                    |   |
| 41 | EXV open angle for D indoor unit |   |                                    |   |
| 42 | EXV open angle for E indoor unit |   |                                    |   |
| 43 | MVI valve open angle             |   |                                    |   |
| 44 | EVI valve open angle             |   |                                    |   |
| 45 | Frequency limit symbol           | Bit7  | Reserve                            | The display value is a hexadecimal number. For example, the digital display show 2A, then Bit5=1, Bit3=1, and Bit1=1.<br>This means that a frequency limit may be caused by current, IPM or T3. |
|    |                                  | Bit6  | Frequency limit caused by voltage  |   |
|    |                                  | Bit5  | Frequency limit caused by current. |   |
|    |                                  | Bit4  | Reserve.                           |   |
|    |                                  | Bit3  | Frequency limit caused by IPM.     |   |
|    |                                  | Bit2  | Frequency limit caused by T5.      |   |
|    |                                  | Bit1  | Frequency limit caused by T3       |   |
|    |                                  | Bit0  | Frequency limit caused by T2       |   |
| 46 | T2B fault                        | 00:No fault,01:T2B-A fault, ,02:T2B-B fault ,03:T2B-C fault,04:T2B-D fault, 05:T2B-E fault, 06:T2B-F fault(The display priority is A-B-C-D-E-F)                           |                                    |   |
| 47 | Average value of T2              | (Sum T2 value of all indoor units)/(number of indoor units in good connection)( The heating is the average value of T2, and the cooling is the average value of T2B)      |                                    |   |
| 48 | Outdoor unit fan motor state     | Off: 0, Super ultra high speed:1, Super high speed:2, High speed:3, Med speed: 4, Low speed: 5, Breeze:6, Super breeze: 7   |                                    |   |
| 49 | Reason of stop                   |   |                                    |   |

### 7.3.2 Outdoor Unit Digital Display

A digital display is featured on the outdoor PCB.

The LED displays different codes in the following situations:

- Standby: “- -.”
- Compressor operation: the running frequency.
- Defrosting mode: “dF” or alternative displays between running frequency and “dF” (ach appears for 0.5s.)
- Forced cooling mode: the LED displays “FC” or alternative displays between running frequency and “FC” (each appears for 0.5s).
- Compressor pre-heating: “PH” or alternative displays between running frequency and “PH” (each appears for 0.5s.)
- Oil return process: “RO” or alternative displays between running frequency and “RO” (each appears for 0.5s.)
- Low ambient cooling mode: “LC” or alternative displays between running frequency and “LC” (each appears for 0.5s.)
- PFC module protection occurs three times within 15 minutes: “E6” or alternates between displays of running frequency and “E6” (each appears for 0.5s.)
- In protection or malfunction, the LED displays an error code or protection code.  
“PH”, “RO”, “LC”, “E6” are not suitable for CMZ-18-2Z, CVH-18-2SH, CMZ-27-3Z, CVH-27-3SH, CMZ-48-4Z

### 7.3.3 Outdoor unit error display

For other models,

| Display | LED STATUS   | New indoor Error |
|---------|--|------------------|
| E0      | Outdoor unit EEPROM parameter error  | F4               |
| E2      | Communication malfunction between indoor and outdoor units   | E1               |
| E3      | Communication malfunction between IPM board and outdoor main control board   | —                |
| E4      | Outdoor temperature sensor (coil sensor T3, ambient sensor T4, Compressor discharge sensor T5、 indoor coil outlet pipe sensor T2B) malfunction | F2/F1/F3/F6      |
| E5      | Over-voltage or under-voltage protection   | P1               |
| E6      | PFC module protection  | —                |
| E8      | Outdoor fan speed malfunction  | F5               |
| F1      | No. A Indoor unit coil outlet temp. sensor malfunction   | —                |
| F2      | No. B Indoor unit coil outlet temp. sensor malfunction   | —                |
| F3      | No. C Indoor unit coil outlet temp. sensor malfunction   | —                |
| F4      | No. D Indoor unit coil outlet temp. sensor malfunction   | —                |
| F5      | No. E Indoor unit coil outlet temp. sensor malfunction   | —                |
| F6      | No. F Indoor unit coil outlet temp. sensor malfunction   | —                |
| P0      | High temperature protection of compressor top  | P2               |
| P1      | High pressure protection   | P6               |
| P2      | Low pressure protection  | P6               |
| P3      | Current overload protection  | F0               |
| P4      | Temperature protection of compressor discharge   | —                |
| P5      | Condenser high temperature protection  | —                |
| P6      | Inverter module (IPM) malfunction  | P0               |
| LP      | Low ambient temperature protection   | —                |
| Ed      | Communication malfunction between adapter board and outdoor main control board(only for CVH-48-5SH)  | —                |

CMZ-18-2Z, CVH-18-2SH, CMZ-27-3Z, CVH-27-3SH, CMZ-48-4Z, CVH-36-4SH, CVH-48-5SH,

CMZ-60-5Z, CVH-60-5SH

| Display | LED STATUS  |
|---------|---|
| EC 51   | Outdoor EEPROM malfunction  |
| EL 01   | Indoor / outdoor units communication error  |
| PC 40   | Communication malfunction between IPM board and outdoor main board                      |
| PC 08   | Outdoor overcurrent protection  |
| PC 10   | Outdoor unit low AC voltage protection  |
| PC 11   | Outdoor unit main control board DC bus high voltage protection                          |
| PC 12   | Outdoor unit main control board DC bus high voltage protection /341 MCE error           |
| PC 00   | IPM module protection   |
| PC 0F   | PFC module protection   |
| EC 71   | Over current failure of outdoor DC fan motor  |
| EC 72   | Lack phase failure of outdoor DC fan motor  |
| EC 07   | Outdoor fan speed has been out of control   |
| PC 43   | Outdoor compressor lack phase protection  |
| PC 44   | Outdoor unit zero speed protection  |
| PC 45   | Outdoor unit IR chip drive failure  |
| PC 46   | Compressor speed has been out of control  |
| PC 49   | Compressor overcurrent failure  |
| PC 30   | High pressure protection  |
| PC 31   | Low pressure protection   |
| PC 0A   | High temperature protection of condenser  |
| PC 06   | Temperature protection of compressor discharge  |
| PC 0L   | Low ambient temperature protection  |
| PC 02   | Top temperature protection of compressor  |
| EC 52   | Condenser coil temperature sensor T3 is in open circuit or has short circuited          |
| EC 53   | Outdoor room temperature sensor T4 is in open circuit or has short circuited            |
| EC 54   | Compressor discharge temperature sensor TP is in open circuit or has short circuited    |
| EC 55   | Outdoor IPM module temperature sensor TH is in open circuit or has short circuited      |
| EC 56   | Evaporator coil outlet temperature sensor T2B is in open circuit or has short circuited |
| EC 50   | Open or short circuit of outdoor unit temperature sensor(T3,T4.T5)                      |
| EL 16   | Communication malfunction between adapter board and outdoor main control board          |




## 7.4 Diagnosis and Solution

### 7.4.1 Indoor unit trouble shooting

#### 7.4.1.1 Indoor unit EEPROM parameter error diagnosis and solution.

|                               |   |
|-------------------------------|---|
| <b>Malfunction conditions</b> | Indoor or outdoor PCB main chip does not receive feedback from EEPROM chip.                 |
| <b>Potential causes</b>       | <ul style="list-style-type: none"><li>● Installation mistake</li><li>● Faulty PCB</li></ul> |

Trouble shooting:

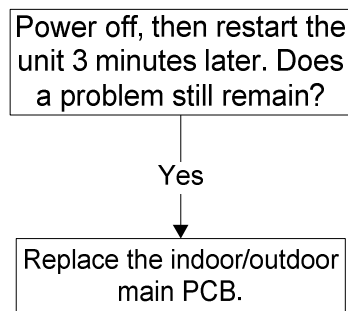



EEPROM: a type of read-only memory. The contents can be erased and reprogrammed using a pulsed voltage. To locate the EEPROM chip,.

### 7.4.1.2 Communication malfunction between indoor and outdoor units diagnosis and solution.

|                               |   |
|-------------------------------|---|
| <b>Malfunction conditions</b> | If indoor unit does not receive the feedback from outdoor unit during 120 seconds.                      |
| <b>Potential causes</b>       | <ul style="list-style-type: none"><li>● Wiring mistake</li><li>● Faulty indoor or outdoor PCB</li></ul> |


**Trouble shooting:**

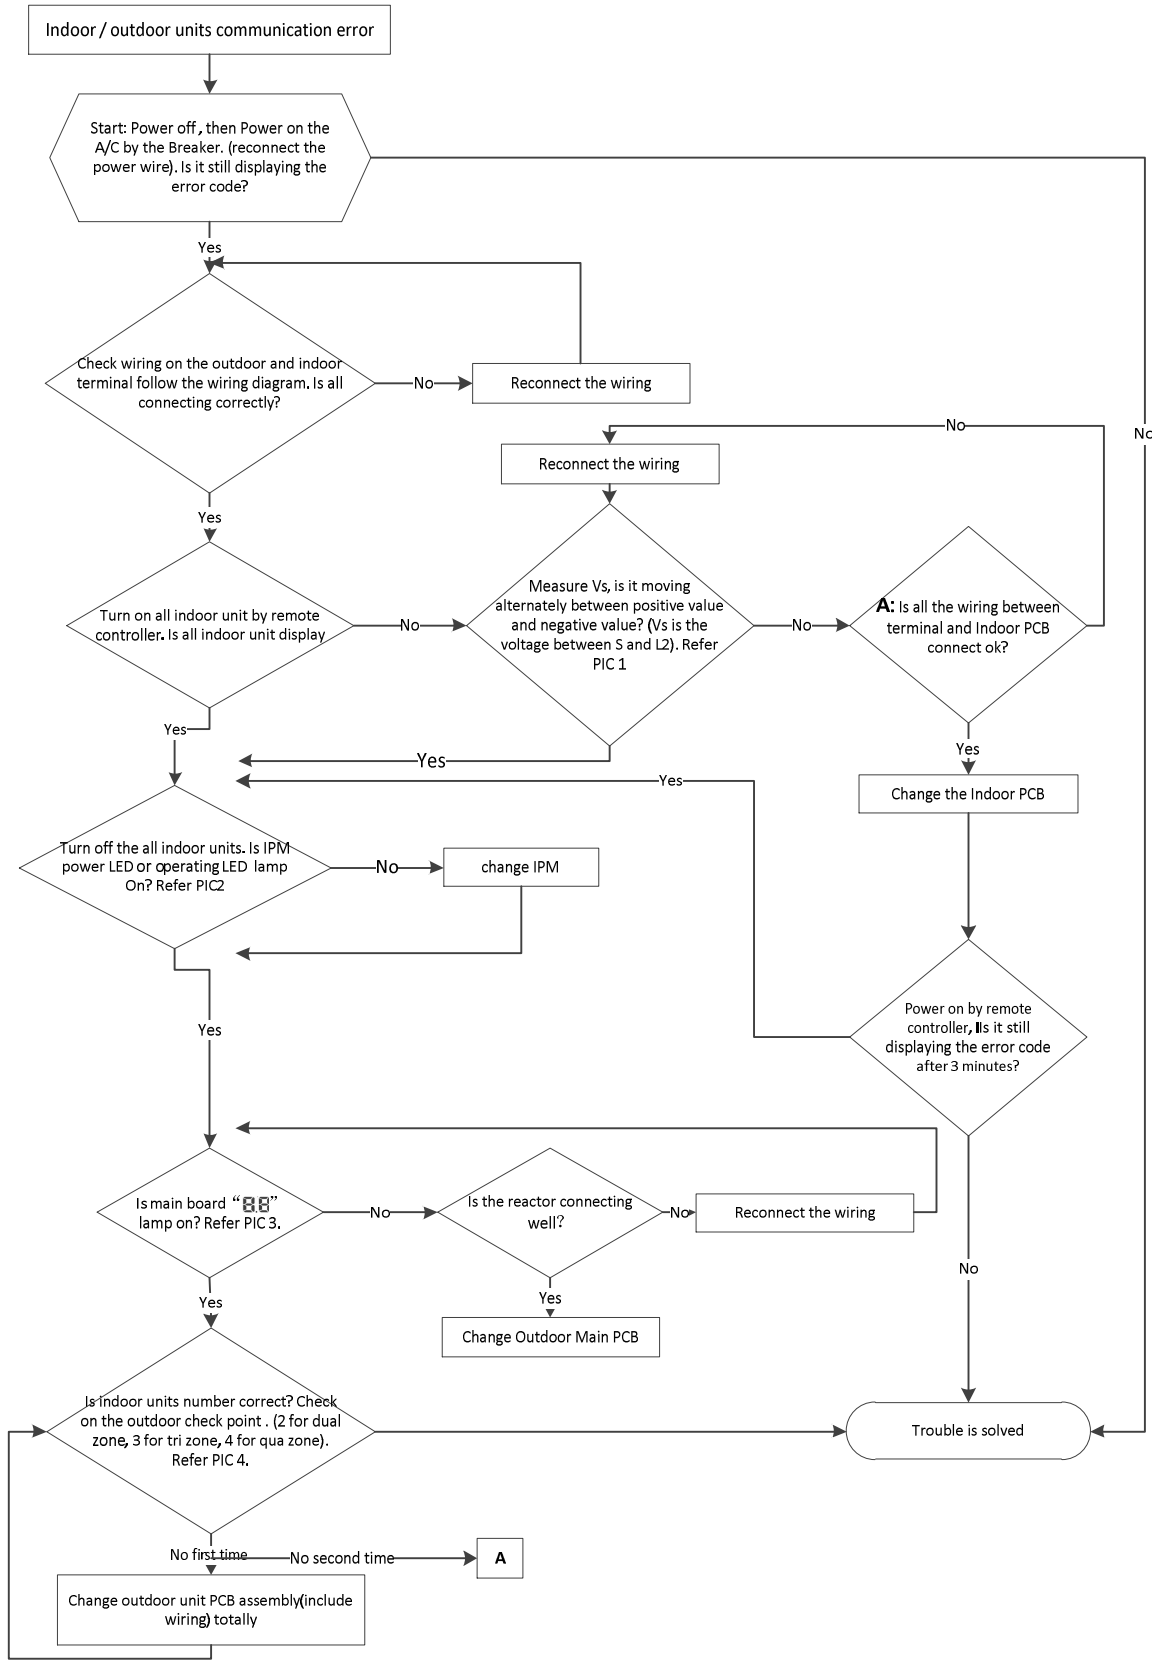

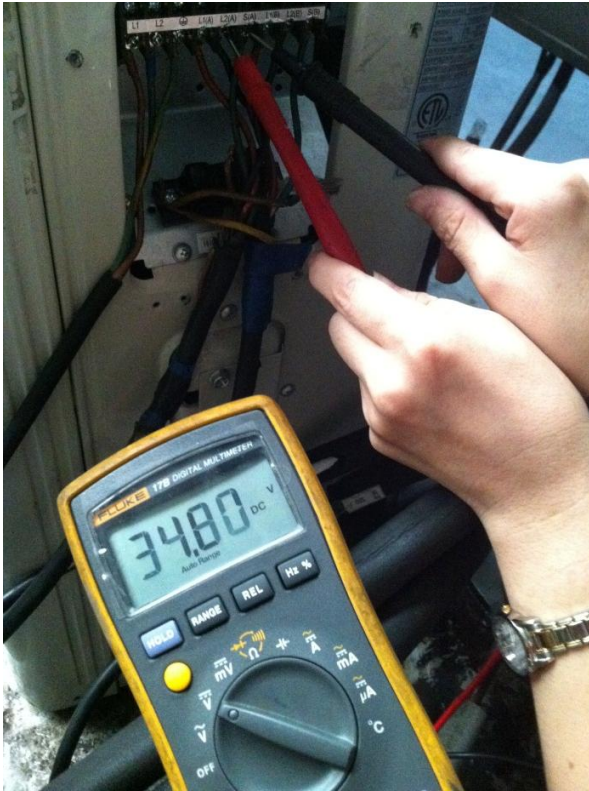

Pic 1: Use a multimeter to test the DC voltage between 2(old: L2) port and S port of outdoor unit. The red pin of multimeter connects with 2 (old: L2) port while the black pin is for S port.


When AC is normal running, the voltage will move alternately between positive value and negative value.

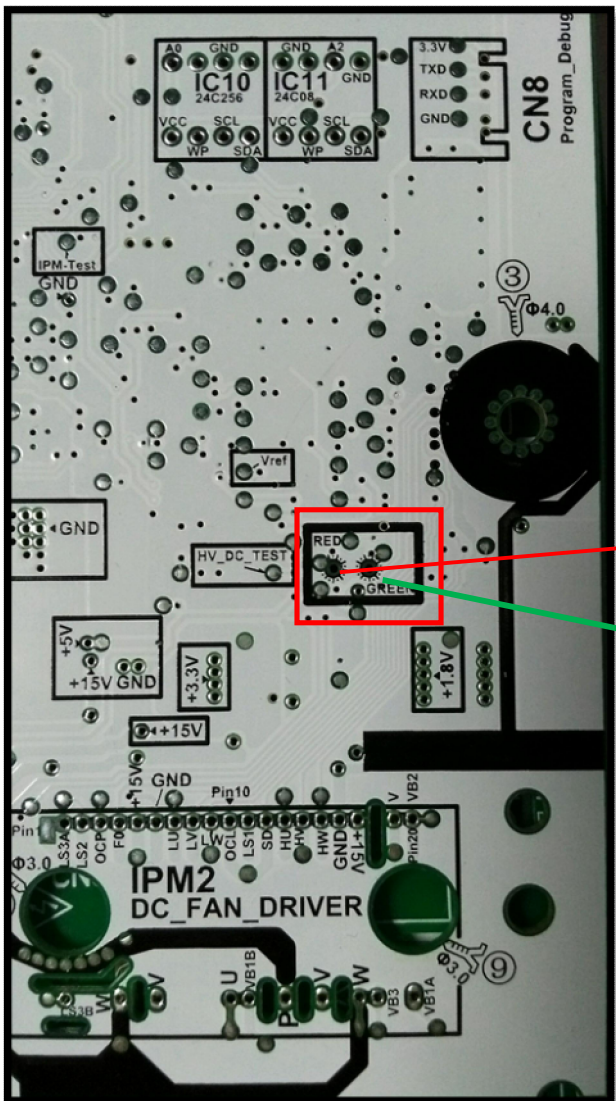

Pic 2: IPM (for 2 zone/ 3-zone)

Operating

Standby

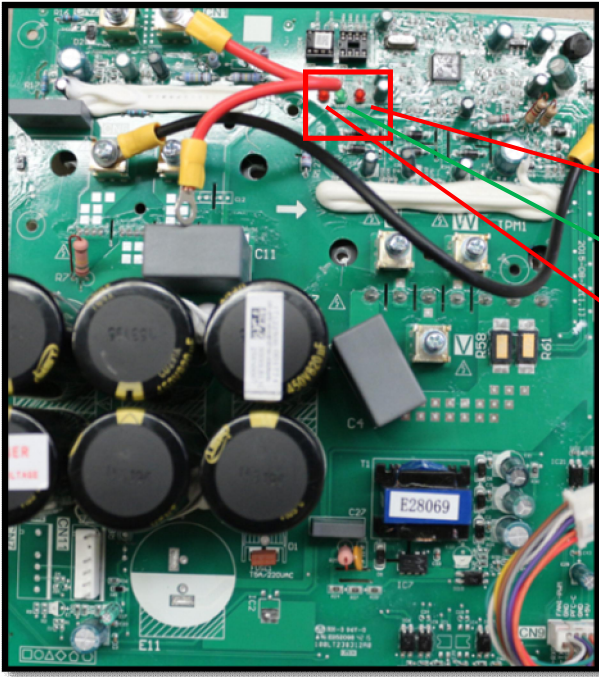


Pic 2: IPM (for 4 zone&5 zone)

- Operating
- Standby
- Power



PIC3: Main board LED when power on and unit standby.

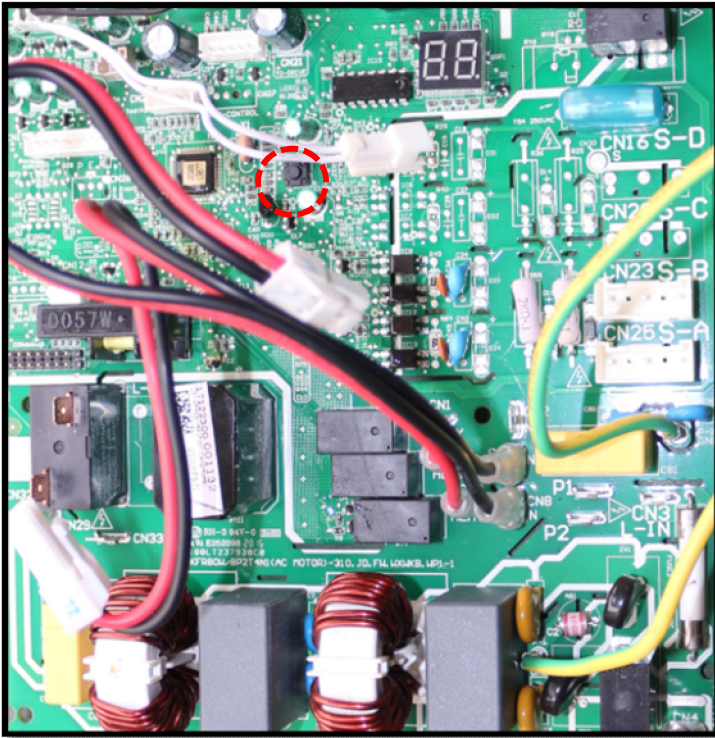


PIC 4: Check point button, press 1 time for check how many indoor units are connected.

#### 7.4.1.3 Zero-crossing signal detection error diagnosis and solution.

|                               |  |
|-------------------------------|--|
| <b>Malfunction conditions</b> | When PCB does not receive zero crossing signal feedback for 4 minutes or the zero crossing signal time interval is abnormal. |
| <b>Potential causes</b>       | <ul style="list-style-type: none"> <li>● Connection mistake</li> <li>● Faulty PCB</li> </ul>                                 |

#### Trouble shooting:

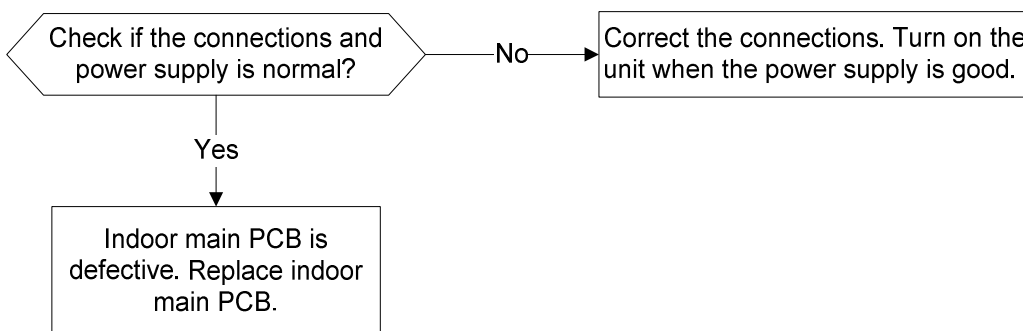




### 7.4.1.4 Indoor fan speed malfunction diagnosis and solution.

|                               |   |
|-------------------------------|---|
| <b>Malfunction conditions</b> | When indoor fan speed is too low (300RPM) for a certain period of time, the unit ceases operation and the LED displays a failure code.              |
| <b>Potential causes</b>       | <ul style="list-style-type: none"> <li>● Wiring mistake</li> <li>● Faulty fan assembly</li> <li>● Faulty fan motor</li> <li>● Faulty PCB</li> </ul> |

**Trouble shooting:**

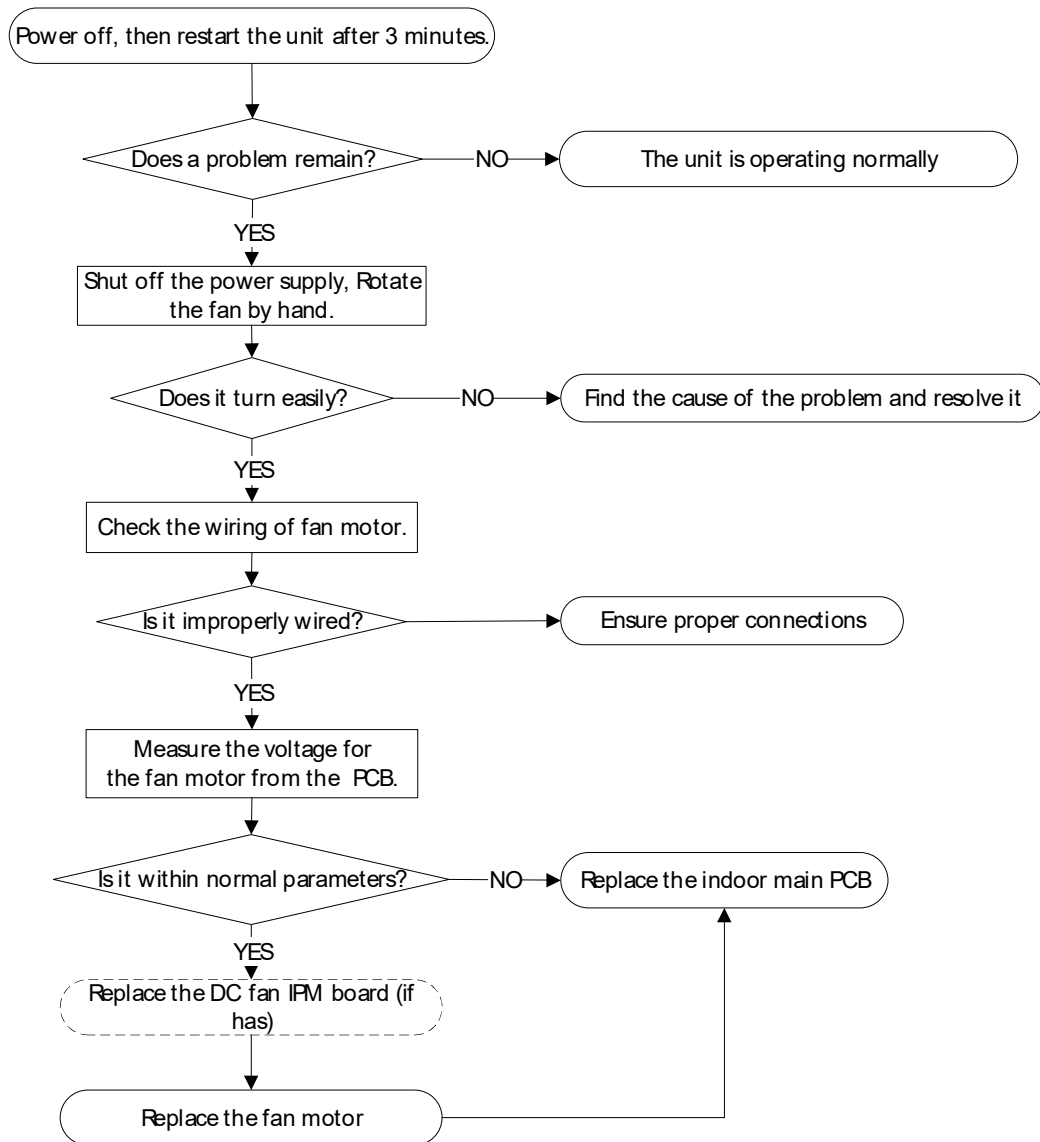




Index 1:

1: Indoor AC fan motor


Power on and set the unit running in fan mode at high fan speed. After running for 15 seconds, measure the voltage of pin1 and pin2. If the value of the voltage is less than 100V (208~240V power supply) or 50V (115V power supply), the PCB must have problems and need to be replaced.

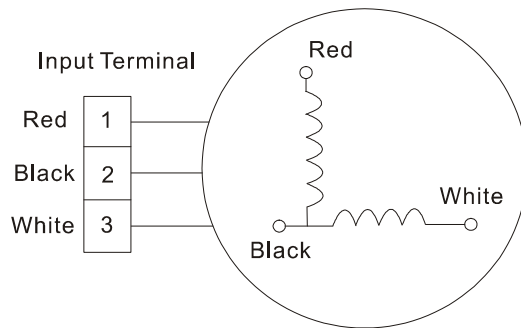

2. Indoor DC fan motor (control chip is inside fan motor)

Some models:

Power on and when the unit is in standby, measure the voltage of pin1-pin3, pin4-pin3 in fan motor connector. If the value of the voltage is not in the range showing in below table, the PCB must have problems and need to be replaced.

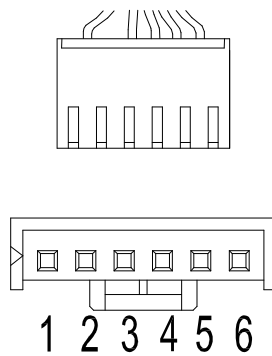


DC motor voltage input and output

| NO. | Color  | Signal | Voltage    |
|-----|--------|--------|------------|
| 1   | Red    | Vs/Vm  | 200V~380V  |
| 2   | ---    | ---    | ---        |
| 3   | Black  | GND    | 0V         |
| 4   | White  | Vcc    | 13.5~16.5V |
| 5   | Yellow | Vsp    | 0~6.5V     |
| 6   | Blue   | FG     | 13.5~16.5V |

some models:

Power on and when the unit is in standby, measure the voltage of pin1&pin2 of CN15, pin3 of CN34 in fan motor connector. If the value of the voltage is not in the range showing in below table, the PCB must has problems and need to be replaced.

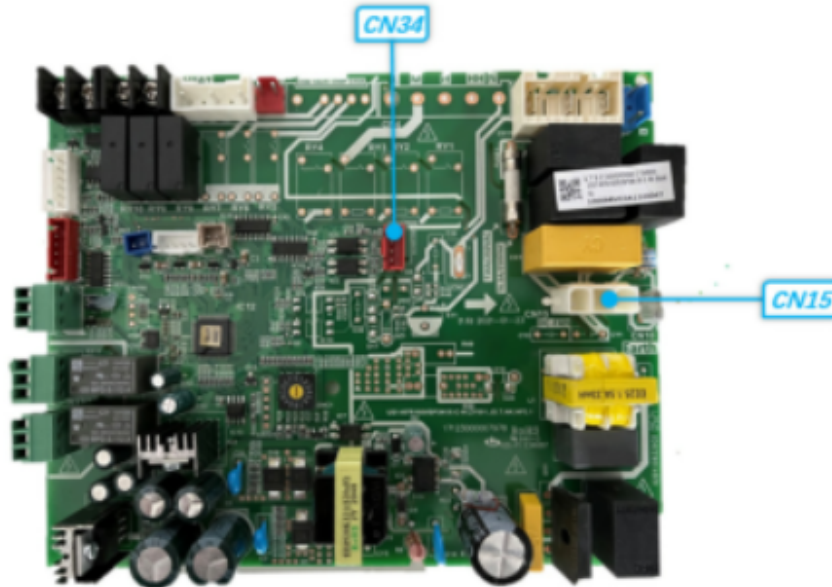


| CN34 NO. | Color  | Signal | Voltage |
|----------|--------|--------|---------|
| 1        | ---    | ---    |         |
| 2        | Black  | GND    |         |
| 3        | Orange | PWM    | 5-12VDC |
| 4        | Blue   | FG     |         |

| CN15 NO. | Color        | Signal | Voltage    |
|----------|--------------|--------|------------|
| 1        | Yellow       |        | 208/230VAC |
| 2        | Black        |        | 208/230VAC |
| 3        | Yellow-Green | GND    |            |


### 3. Indoor DC Fan IPM Board (Duct and Ceiling-floor Unit)

Power on and when the unit is in standby, measure the voltage of CON1, pin1-pin2 and pin3-pin2 of CN1 in DC motor driver board. If the value of the voltage is not in the range showing in below tables, the indoor main PCB must has problems and need to be replaced.

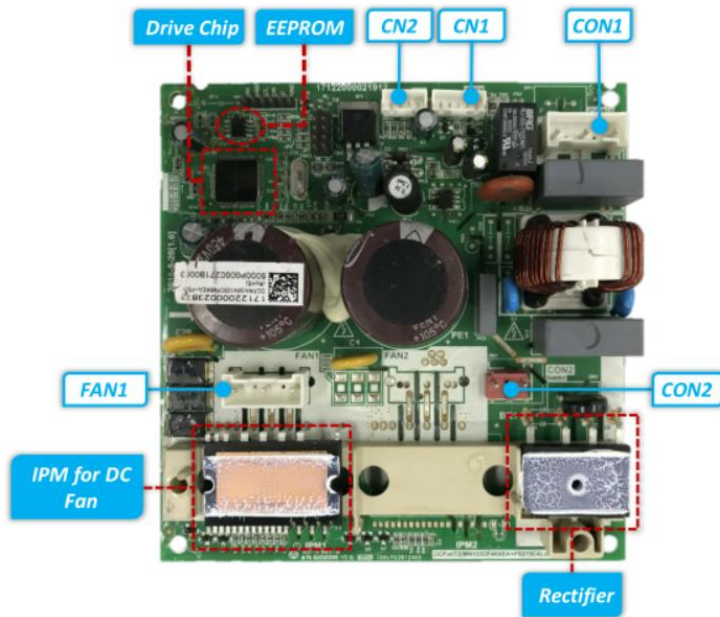

| Part | Description                 | Parameter | Remark              |
|------|-----------------------------|-----------|---------------------|
| CON1 | Power input for the PCB     | 230V/DC   |                     |
| CN1  | Communication with main PCB | DC        |                     |
| CN2  | Test port                   | 5V/DC     | For debugging board |
| CN23 | UVW output for DC fan motor |           |                     |
| CON2 | Ports for reactor           |           |                     |

CN1 Communication with main PCB

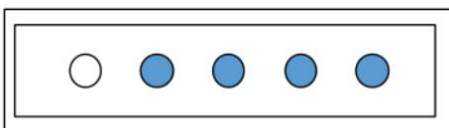



**5 4 3 2 1**

| NO. | Signal | Voltage |
|-----|--------|---------|
| 1   | Vcc    | +15V    |
| 2   | GND    |         |
| 3   | TXD    | 0~6V    |
| 4   | RXD    | 0~15V   |
| 5   | ---    | ---     |

### 7.4.1.5 Temperature sensor malfunction diagnosis and solution.

|                               |   |
|-------------------------------|---|
| <b>Malfunction conditions</b> | If the sampling voltage is lower than 0.06V or higher than 4.94V, the LED displays a failure.                 |
| <b>Potential causes</b>       | <ul style="list-style-type: none"><li>● Wiring mistake</li><li>● Faulty sensor</li><li>● Faulty PCB</li></ul> |


#### Trouble shooting:

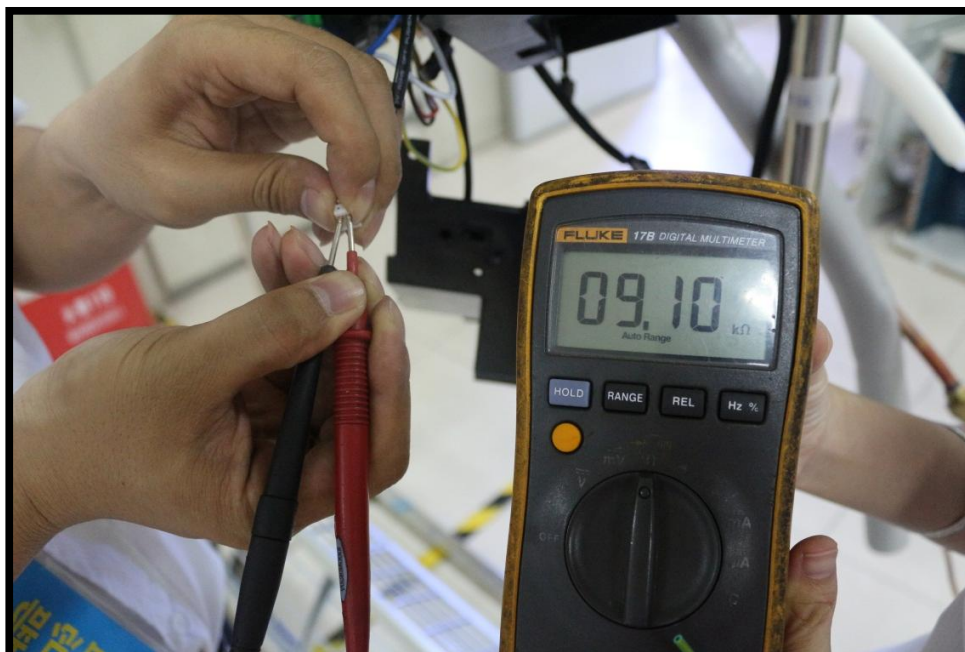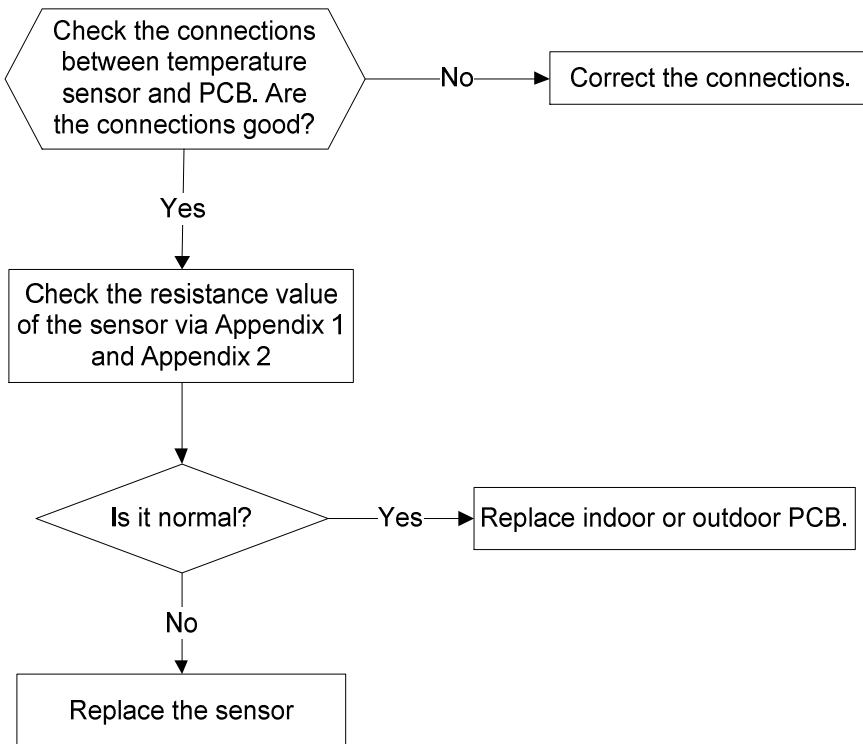


#### 7.4.1.6 Inverter module (IPM) malfunction diagnosis and solution.

|                               |  |
|-------------------------------|--|
| <b>Malfunction conditions</b> | When the voltage signal that IPM send to compressor drive chip is abnormal, the display LED will show “P6” and AC will turn off.   |
| <b>Potential causes</b>       | <ul style="list-style-type: none"><li>● Wiring mistake</li><li>● IPM malfunction</li><li>● Faulty outdoor fan assembly</li><li>● Compressor malfunction</li><li>● Faulty outdoor PCB</li></ul> |

**Trouble shooting:**

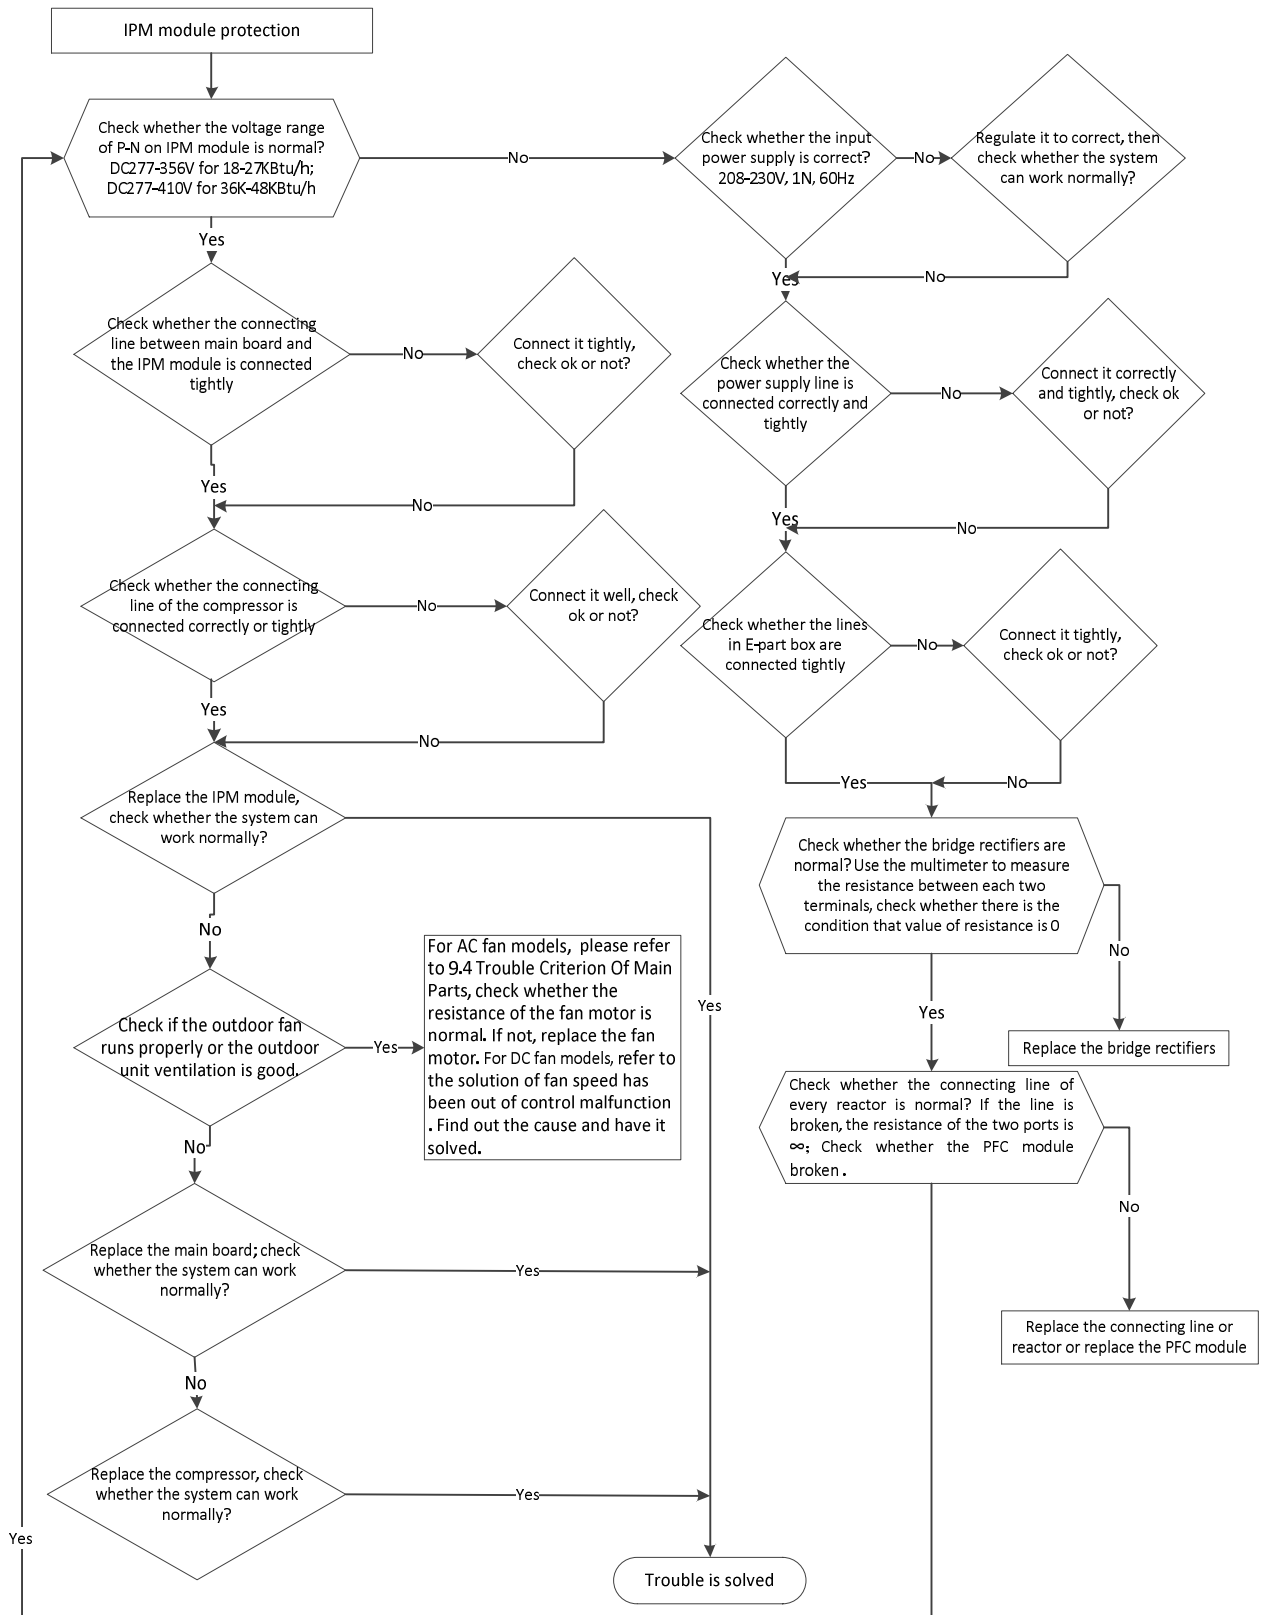

**7.4.1.7 Over-voltage or under-voltage protection diagnosis and solution.**  
**Outdoor unit low AC voltage protection**  
**Outdoor unit main control board DC bus high voltage protection**  
**Outdoor unit main control board DC bus high voltage protection /341 MCE error**

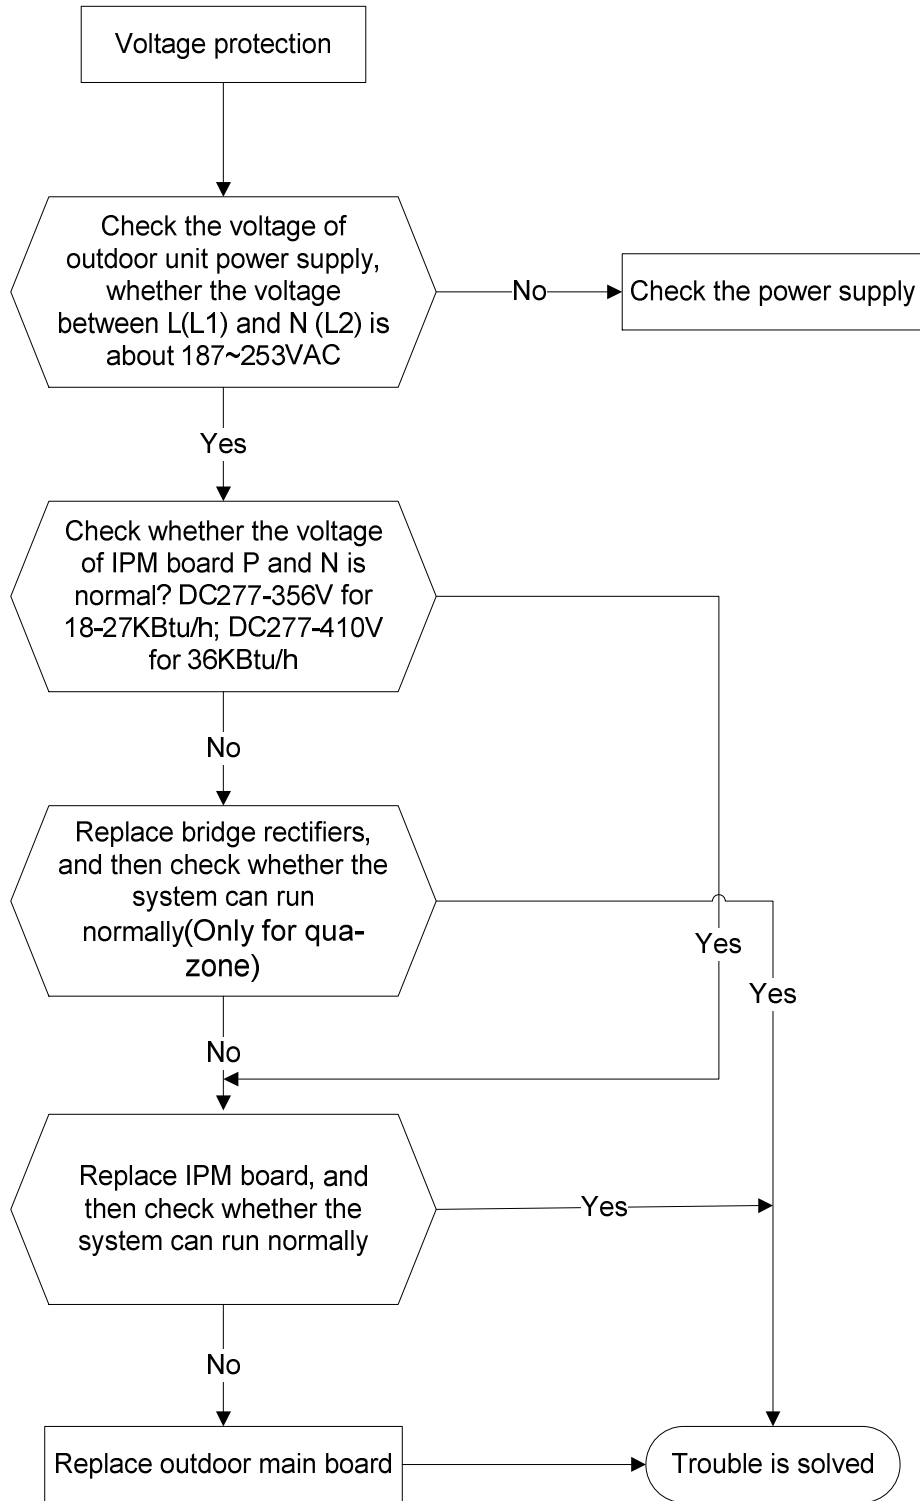


### 7.4.1.8 Compressor drive malfunction diagnosis and solution

The trouble shooting is same with one of IPM module protection.

### 7.4.1.9 Water-level alarm malfunction diagnosis and solution

|                               |  |
|-------------------------------|--|
| <b>Malfunction conditions</b> | If the sampling voltage is not 5V, the LED will display the failure code.  |
| <b>Potential causes</b>       | <ul style="list-style-type: none"> <li>● Wiring mistakes</li> <li>● Faulty water-level switch</li> <li>● Faulty water pump</li> <li>● Faulty indoor PCB</li> </ul> |

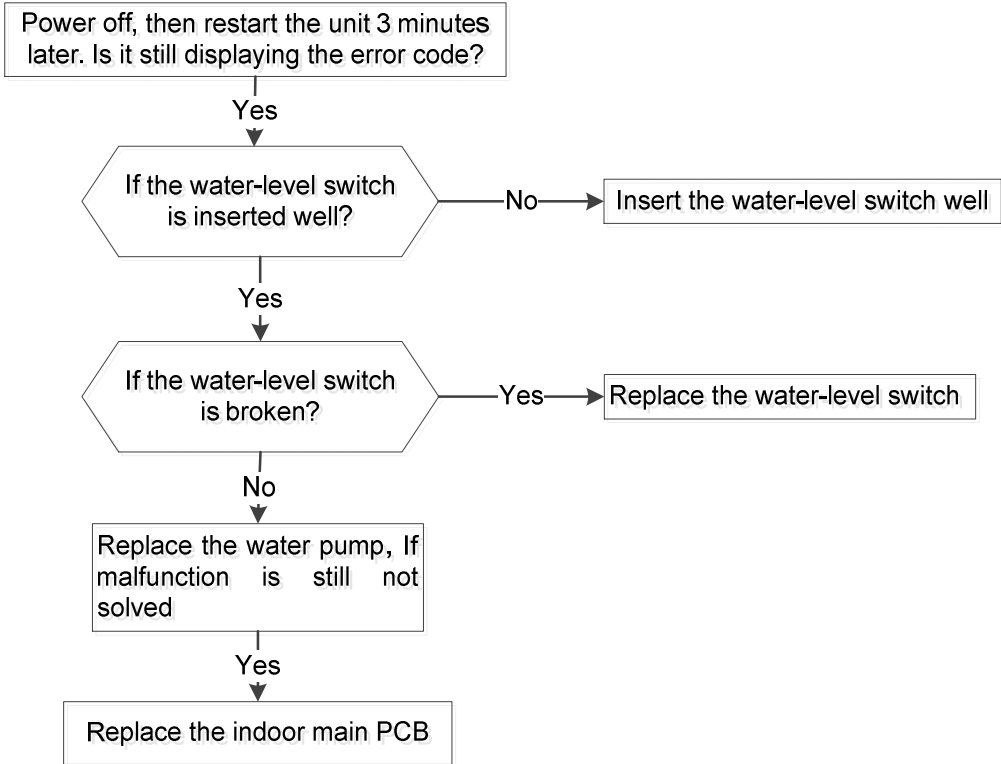



#### 7.4.1.10 Indoor units mode conflict


|                               |   |
|-------------------------------|---|
| <b>Error Code</b>             | <b>P5(old model) or - -(new model)</b>  |
| <b>Malfunction conditions</b> | The indoor units cannot work cooling mode and heating at same time.<br>Heating mode has a priority.   |
| <b>Potential causes</b>       | <ul style="list-style-type: none"> <li>● Suppose Indoor unit A working in cooling mode or fan mode, and indoor unit B is set to heating mode, then A will change to off and B will work in heating mode.</li> <li>● Suppose Indoor unit A working in heating mode, and indoor unit B is set to cooling mode or fan mode, then B will change to stand by and A will be no change.</li> </ul> |

|              | Cooling mode | Heating Mode | Fan | Off |
|--------------|--------------|--------------|-----|-----|
| Cooling mode | No           | Yes          | No  | No  |
| Heating Mode | Yes          | No           | Yes | No  |
| Fan          | No           | Yes          | No  | No  |
| Off          | No           | No           | No  | No  |


No: No mode conflict;

Yes: Mode conflict


### 7.4.1.11 High temperature protection of IPM board diagnosis and solution

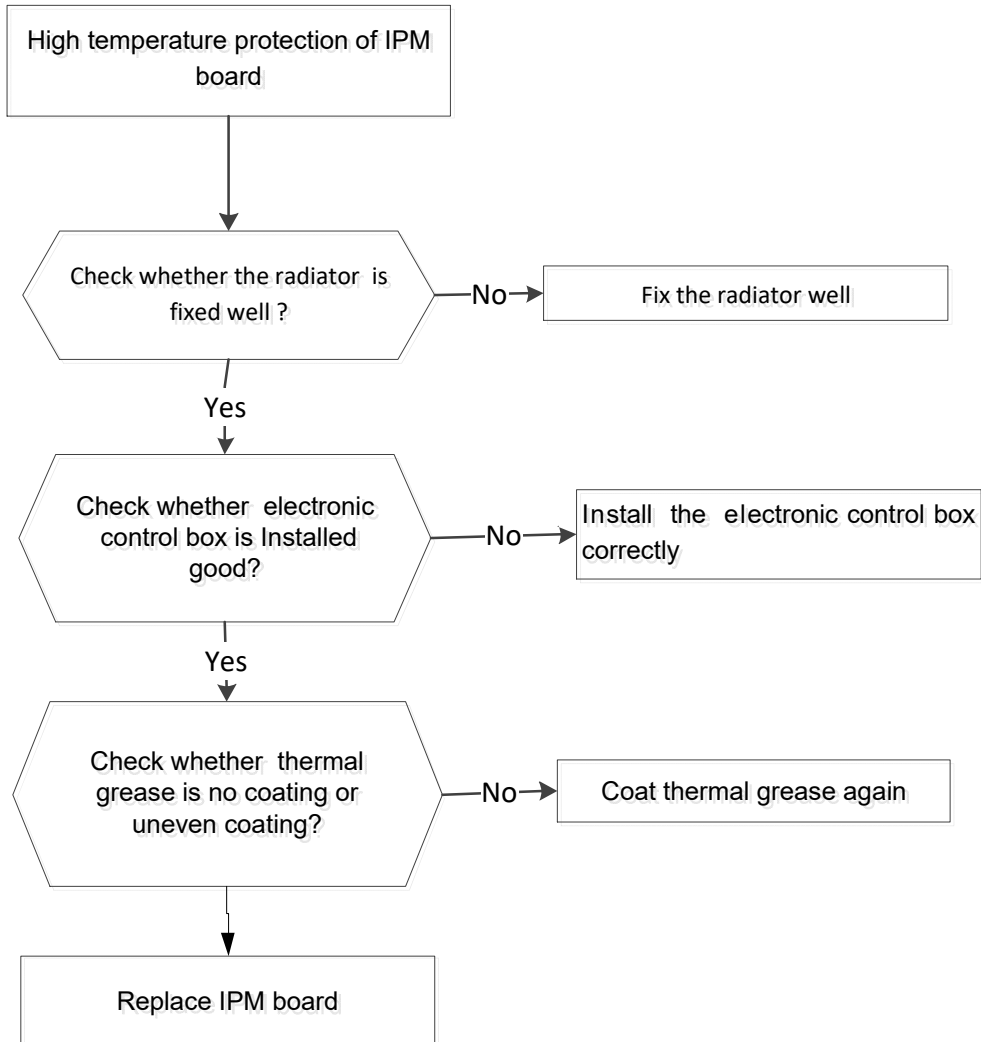


### 7.4.1.12 Communication error between the indoor PCB and display board

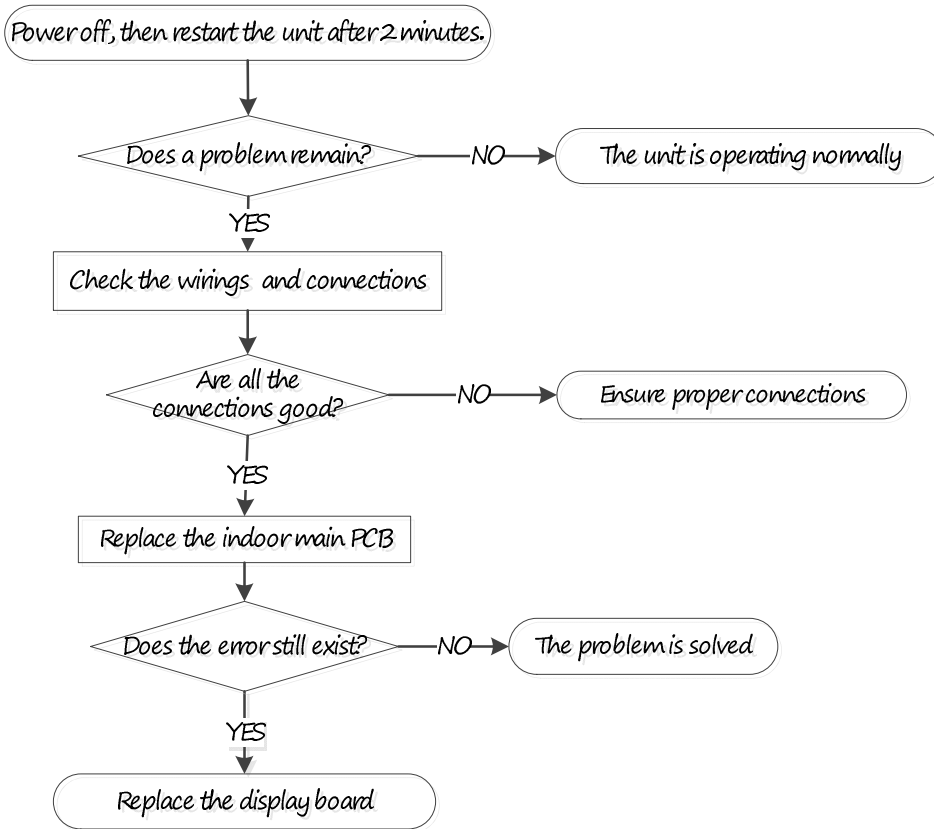

### 7.4.1.13 Refrigerant Leakage Detection

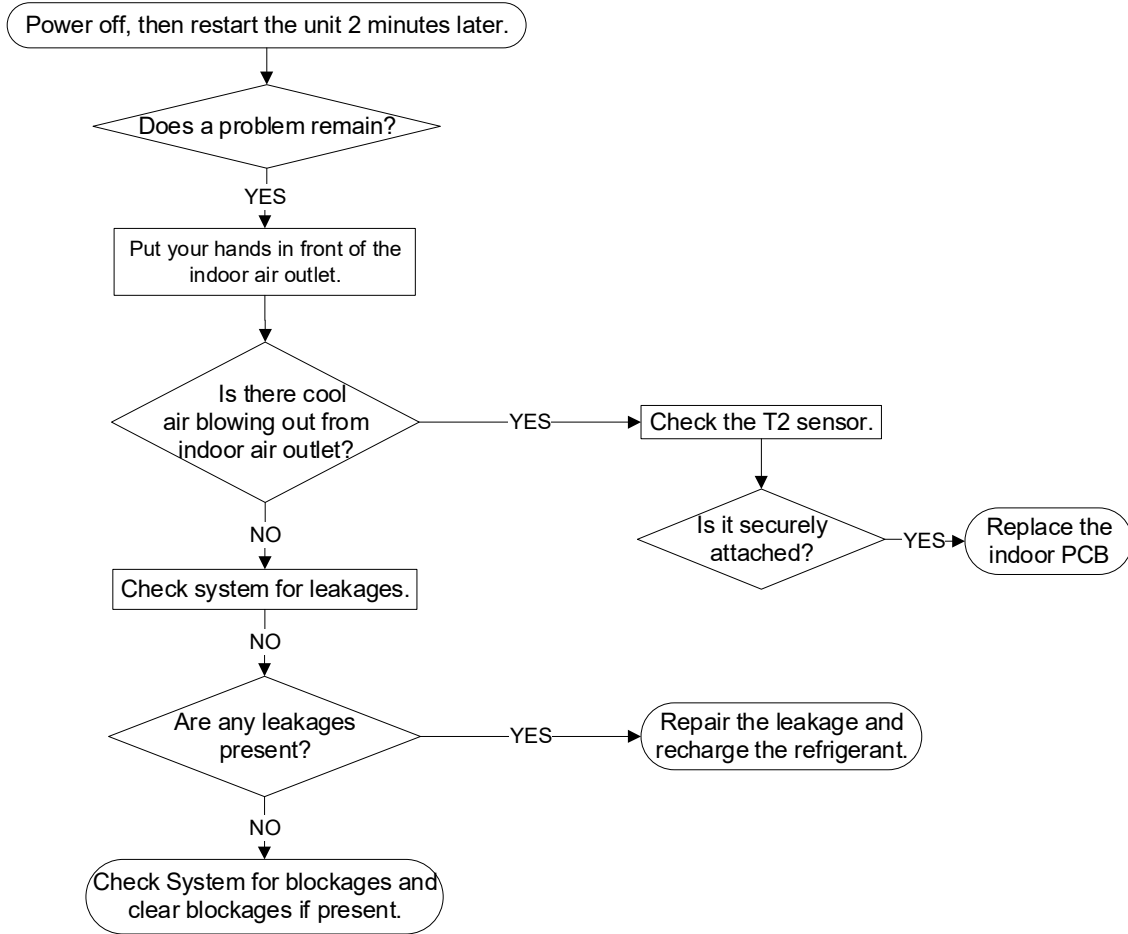


#### 7.4.1.14 Communication malfunction between indoor two chips

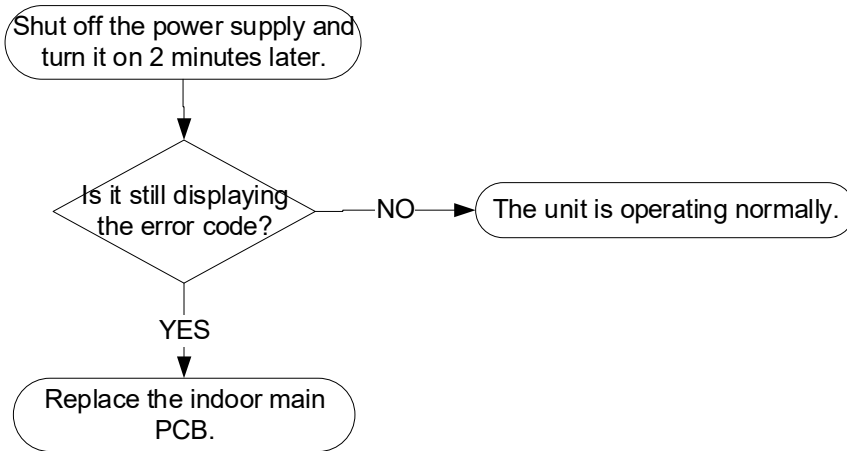


### 7.4.1.15 Communication malfunction between adapter board and outdoor main board diagnosis and solution(EL 16)

|                               |   |
|-------------------------------|---|
| <b>Malfunction conditions</b> | The adapter PCB cannot detect the main control board.   |
| <b>Potential causes</b>       | <ul style="list-style-type: none"> <li>● Wiring mistakes</li> <li>● Faulty adapter board</li> <li>● Faulty outdoor PCB</li> </ul> |

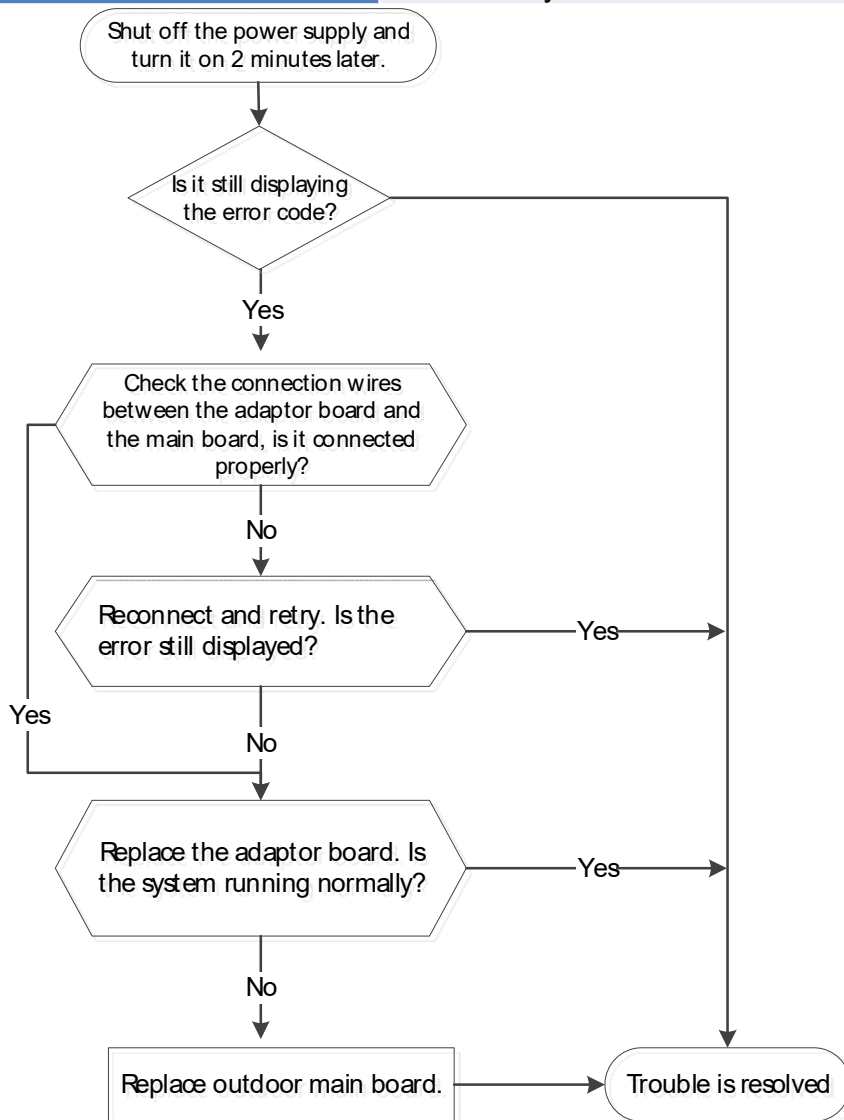

**7.4.1.16** Communication malfunction between external fan module and indoor unit or External fan DC bus voltage is too low protection or External fan DC bus voltage is too high fault diagnosis and solution(EH bA/EH 3A/EH 3b)

|                               |   |
|-------------------------------|---|
| <b>Malfunction conditions</b> | EH bA: Indoor unit does not receive the feedback from external fan module during 150 seconds.<br><br>EH 3A/EH 3b: Indoor unit receives abnormal increases or decreases in voltage from external fan module. |
| <b>Potential causes</b>       | ● Faulty indoor PCB   |

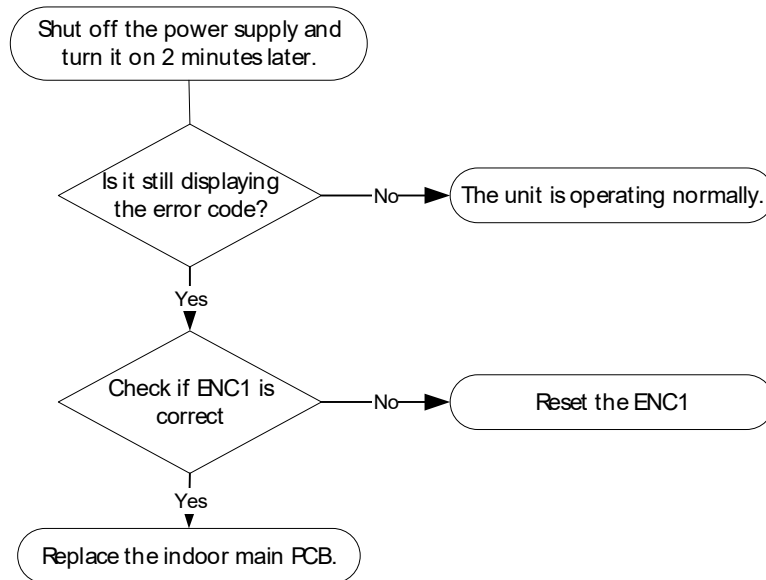


## 7.4.2 Outdoor unit trouble shooting


### 7.4.2.1 E0/ EC 51 (Outdoor unit EEPROM parameter error) diagnosis and solution

|                               |   |
|-------------------------------|---|
| <b>Error Code</b>             | <b>E0/ EC 51</b>  |
| <b>Malfunction conditions</b> | PCB main chip does not receive feedback from EEPROM chip                                    |
| <b>Potential causes</b>       | <ul style="list-style-type: none"><li>● Installation mistake</li><li>● Faulty PCB</li></ul> |

Trouble shooting:

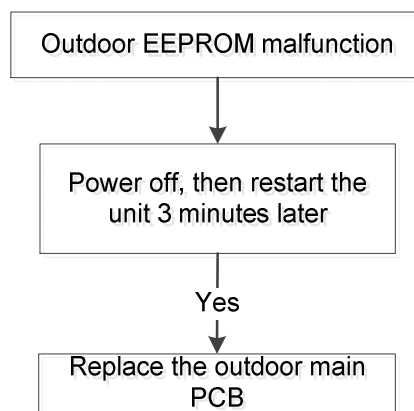

EEPROM: a type of read-only memory. The contents can be erased and reprogrammed using a pulsed voltage. The location of the EEPROM chip on the outdoor PCB is shown in the following image:

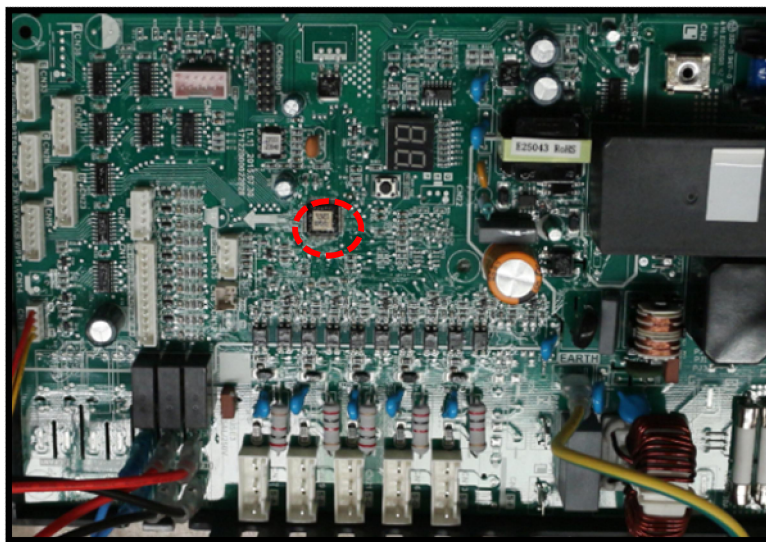





**7.4.2.2 E2/ EL 01 (Communication malfunction between indoor and outdoor units) diagnosis and solution.**

|                               |   |
|-------------------------------|---|
| <b>Error Code</b>             | <b>E2/ EL 01</b>  |
| <b>Malfunction conditions</b> | Indoor unit does not receive the feedback from outdoor unit during 120 seconds or outdoor unit does not receive the feedback from any one indoor unit during 180 seconds. |
| <b>Potential causes</b>       | <ul style="list-style-type: none"><li>● Wiring mistake</li><li>● Faulty Indoor or outdoor PCB</li></ul>   |


**Trouble shooting:**

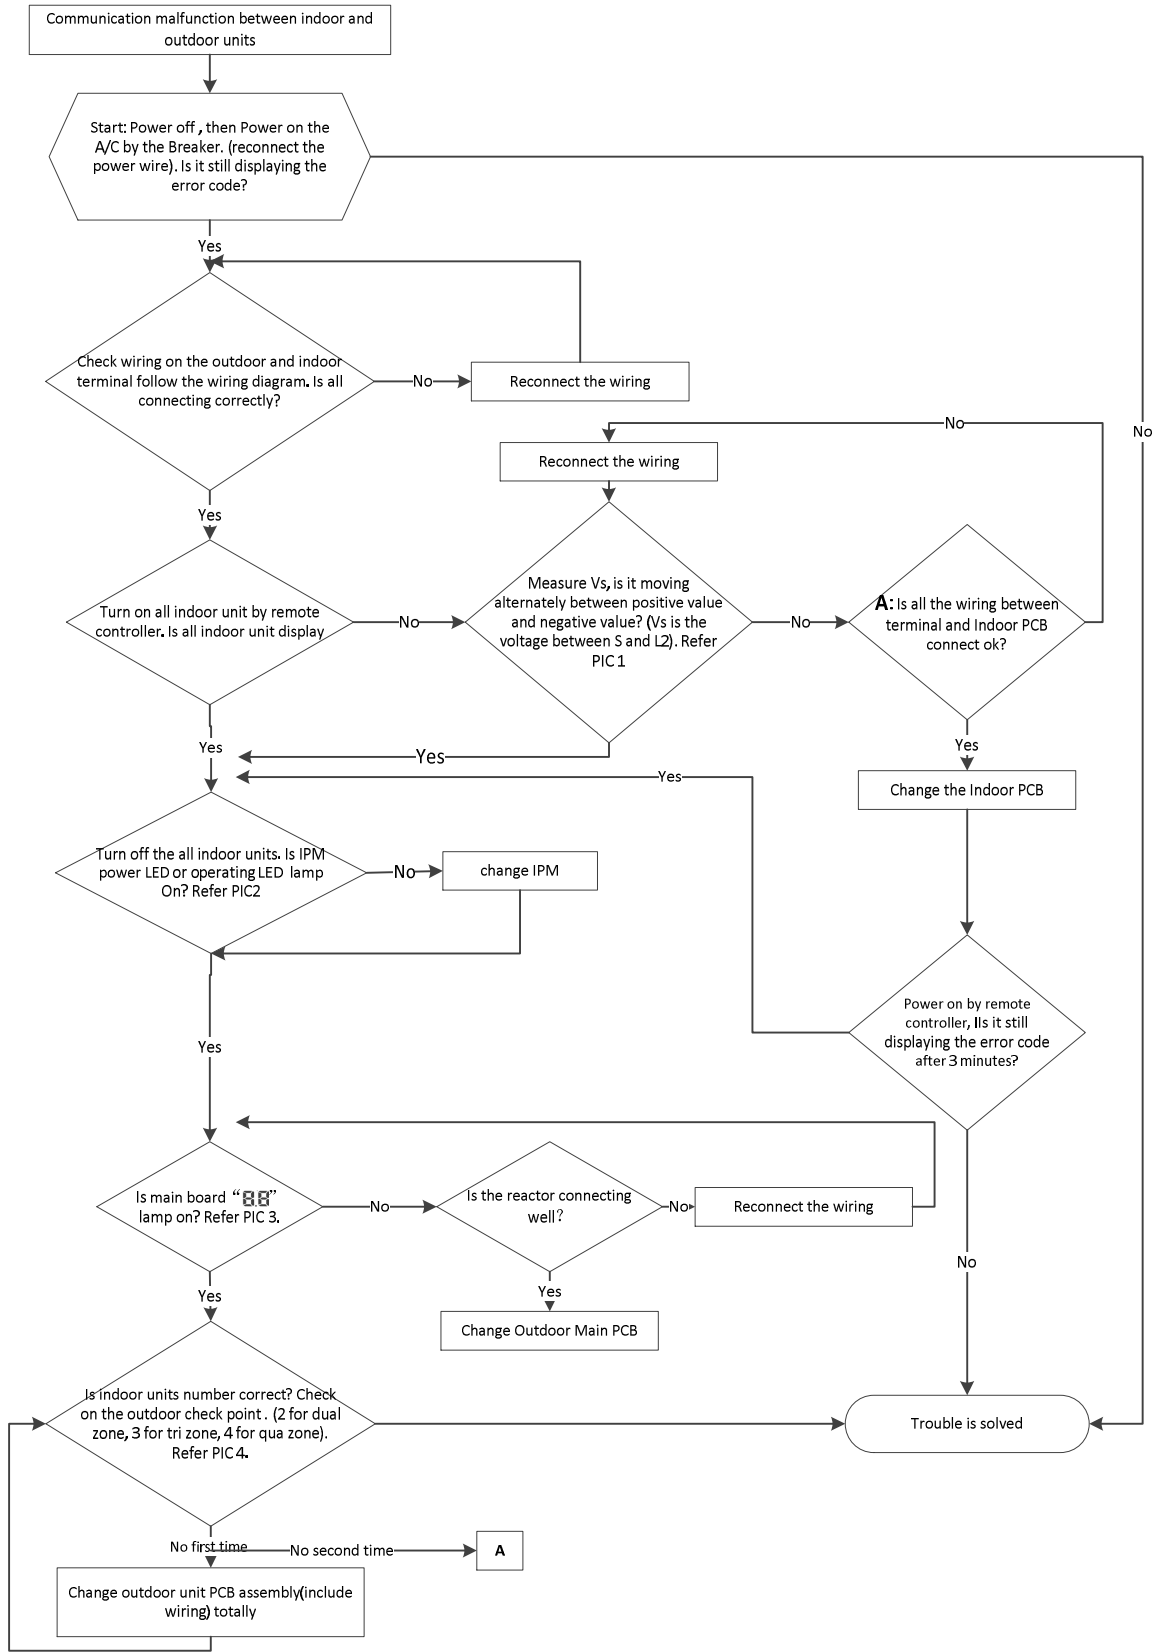

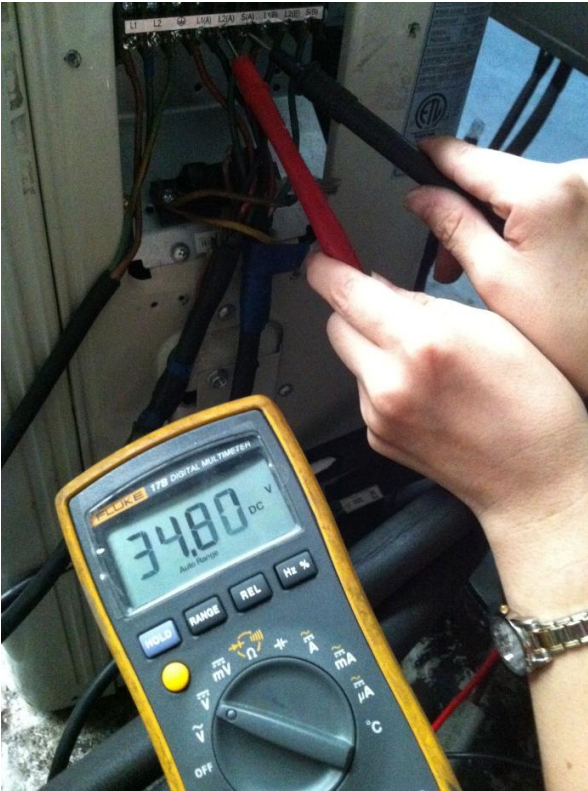

Pic 1: Use a multimeter to test the DC voltage between 2(old: L2) port and 3 port of outdoor unit. The red pin of multimeter connects with 2 (old: L2) port while the black pin is for 3 port.


When AC is normal running, the voltage will move alternately between positive value and negative value.

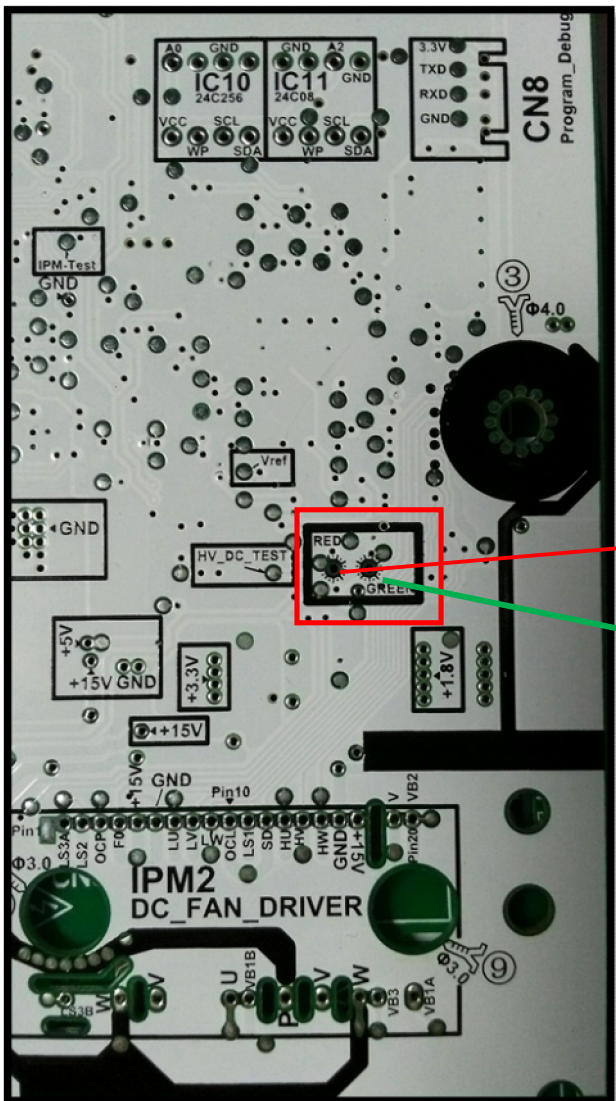

Pic 2: IPM board (for 2 zone/ 3-zone)

Operating

Standby

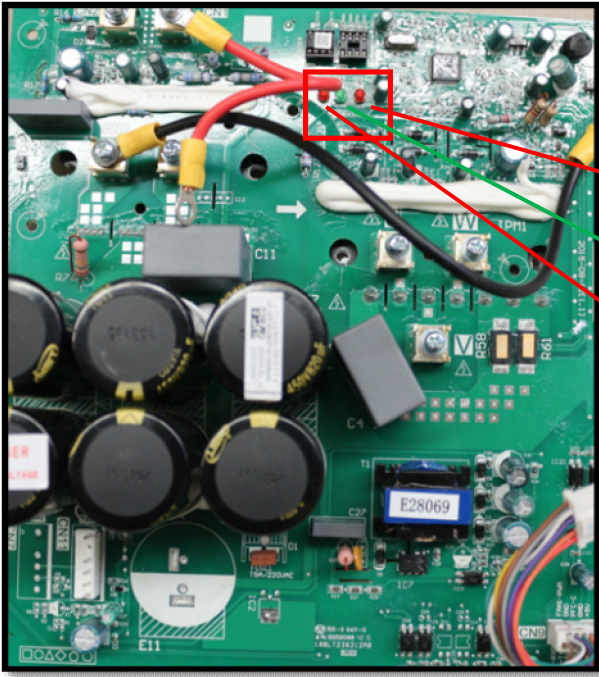


Pic 2: IPM (for 4 zone & 5 zone)

- Operating
- Standby
- Power



PIC3: Main board LED when power on and unit standby.

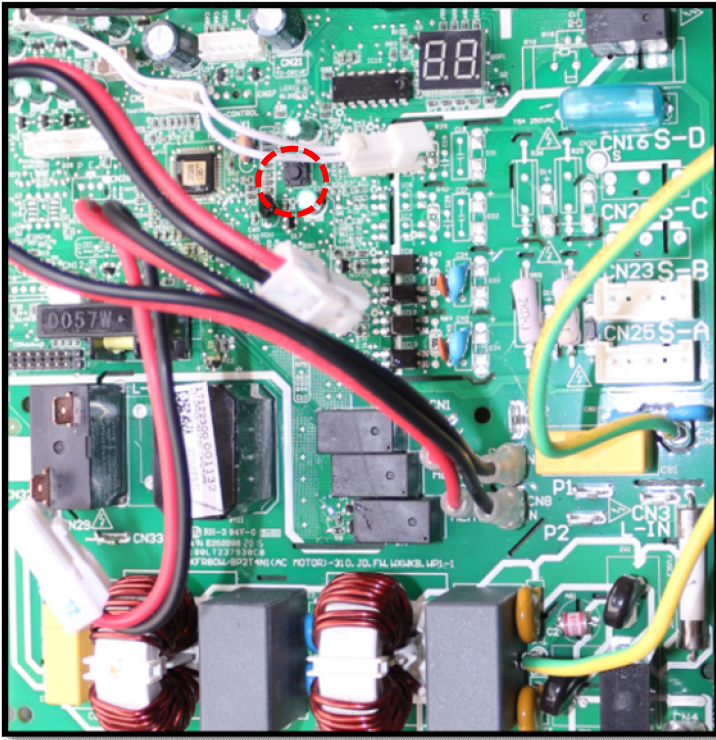


PIC 4: Check point button, press 1 time for check how many indoor units are connected.


**7.4.2.3 E3/ PC 40 (Communication malfunction between IPM board and outdoor main control board) diagnosis**

|                               |  |
|-------------------------------|--|
| <b>Error Code</b>             | <b>E3/ PC 40</b>   |
| <b>Malfunction conditions</b> | PCB main chip does not receive feedback from IPM module during 60 seconds.               |
| <b>Potential causes</b>       | <ul style="list-style-type: none"> <li>● Wiring mistake</li> <li>● Faulty PCB</li> </ul> |

**Trouble shooting:**

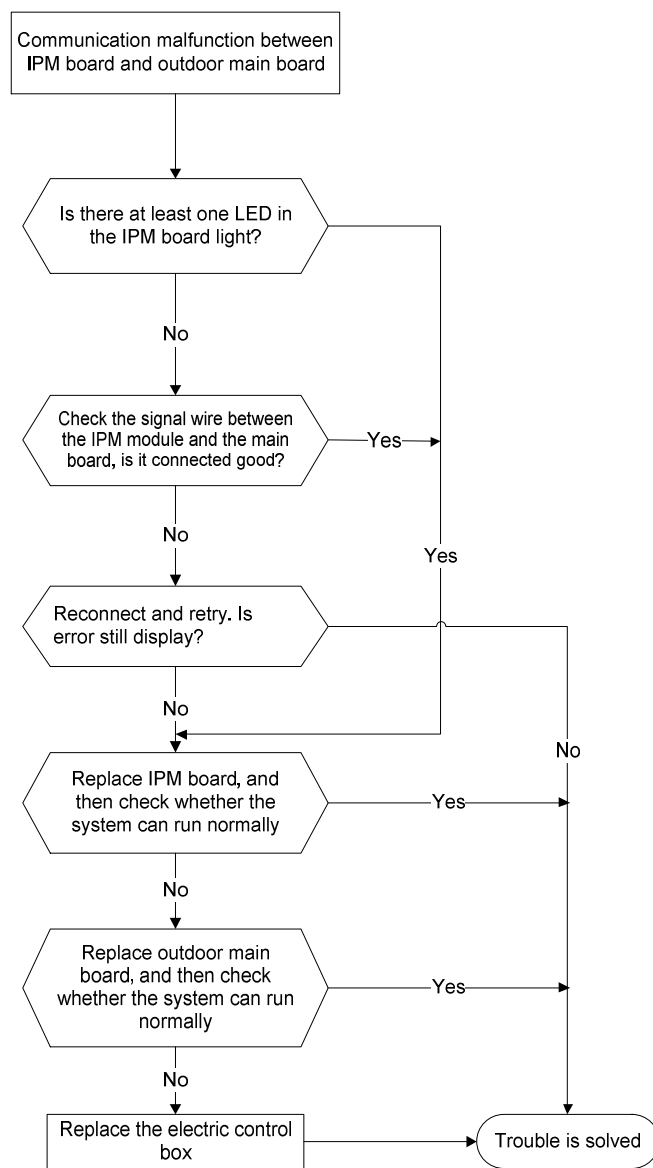





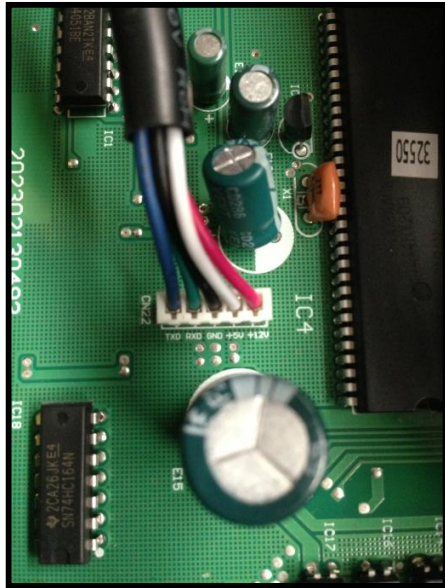

**Remark:**

Use a multimeter to test the DC voltage between black pin and white pin of signal wire. The normal value should be around 5V.

Use a multimeter to test the DC voltage between black pin and red pin of signal wire. The normal value should be around 12V.

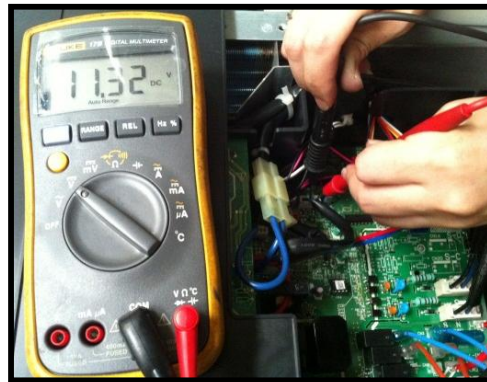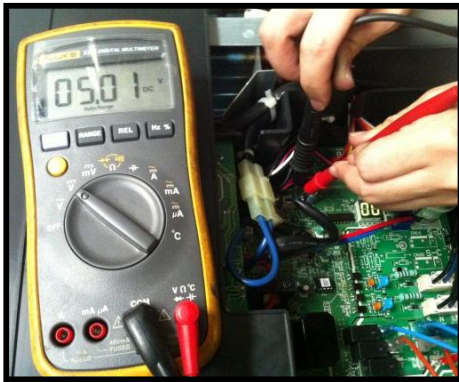



**7.4.2.4 E4/EC 50 (Outdoor temperature sensor (coil sensor T3, ambient sensor T4, Compressor discharge sensor T5、 indoor coil outlet pipe sensor T2B) malfunction) diagnosis and solution**  
**F1/F2/F3/F4/F5 (No.A,B,C,D,E Indoor unit coil outlet temp. sensor malfunction) diagnosis and solution.**

**Outdoor room temperature sensor T4 is in open circuit or has short circuited(EC 53)**



**Compressor discharge temperature sensor T5 is in open circuit or has short circuited(EC 54)**

**Outdoor IPM module temperature sensor TH is in open circuit or has short circuited(EC 55)**

**Evaporator coil outlet temperature sensor T2B is in open circuit or has short circuited(EC 56)**

|                               |   |
|-------------------------------|---|
| <b>Error Code</b>             | <b>E4/F1/F2/F3/F4/F5/ EC 52/EC 53/EC 54/EC 56/EC 50</b>   |
| <b>Malfunction conditions</b> | If the sampling voltage is lower than 0.06V or higher than 4.94V, the LED will display the failure.               |
| <b>Potential causes</b>       | <ul style="list-style-type: none"> <li>● Wiring mistake</li> <li>● Faulty sensor</li> <li>● Faulty PCB</li> </ul> |

**Trouble shooting:**

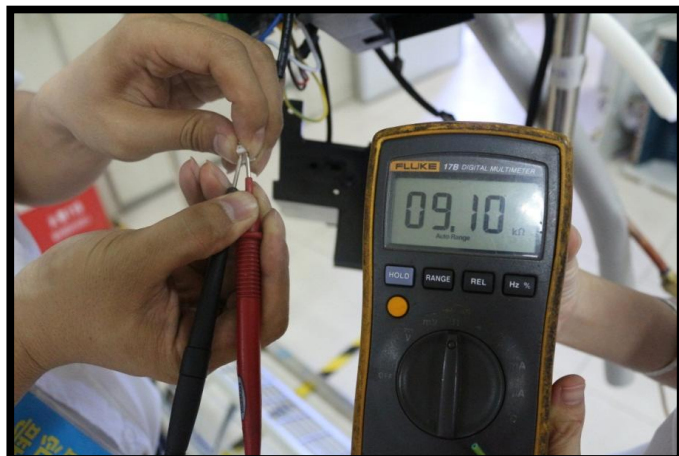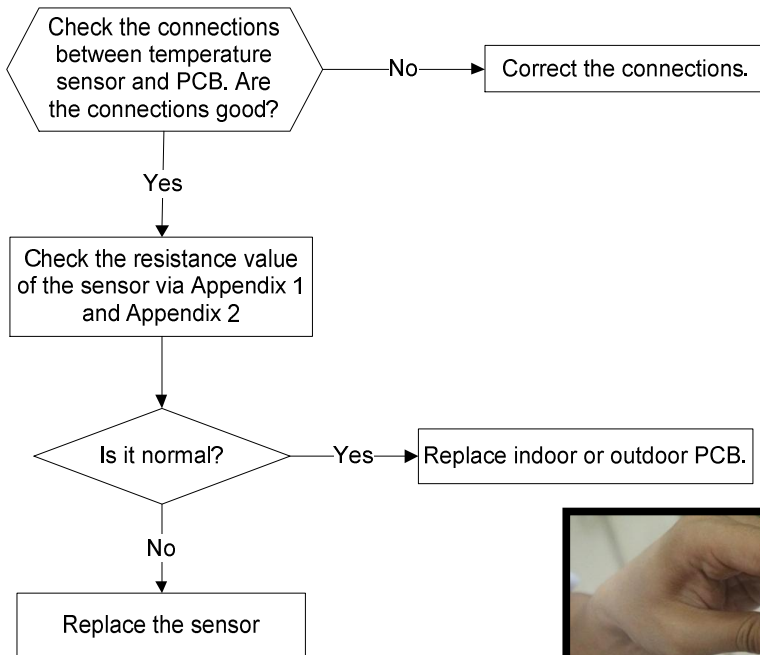





7.4.2.5 E5/ PC 10/PC 11/PC 12 (Over-voltage or under-voltage protection) diagnosis and solution.


| Error Code             | E5/ PC 10/PC 11/PC 12   |
|------------------------|---|
| Malfunction conditions | An abnormal voltage rise or drop is detected by checking the specified voltage detection circuit.                                   |
| Potential causes       | <ul style="list-style-type: none"> <li>● Power supply problems.</li> <li>● System leakage or block</li> <li>● Faulty PCB</li> </ul> |

Trouble shooting:

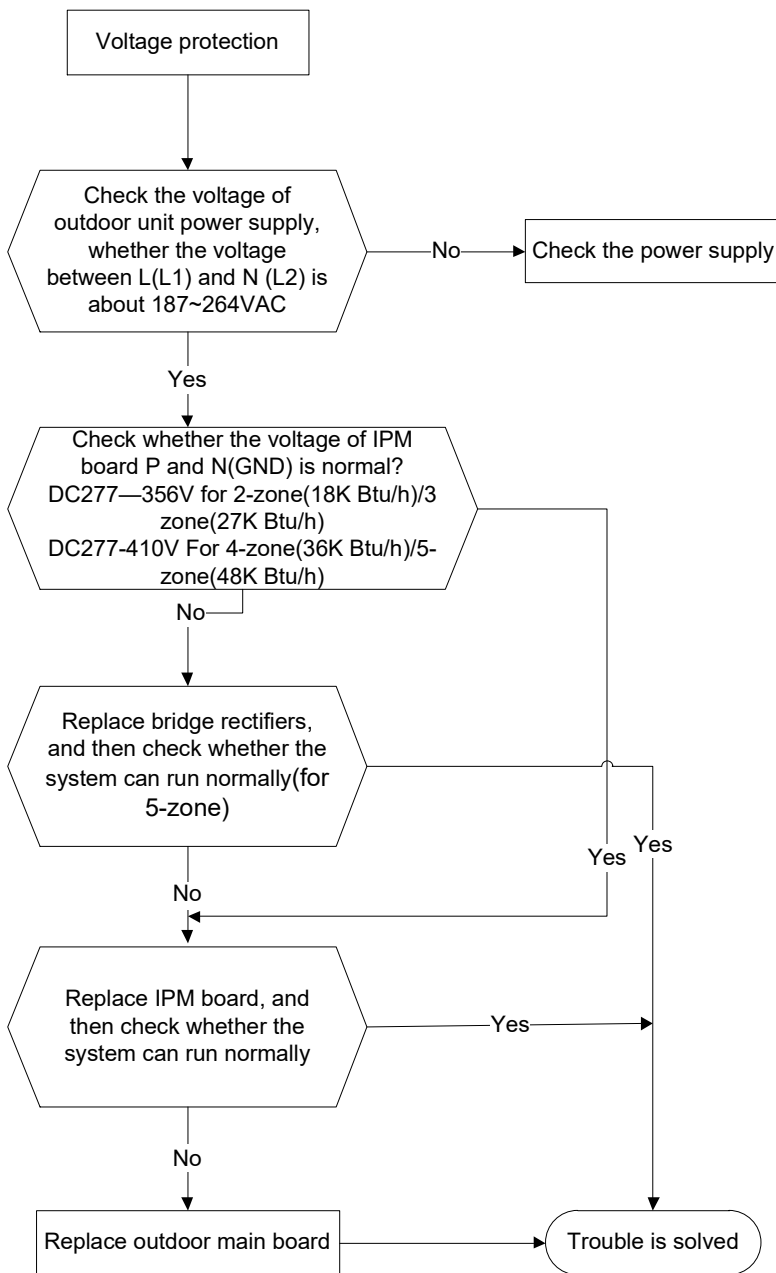

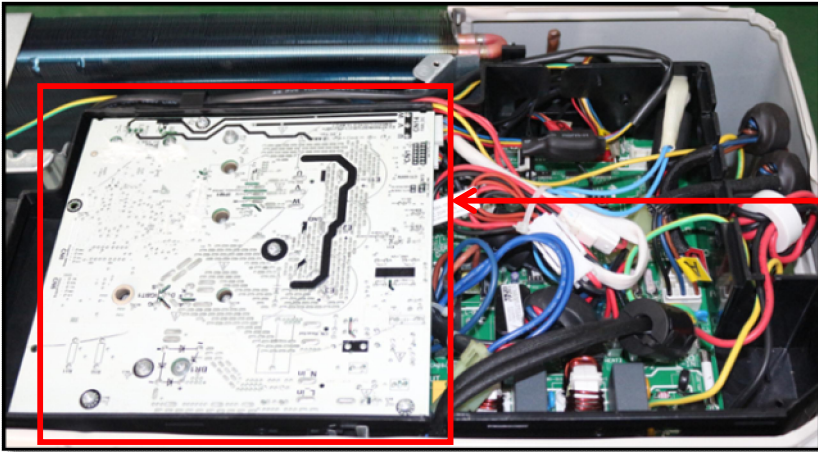


IPM board (for 2-zone /3-zone)

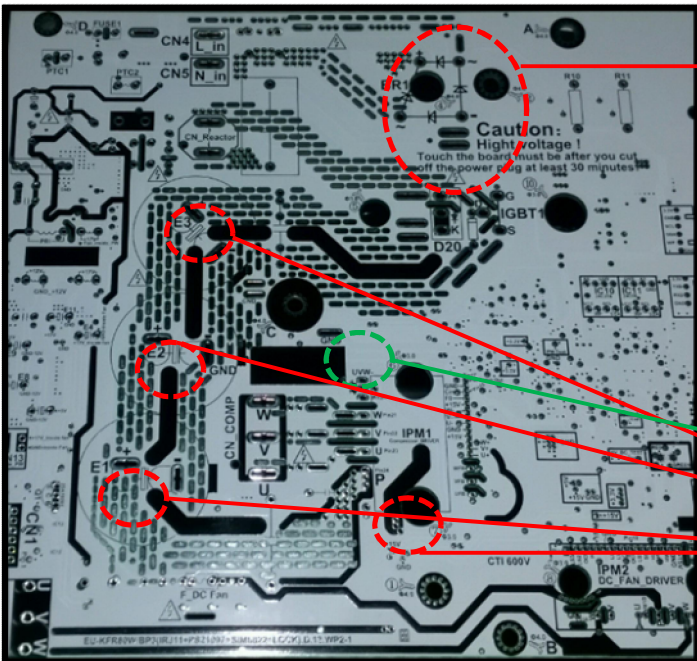

Bridge rectifier (for 2-zone/3-zone)


**Remark:**  
Measure the DC voltage between + and - port. The normal value should be 190V~250V.

P(or E1/E2/E3)-N(GND) (for 2-zone/3-zone)

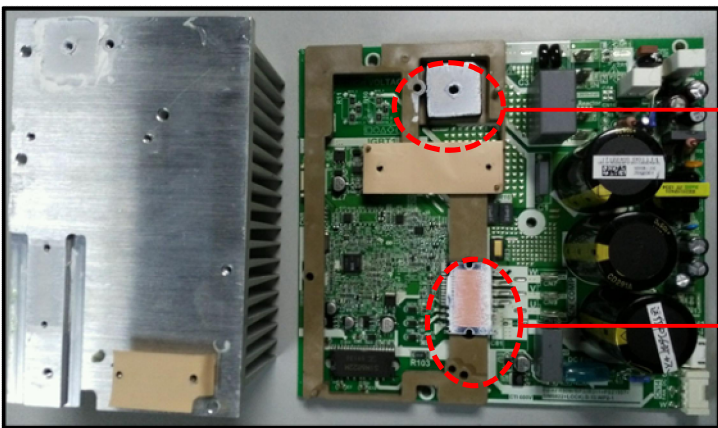


Bridge rectifier (for 2-zone/3-zone)


IPM Module (for 2-zone/3-zone)

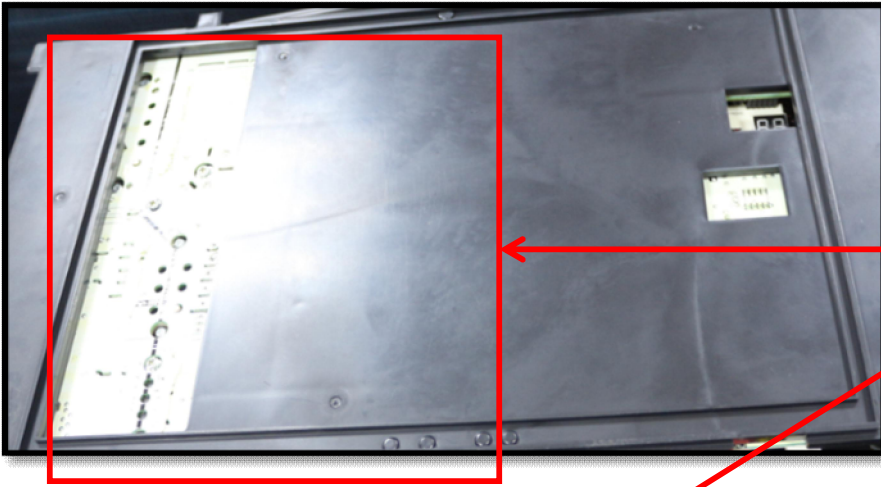

IPM board  
(for 4-zone)

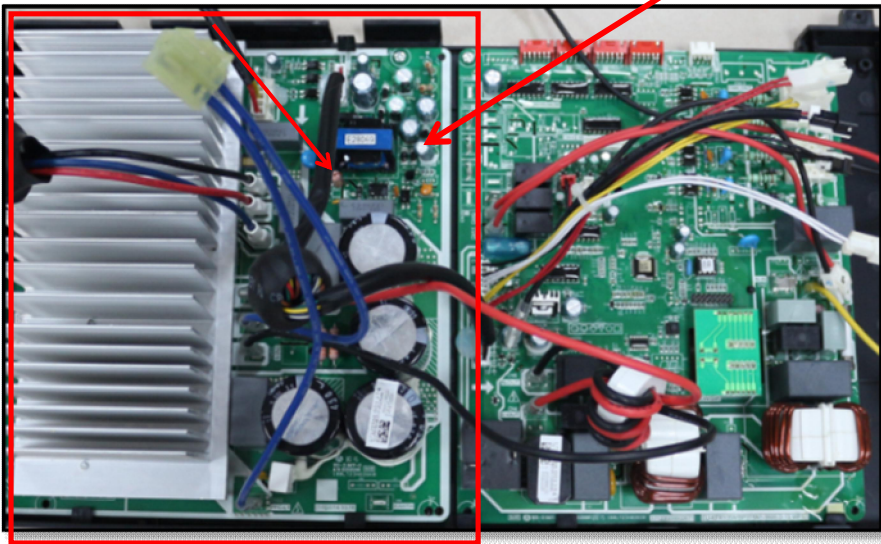




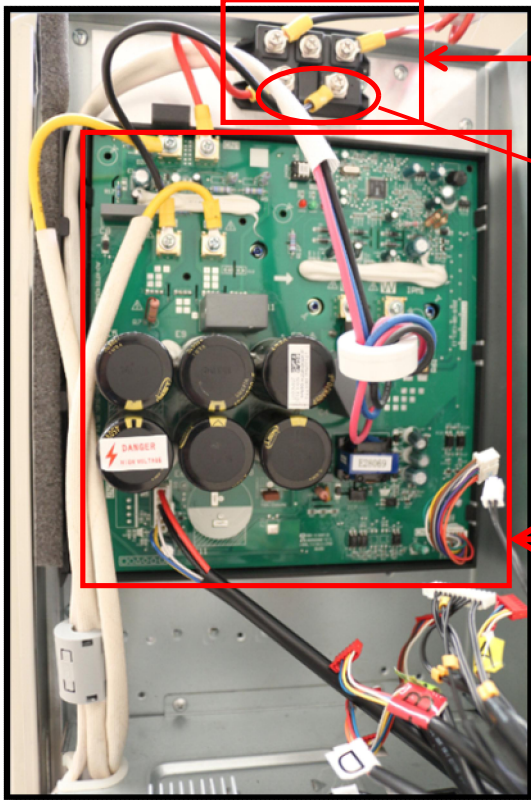

Bridge rectifier  
(for 5-zone)

**Remark:**  
Measure the DC voltage  
between + and - port. The  
normal value should be  
190V~250V.

IPM board  
(for 5-zone)

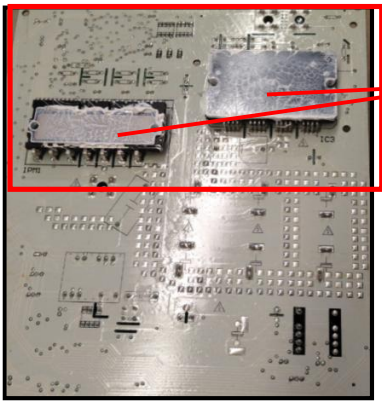


IPM Module  
(for 5-zone)


#### 7.4.2.6 E6/ PC 0F (PFC module protection) error diagnosis and solution.

|                               |  |
|-------------------------------|--|
| <b>Error Code</b>             | <b>E6/ PC 0F</b>   |
| <b>Malfunction conditions</b> | When the voltage signal that PFC sends to main control board is abnormal, the display LED will show “E6” and AC will turn off.   |
| <b>Potential causes</b>       | <ul style="list-style-type: none"><li>● Wiring mistake</li><li>● Faulty outdoor PCB</li><li>● Faulty inductance of PFC module</li><li>● PFC module malfunction</li></ul> |


**Trouble shooting:**

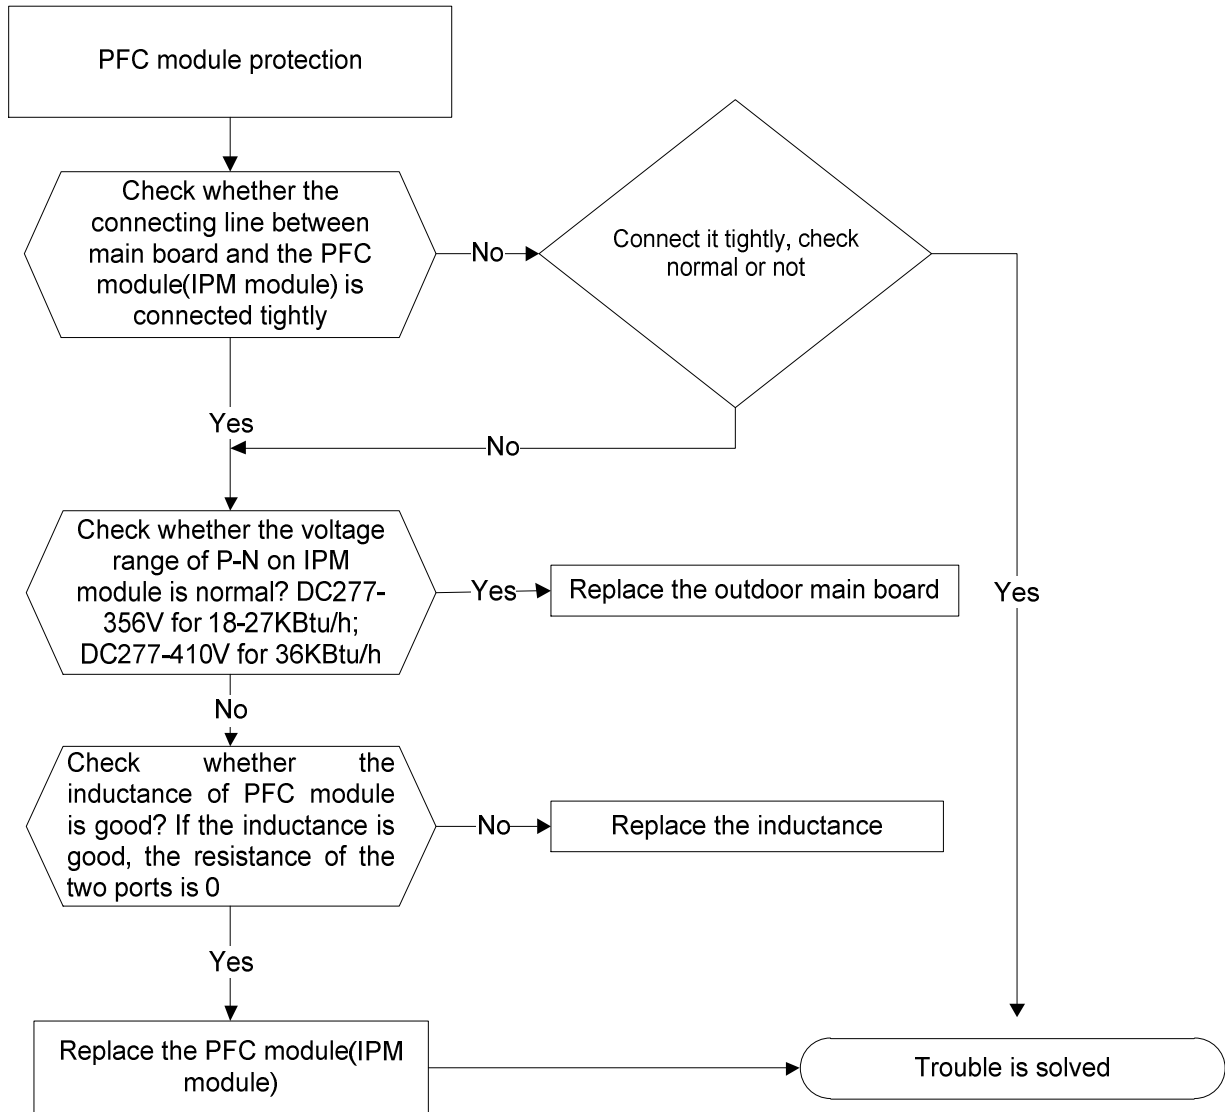



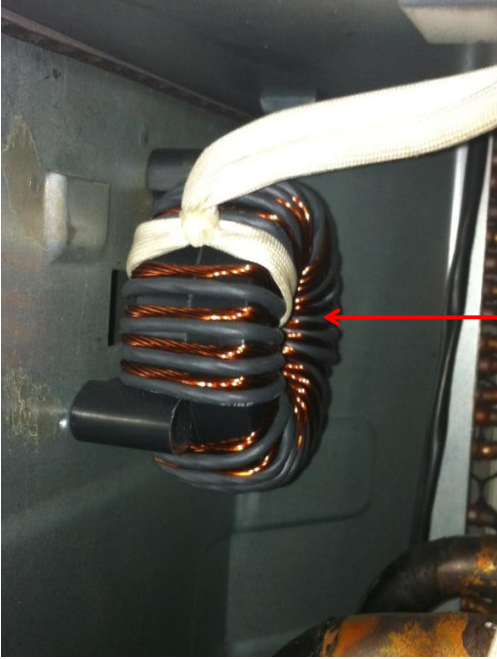

Inductance

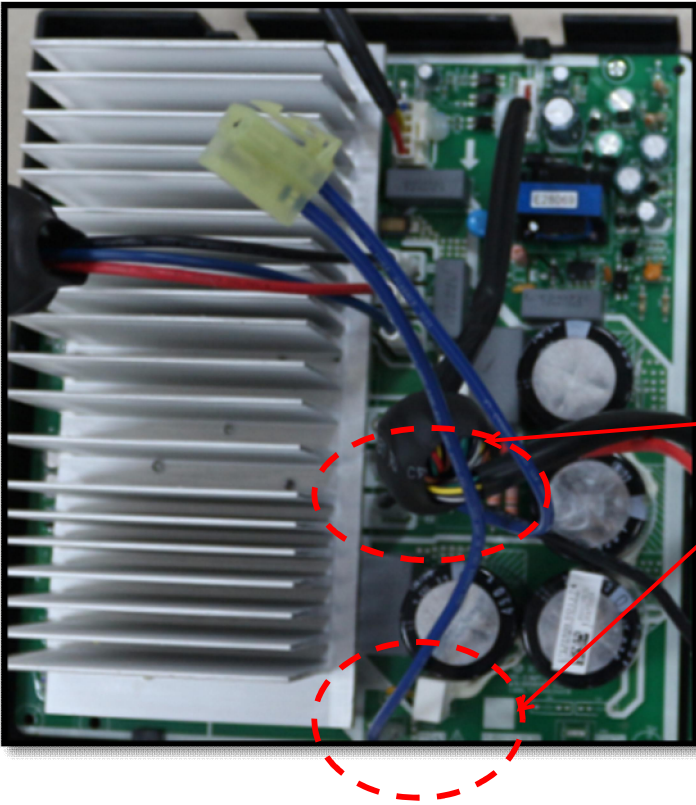


Two ports of the inductance

**7.4.2.7 E8/ EC 07 (Outdoor fan speed malfunction)/ EC 71(Over current failure of outdoor DC fan motor) diagnosis and solution**

|                               |  |
|-------------------------------|--|
| <b>Error Code</b>             | <b>E8/ EC 07/ EC 71</b>  |
| <b>Malfunction conditions</b> | When outdoor fan speed keeps too low (300RPM) or too high(2400RPM) for certain time, the unit will stop and the LED will display the failure.  |
| <b>Potential causes</b>       | <ul style="list-style-type: none"><li>● Wiring mistake</li><li>● Faulty Fan assembly</li><li>● Faulty Fan motor</li><li>● Faulty PCB</li></ul> |


**Trouble shooting:**

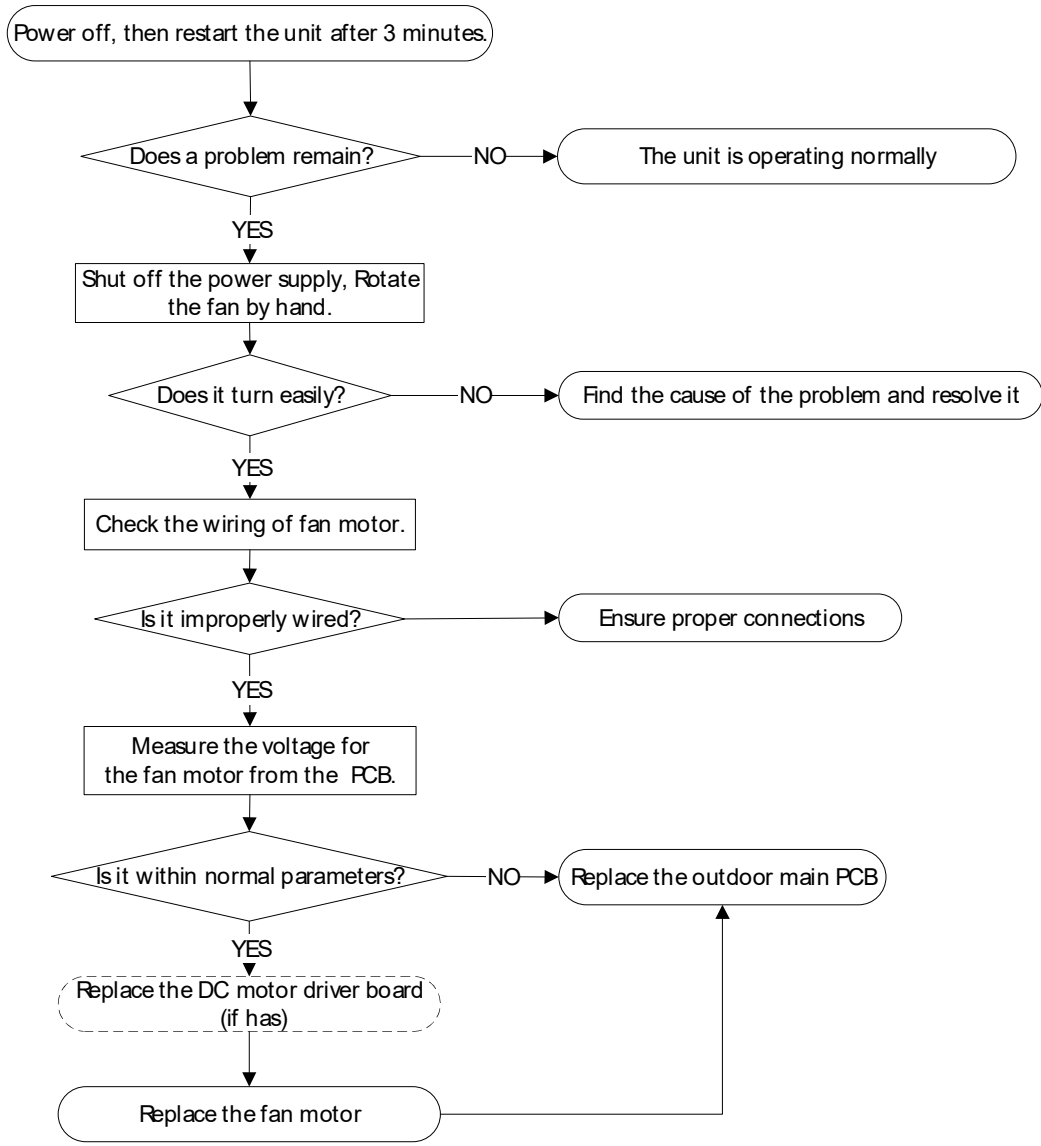

Index 1:

➤ **1. DC fan motor(control chip is inside fan motor)**

Power on and when the unit is in standby, measure the voltage of pin1-pin3, pin4-pin3 in fan motor connector. If the value of the voltage is not in the range showing in below table, the PCB must have problems and need to be replaced.

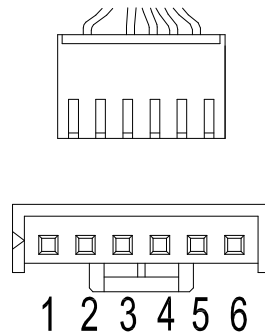


DC motor voltage input and output

| NO. | Color  | Signal | Voltage    |
|-----|--------|--------|------------|
| 1   | Red    | Vs/Vm  | 200~380V   |
| 2   | ---    | ---    | ---        |
| 3   | Black  | GND    | 0V         |
| 4   | White  | Vcc    | 13.5~16.5V |
| 5   | Yellow | Vsp    | 0~6.5V     |
| 6   | Blue   | FG     | 13.5~16.5V |


**Vs**




**Vcc**

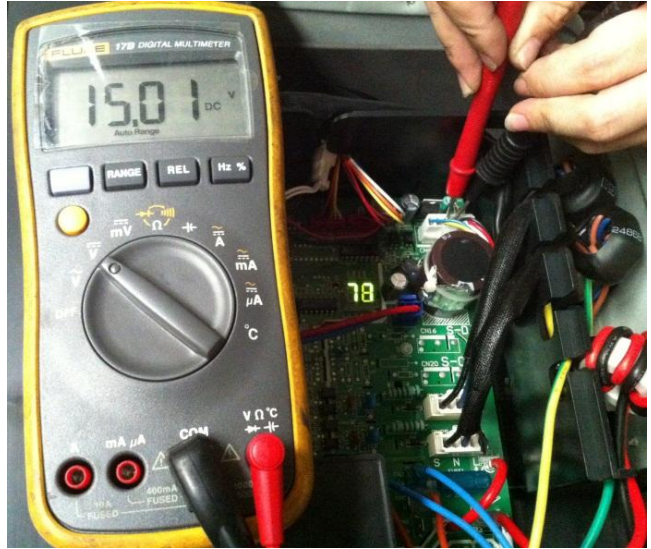

**Vsp**

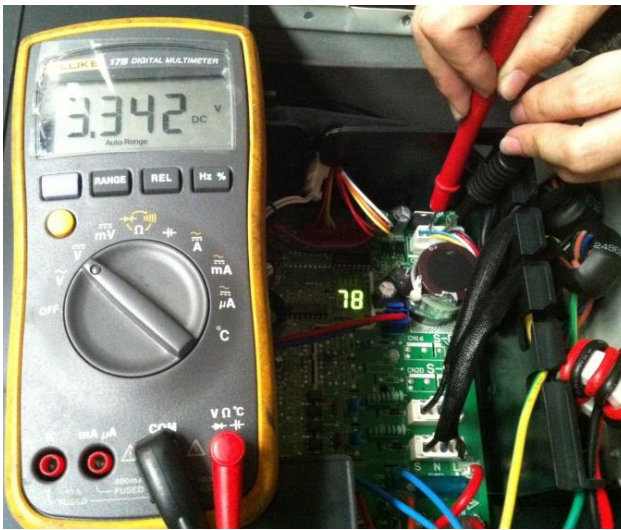


**FG**

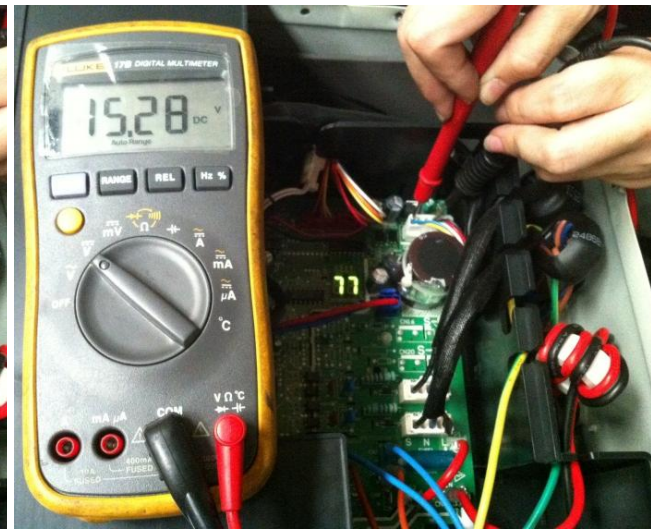


➤ **2. DC Fan Motor (control chip is in PCB)**

Release the UVW connector. Measure the resistance of U-V, U-W, and V-W. If the resistances are not equal to each other, the fan motor may be experiencing problems and need to be replaced. Otherwise, the PCB must have problems and need to be replaced.

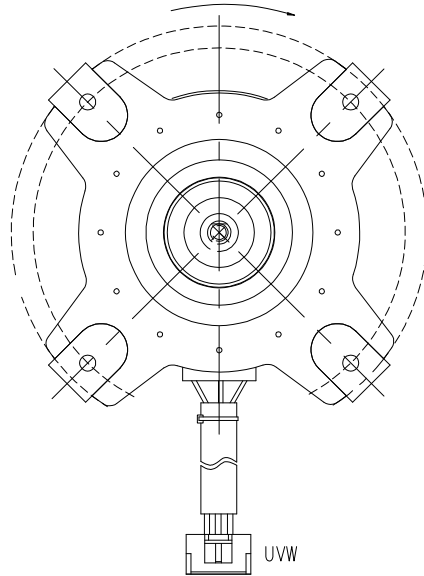


➤ **3. Outdoor DC Fan IPM Board(for some double fan models)**

Power on and when the unit is in standby, measure the voltage of CON1, pin1-pin2 and pin3-pin2 of CN1 in DC motor driver board. If the value of the voltage is not in the range showing in below tables, the outdoor main PCB must have problems and need to be replaced.

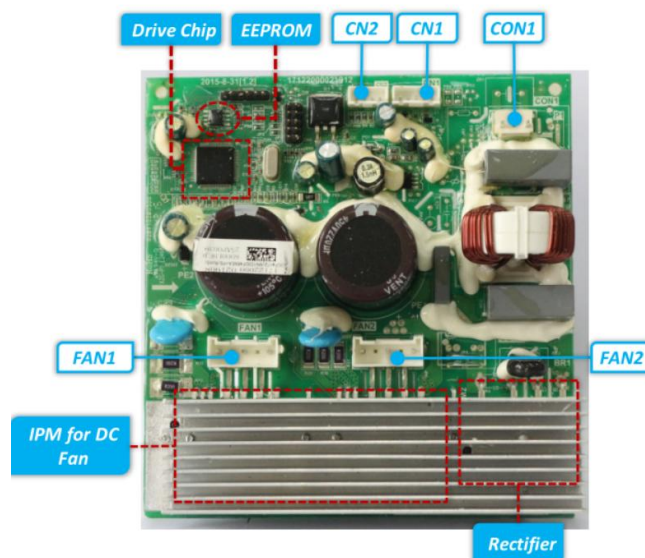

| Part | Description                 | Parameter   | Remark              |
|------|-----------------------------|-------------|---------------------|
| CON1 | Power input for the PCB     | 192-380V/DC |                     |
| CN1  | Communication with main PCB | DC          |                     |
| CN2  | Test port                   | 5V/DC       | For debugging board |
| FAN1 | UVW output for DC fan motor |             |                     |
| FAN2 | UVW output for DC fan motor |             |                     |

CN1 Communication with main PCB



**5 4 3 2 1**

| NO. | Signal | Voltage    |
|-----|--------|------------|
| 1   | Vcc    | 13.5~16.5V |
| 2   | GND    |            |
| 3   | Vsp    | 0~6.5V     |
| 4   | FG     | 13.5~16.5V |
| 5   | ---    | ---        |






#### 7.4.2.8 P1/PC 30 (High pressure protection) diagnosis and solution.

|                               |   |
|-------------------------------|---|
| <b>Error Code</b>             | <b>P1/PC 30</b>   |
| <b>Malfunction conditions</b> | If the sampling voltage is not 5V, the LED will display the failure.  |
| <b>Potential causes</b>       | <ul style="list-style-type: none"><li>● Wiring mistake</li><li>● Faulty over load protector</li><li>● System block</li><li>● Faulty outdoor PCB</li></ul> |

**Trouble shooting:**



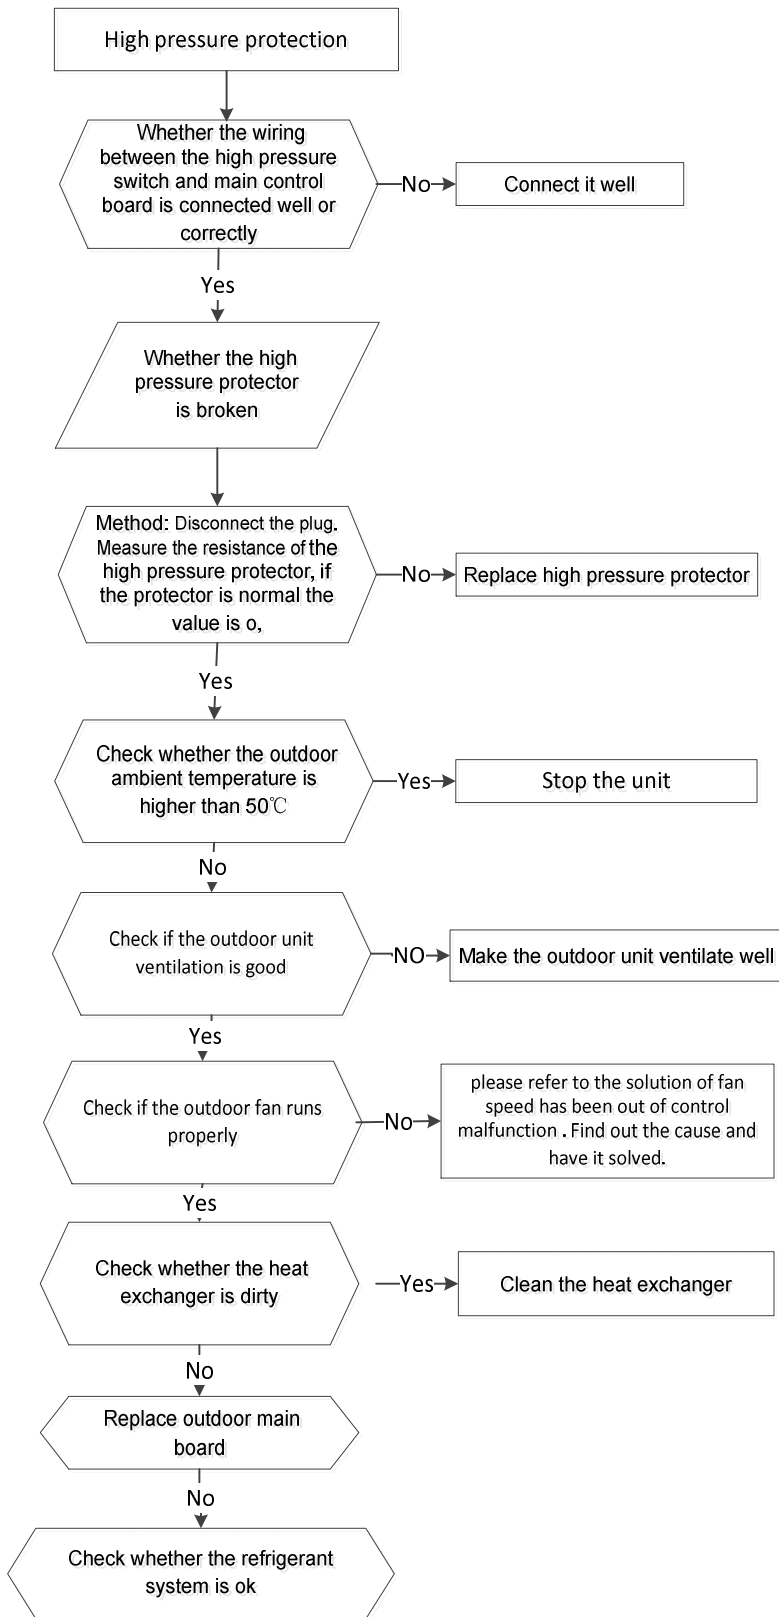


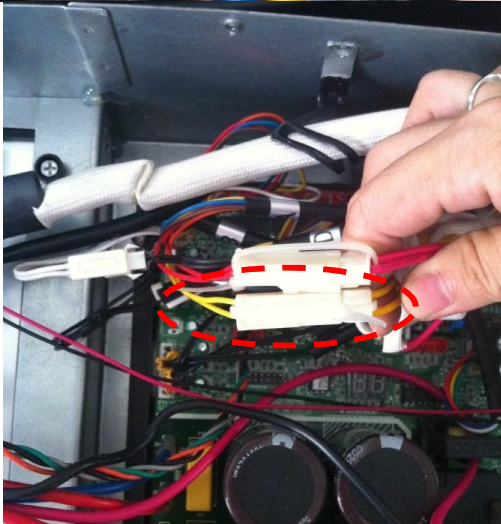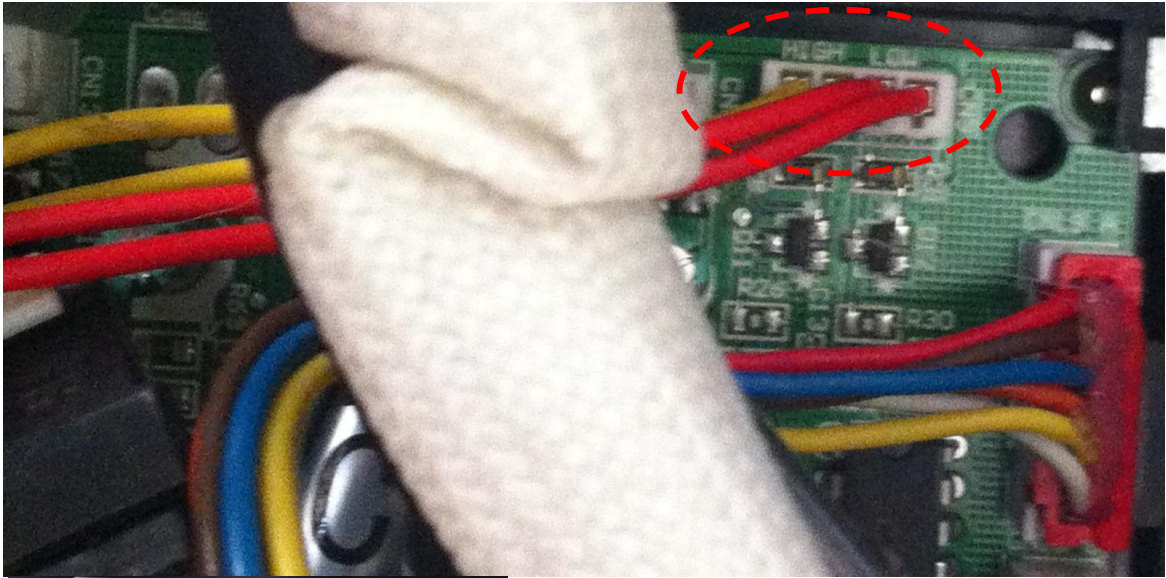



#### 7.4.2.9 P2/PC 31 (Low pressure protection) diagnosis and solution.

|                               |   |
|-------------------------------|---|
| <b>Error Code</b>             | <b>P2/PC 31</b>   |
| <b>Malfunction conditions</b> | If the sampling voltage is not 5V, the LED will display the failure.  |
| <b>Potential causes</b>       | <ul style="list-style-type: none"><li>● Wiring mistake</li><li>● Faulty over load protector</li><li>● System block</li><li>● Faulty outdoor PCB</li></ul> |

**Trouble shooting:**

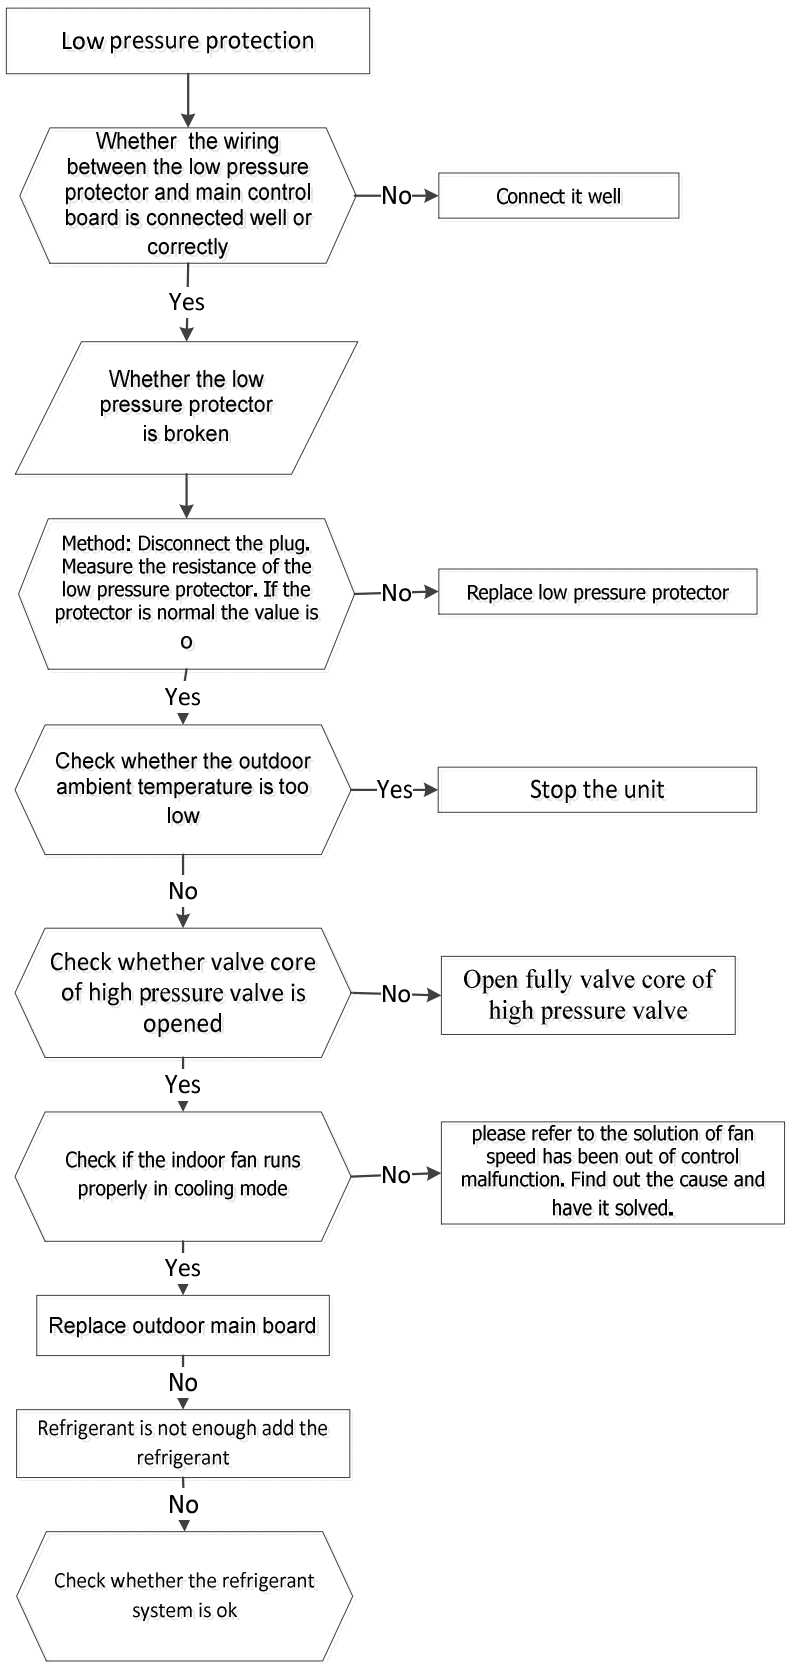




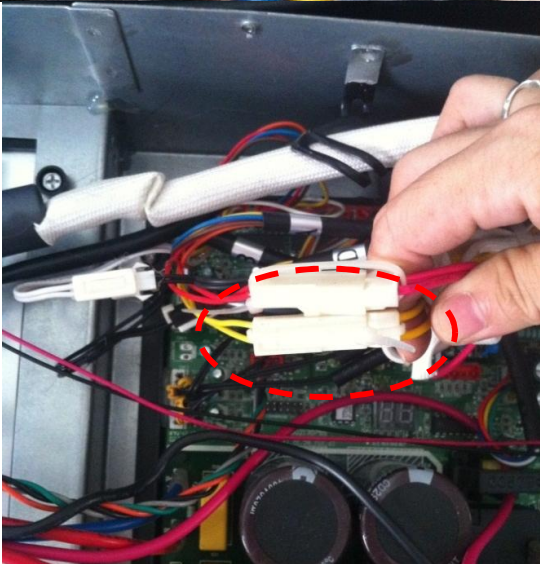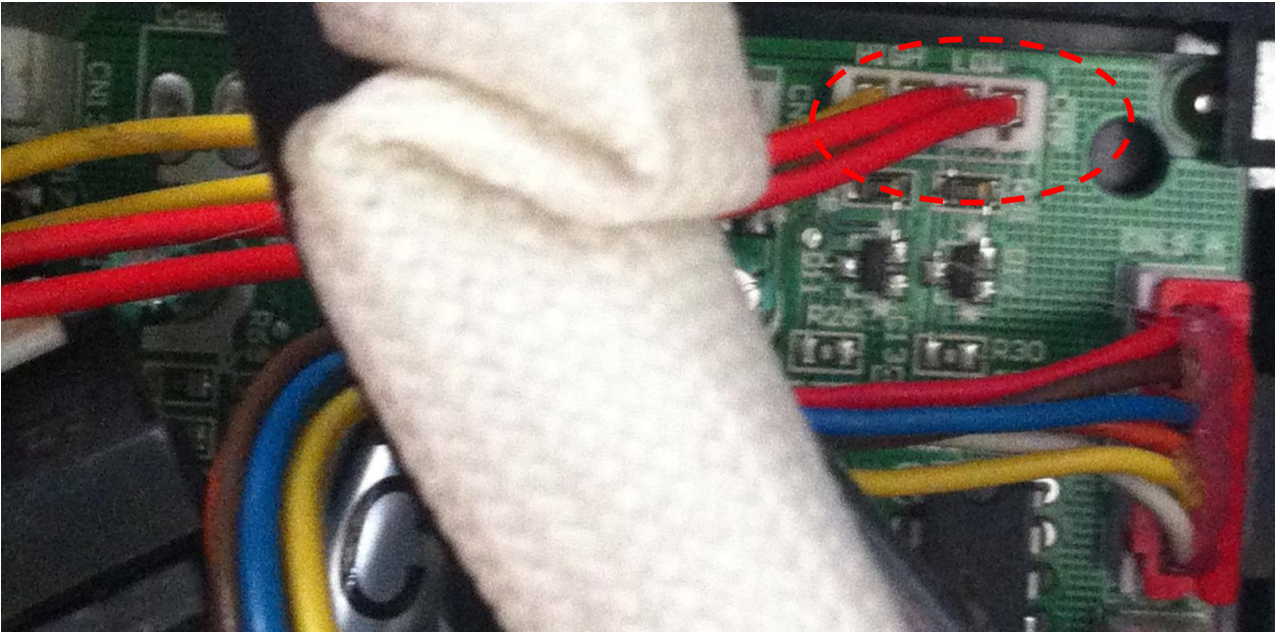

**7.4.2.10 P3/PC 08 (Current overload protection)/ PC 44(Outdoor unit zero speed protection)/PC 46(Compressor speed has been out of control)/PC 49(Compressor overcurrent failure) diagnosis and solution.**

| <b>Error Code</b>             | <b>P3/PC 08/PC 44/PC 46/PC 49</b>  |
|-------------------------------|--|
| <b>Malfunction conditions</b> | If the outdoor current exceeds the current limit value, the LED will display the failure.  |
| <b>Potential causes</b>       | <ul style="list-style-type: none"> <li>● Wiring mistake</li> <li>● Faulty over load protector</li> <li>● System block</li> <li>● Faulty outdoor PCB</li> </ul> |

**Trouble shooting:**

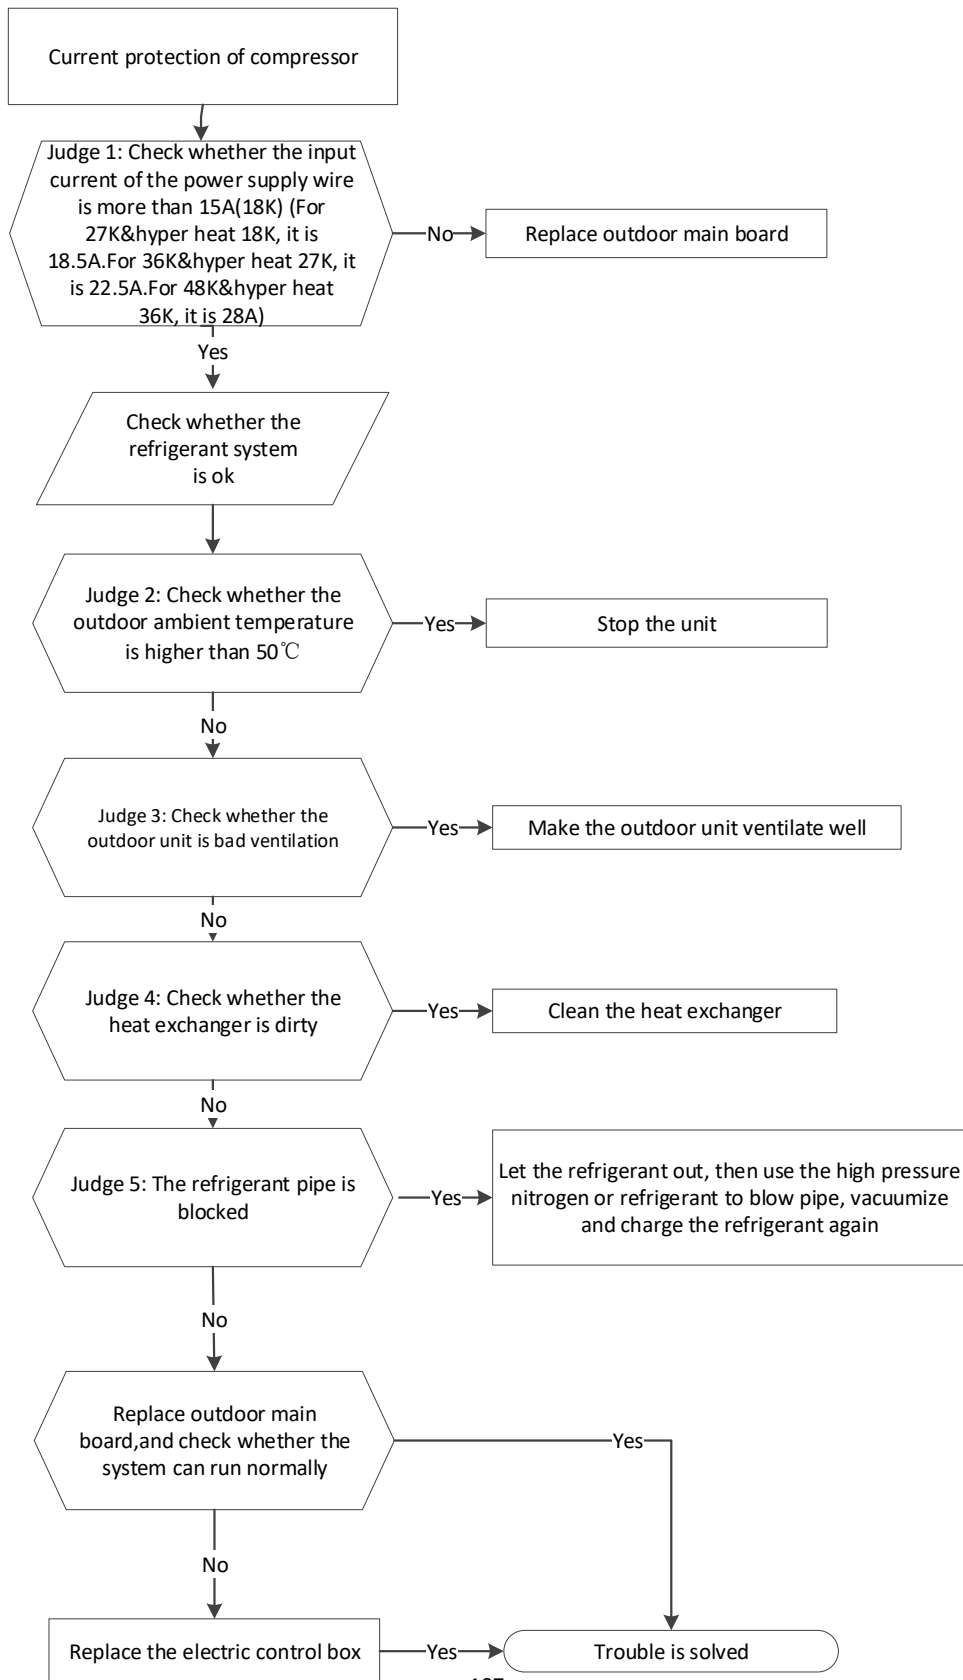






**7.4.2.11 P4/PC 06 (Temperature protection of compressor discharge) diagnosis and solution.**

| Error Code                    | P4/PC 06   |
|-------------------------------|--|
| <b>Malfunction conditions</b> | When the compressor discharge temperature(T5) is more than 115°C for 10 seconds, the compressor will stop and restart till T5 is less than 90°C.                               |
| <b>Potential causes</b>       | <ul style="list-style-type: none"> <li>● Refrigerant leakage</li> <li>● Wiring mistake</li> <li>● Faulty discharge temperature sensor</li> <li>● Faulty outdoor PCB</li> </ul> |


**Trouble shooting:**

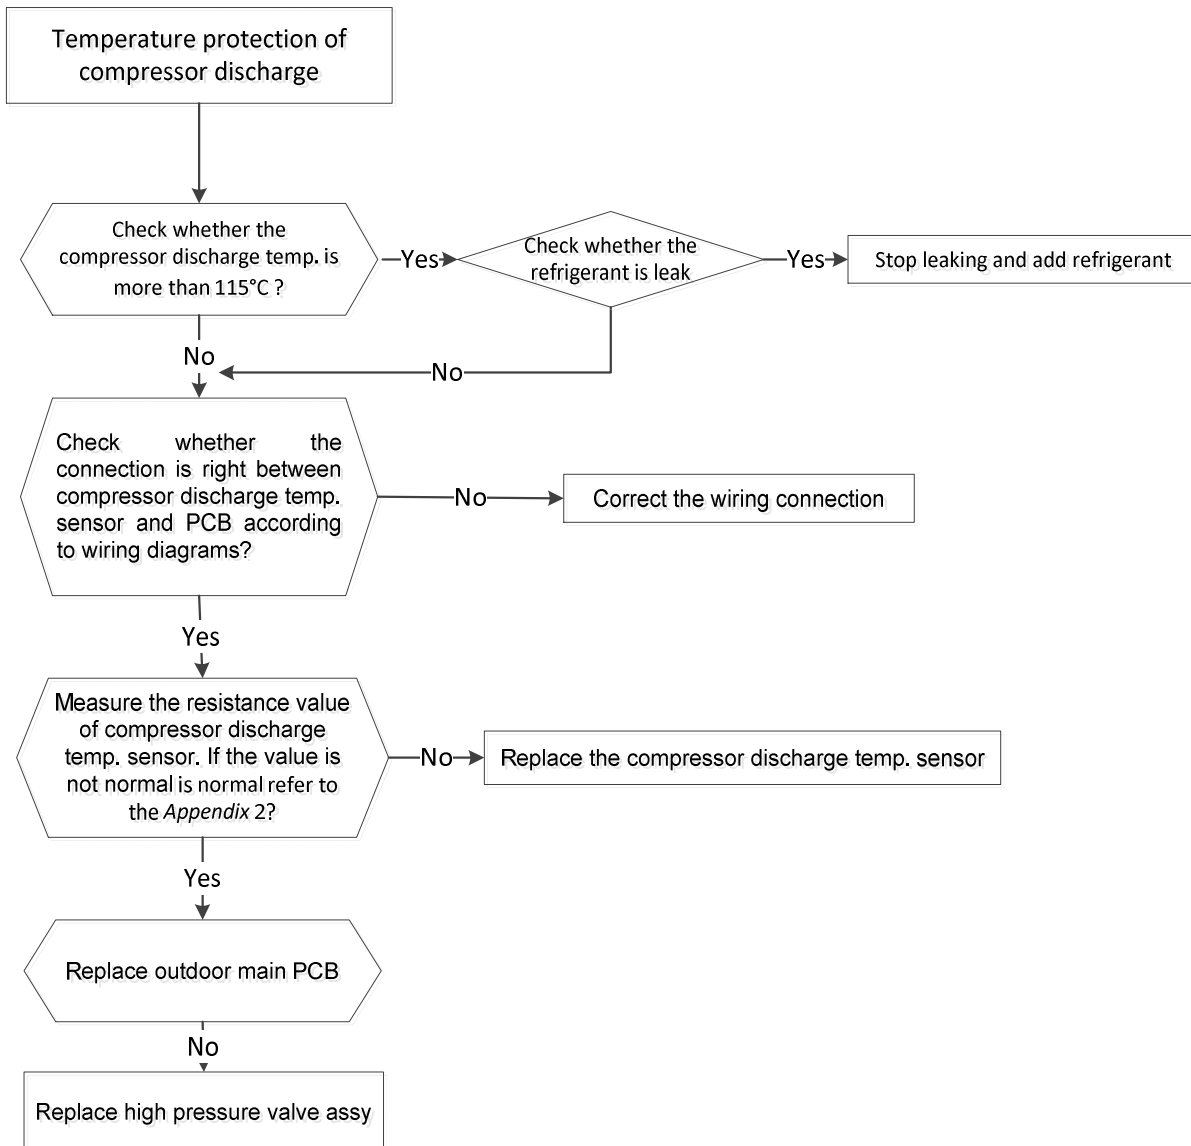

### 7.4.2.12 P5/PC 0A (High temperature protection of condenser) diagnosis and solution.

| Error Code             | P5/PC 0A  |
|------------------------|---|
| Malfunction conditions | When outdoor pipe temperature is more than 65°C, the unit will stop, and unit runs again when outdoor pipe temperature is less than 52°C        |
| Potential causes       | <ul style="list-style-type: none"> <li>● Faulty condenser temperature sensor</li> <li>● Heat exchanger dirty</li> <li>● System block</li> </ul> |


#### Trouble shooting:

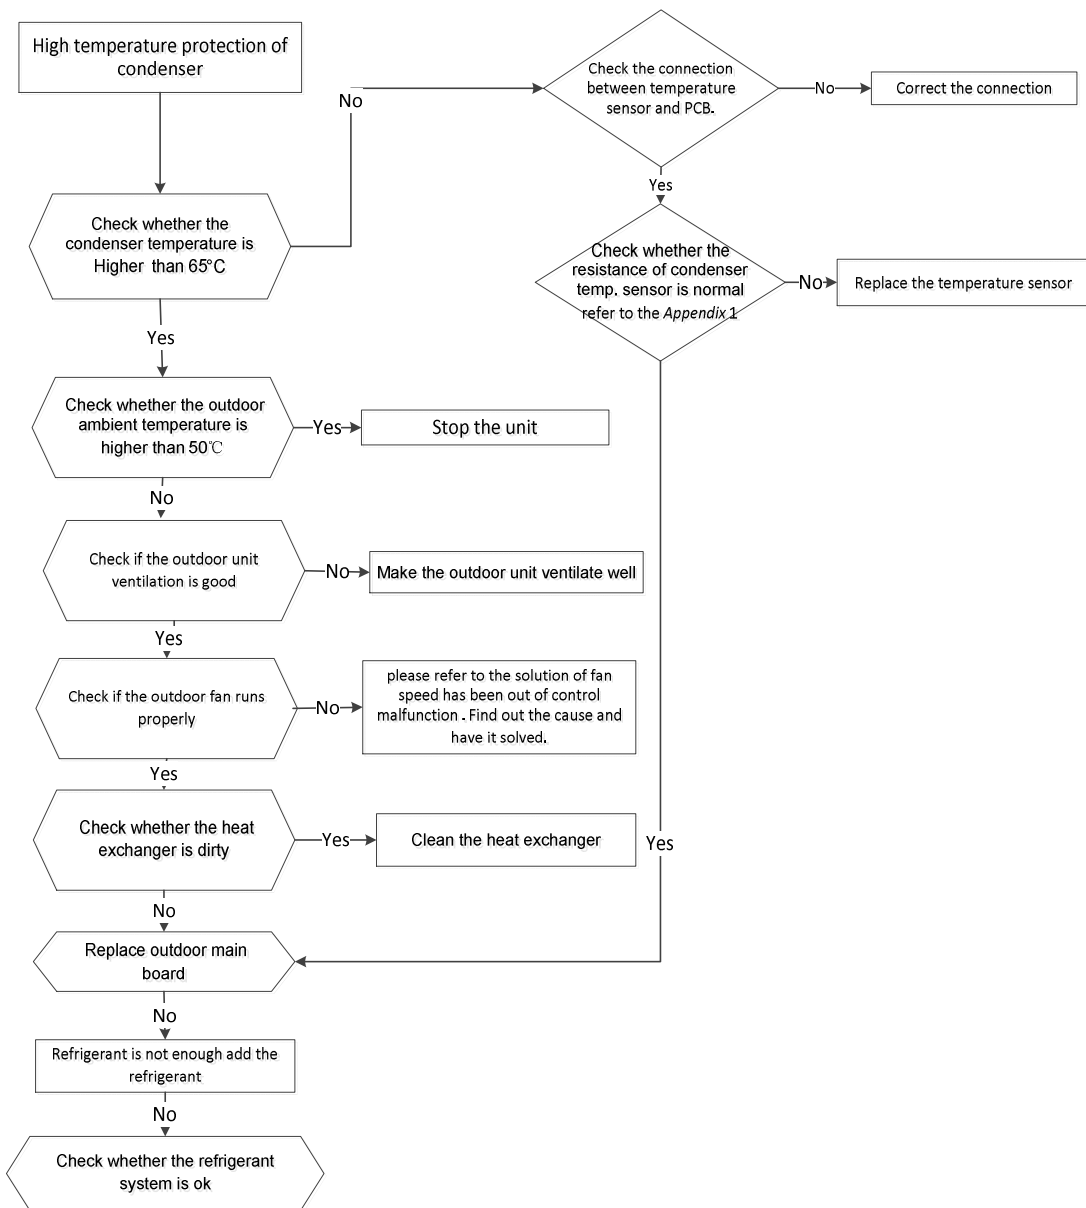

#### 7.4.2.13 P6/PC 00 (Inverter module (IPM) malfunction) diagnosis and solution.


| Error Code                    | P6/PC 00   |
|-------------------------------|--|
| <b>Malfunction conditions</b> | When the voltage signal that IPM send to compressor drive chip is abnormal, the display LED will show “P6” and AC will turn off.   |
| <b>Potential causes</b>       | <ul style="list-style-type: none"><li>● Wiring mistake</li><li>● IPM malfunction</li><li>● Faulty outdoor fan assembly</li><li>● Compressor malfunction</li><li>● Faulty outdoor PCB</li></ul> |

**Trouble shooting:**

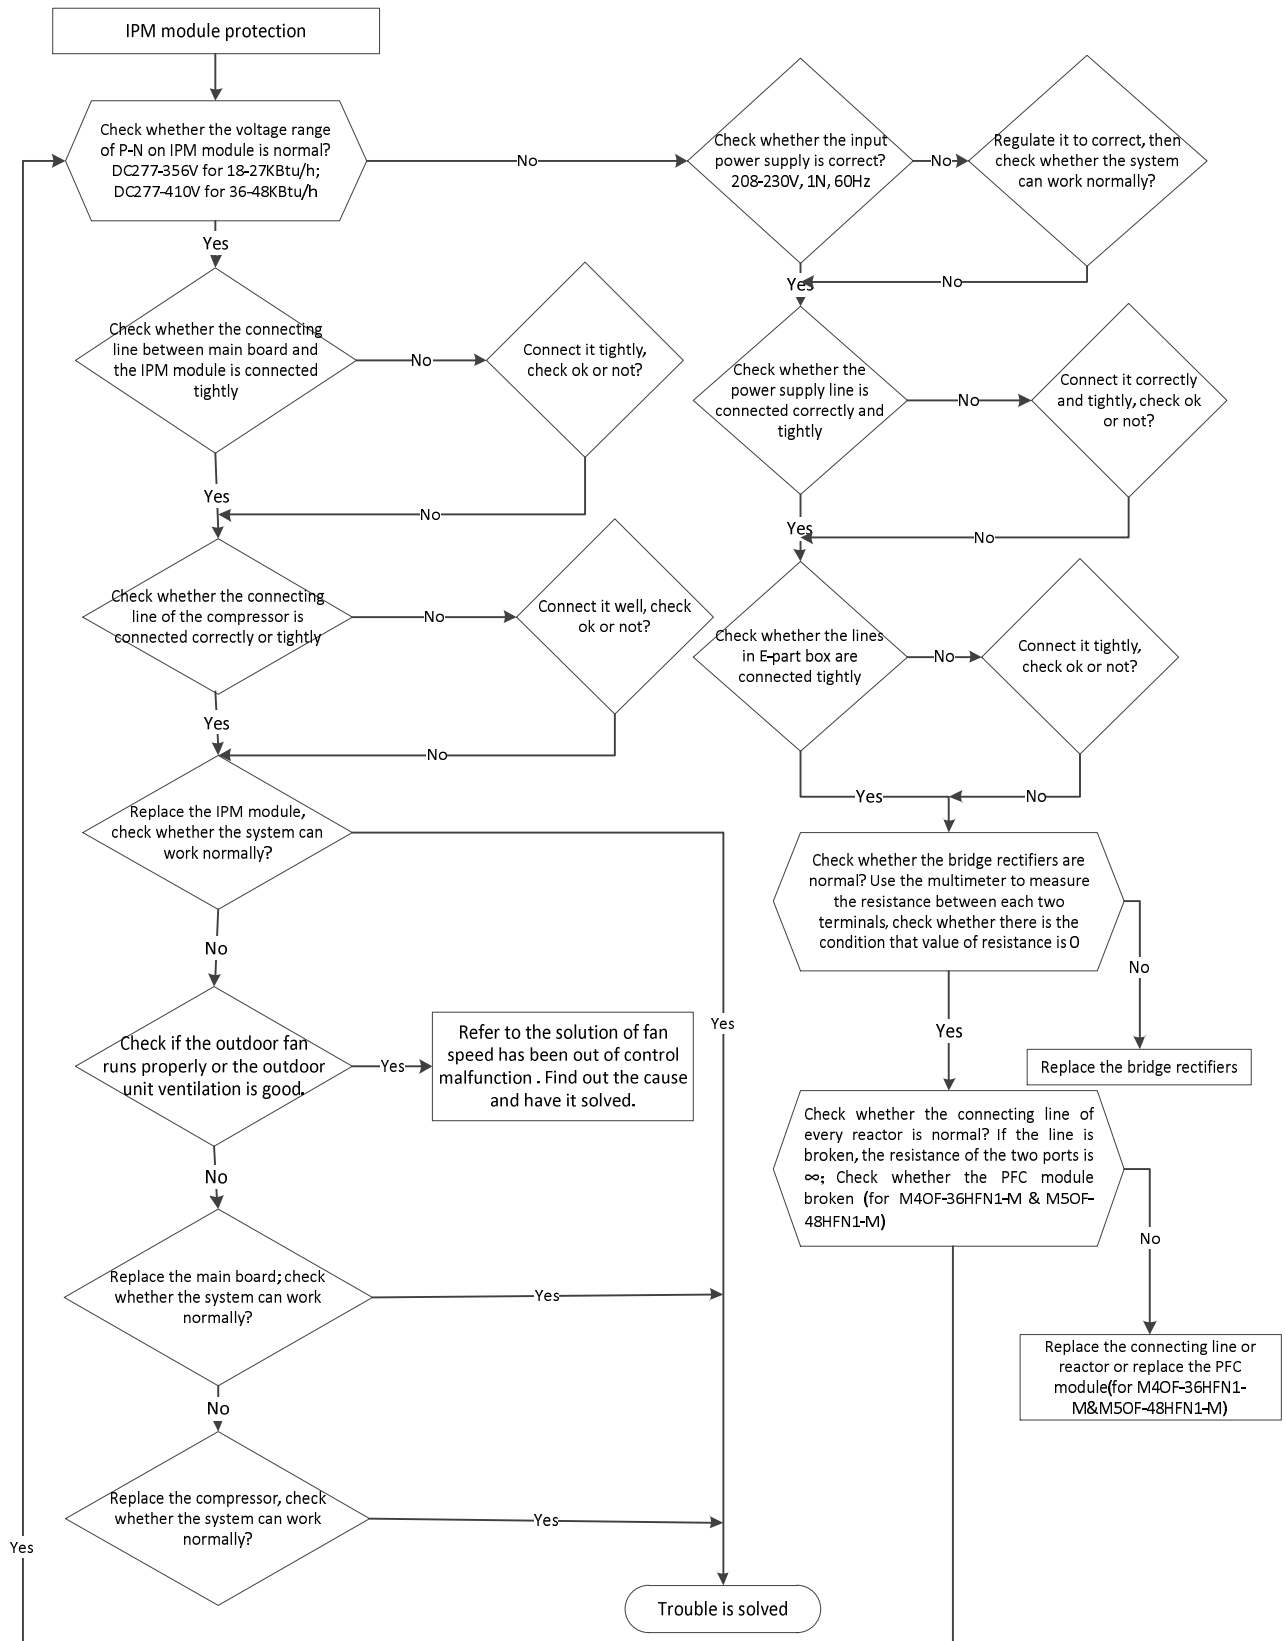


#### 7.4.2.14. High temperature protection of compressor top(IDU P2/ODU P0/PC 02)


|  |  |
|--|--|
| <b>Malfunction decision conditions</b> | <b>If the sampling voltage is not 5V, the LED will display the failure.</b>  |
| <b>Supposed causes</b>                 | <ul style="list-style-type: none"> <li>● Faulty overload protector</li> <li>● Wiring mistake</li> <li>● System leakage or block</li> <li>● Faulty PCB</li> </ul> |

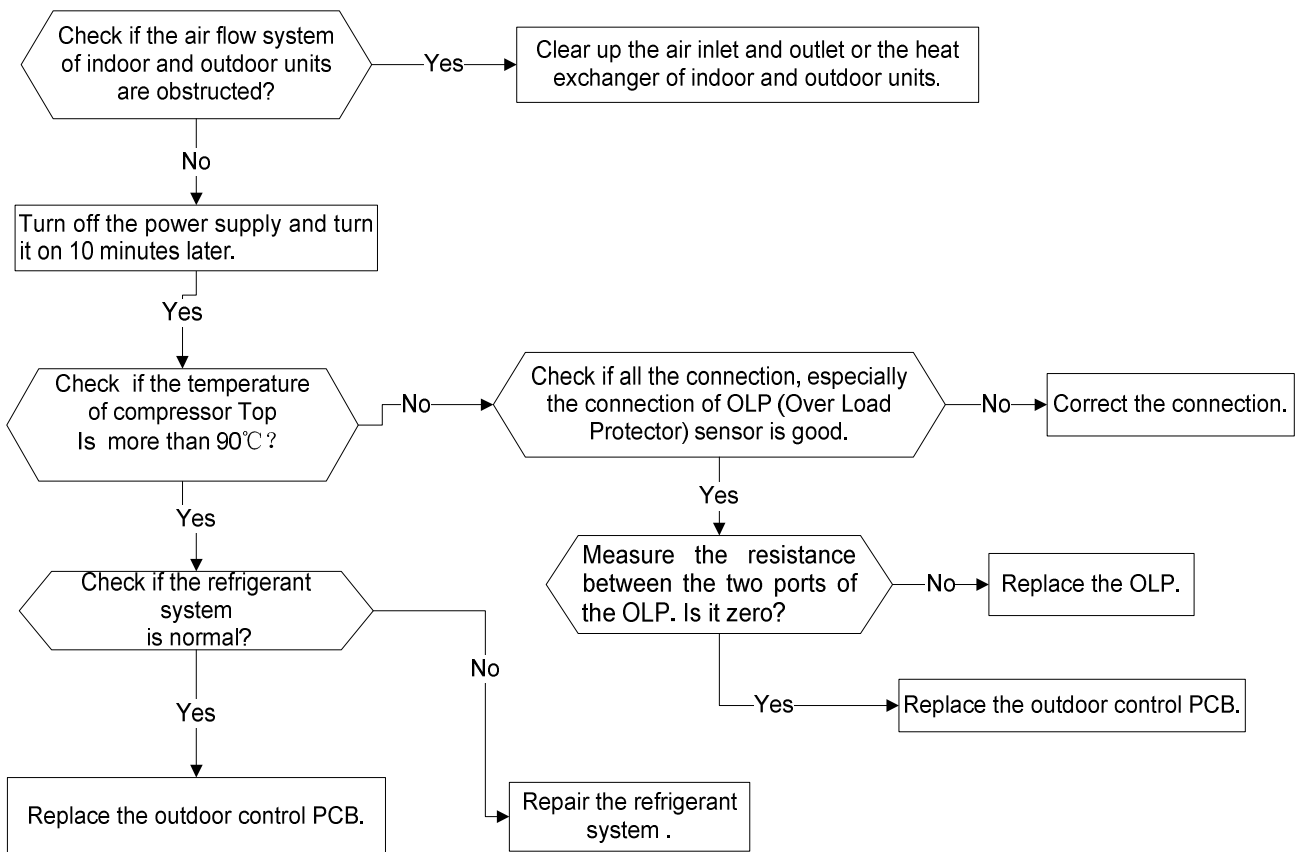


#### 7.4.2.15 Lack phase failure of outdoor DC fan motor(EC 72)

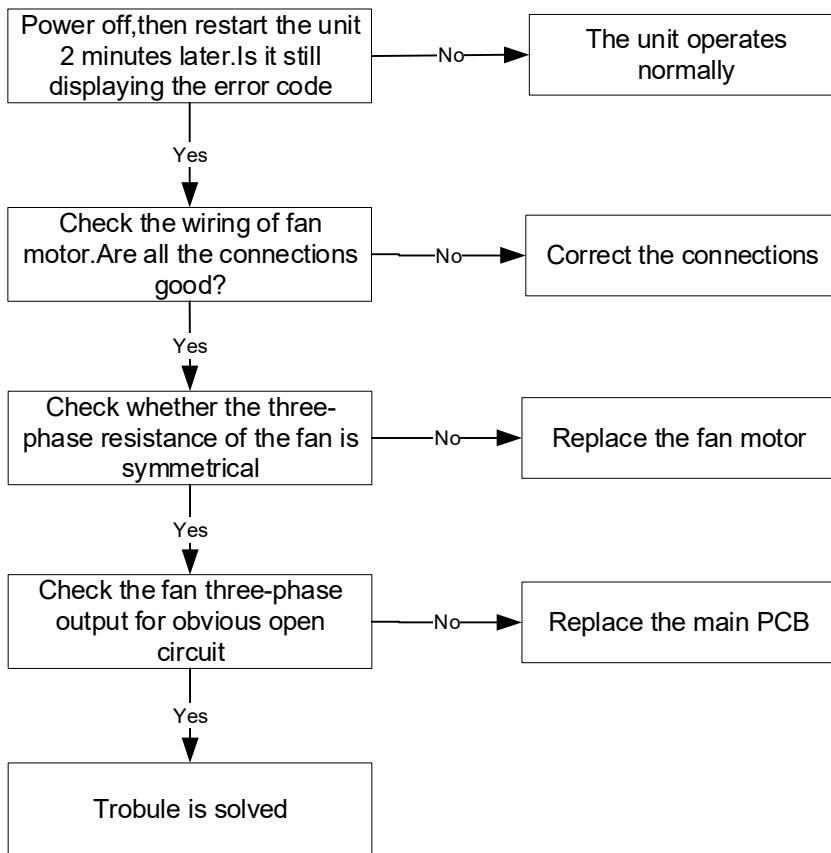

#### 7.4.2.16 Outdoor compressor lack phase protection(PC43)

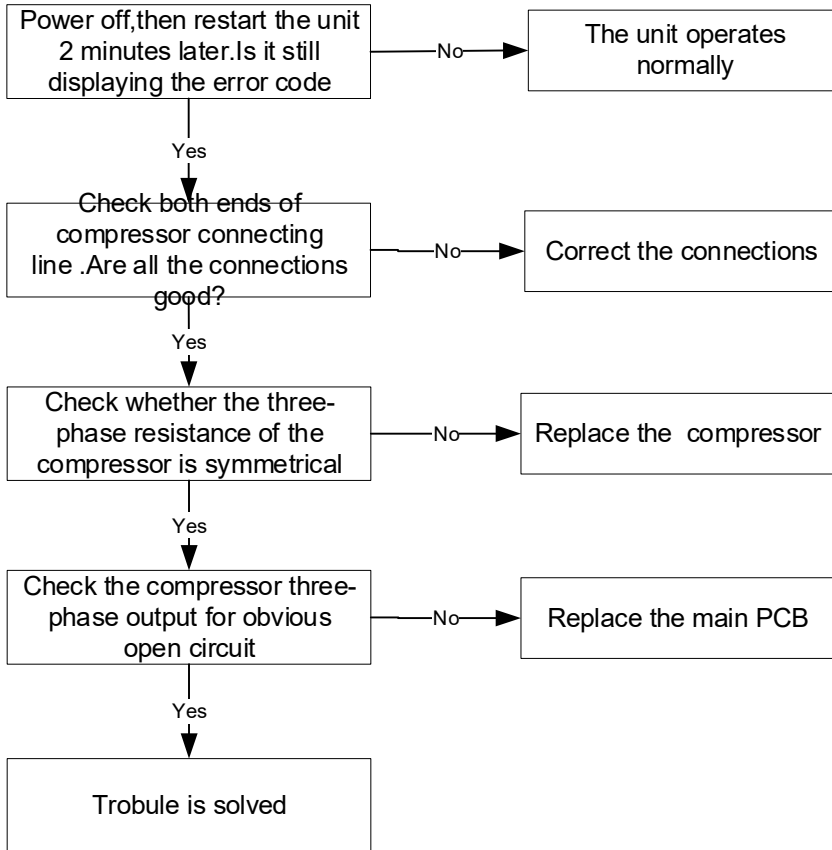

#### 7.4.2.17 Outdoor unit IR chip drive failure(PC45)

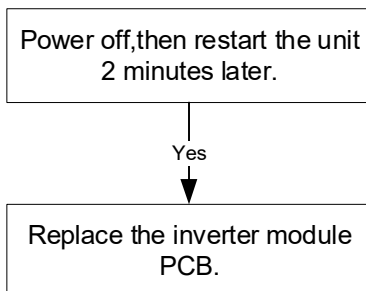

**7.4.2.18 The cooling operation or heating operation does not operate.**

**Potential causes**

- Faulty 4-way valve

Check of 4-way, please refer to part 5 in 9.5 Trouble Criterion Of Main Parts.

**7.4.2.19 When cooling, heat exchanger of non-operating indoor unit frosts.**

When heating, non-operating indoor unit get warm.


**Potential causes**

- Faulty EXV
- Wire and piping connected in reverse.

Check of EXV, please refer to part 6 in 9.5 Trouble Criterion Of Main Parts.

**7.4.2.20 Automatic correction of wiring/piping error:**


Press the "check switch" on the outdoor unit PCB board 5 seconds until LED display "CE", which mean this function is working, Approximately 5-10 minutes after the switch is pressed, the "CE" disappear the wiring/piping error will be corrected, and wiring/piping is properly connected.

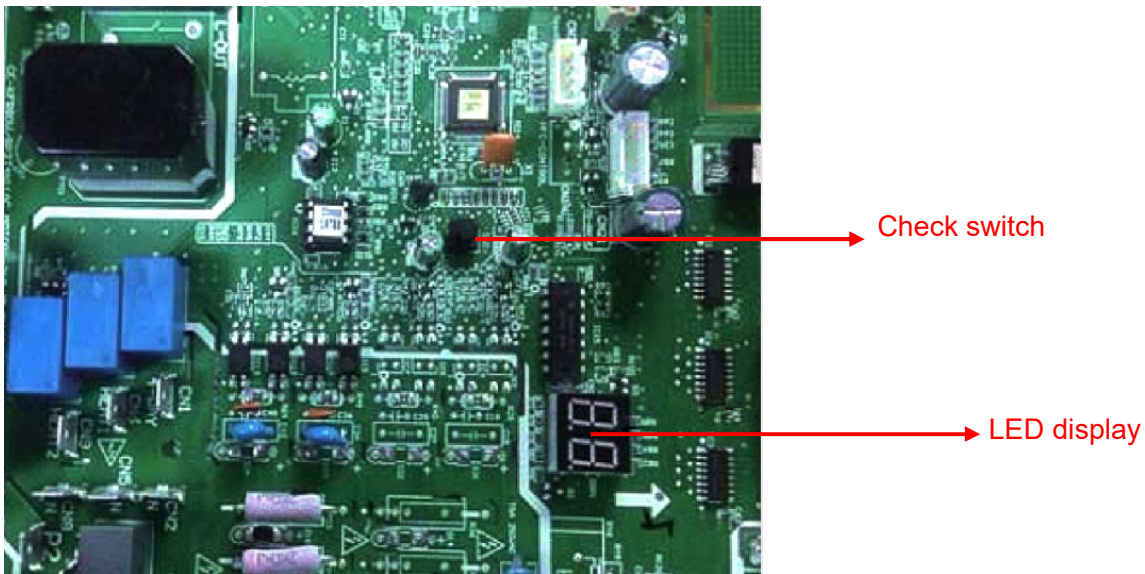



7.4.2.17 Communication malfunction between adapter board and outdoor main control board(ODU Ed/EL 16)


|  |  |
|--|--|
| <b>Malfunction decision conditions</b> | <b>If outdoor PCB does not receive feedback from adapter board.</b>                  |
| <b>Supposed causes</b>                 | <ul style="list-style-type: none"> <li>Wiring mistake</li> <li>Faulty PCB</li> </ul> |

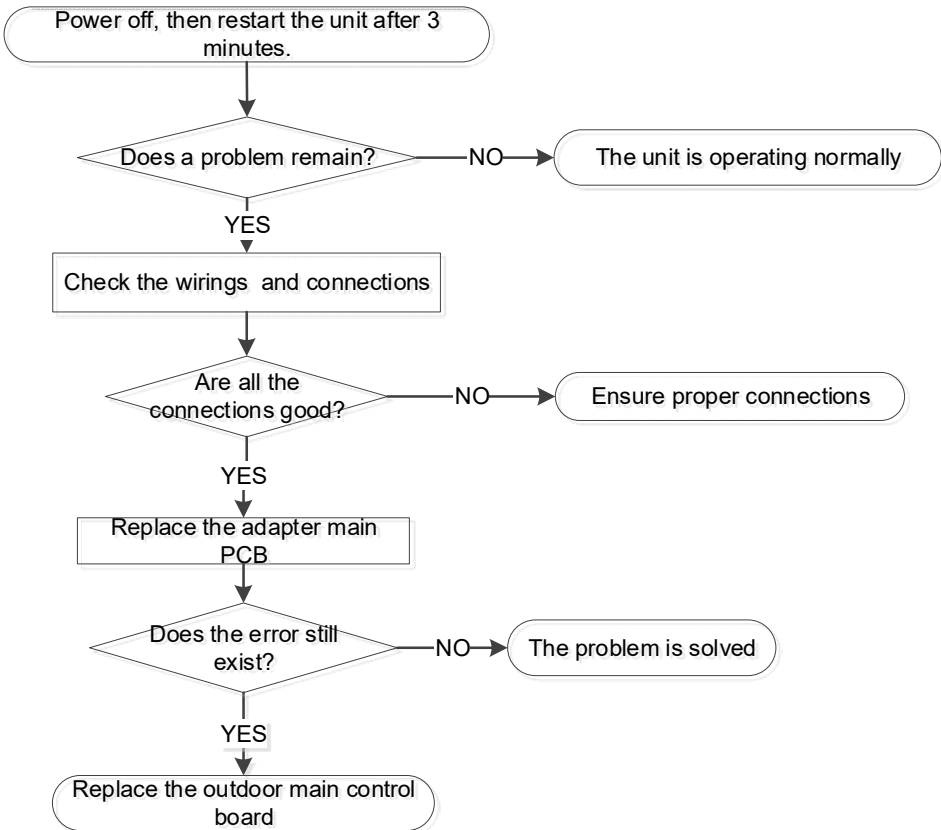

## 7.5 Trouble Criterion of Main Parts.

### 1. Temperature sensor checking

Disconnect the temperature sensor from PCB, measure the resistance value with a tester.



Tester

Temperature Sensors.

Room temp.(T1) sensor,


Indoor coil temp.(T2) sensor,

Outdoor coil temp.(T3) sensor,

Outdoor ambient temp.(T4) sensor,

Compressor discharge temp.(T5) sensor.

Measure the resistance value of each winding by using the multi-meter.

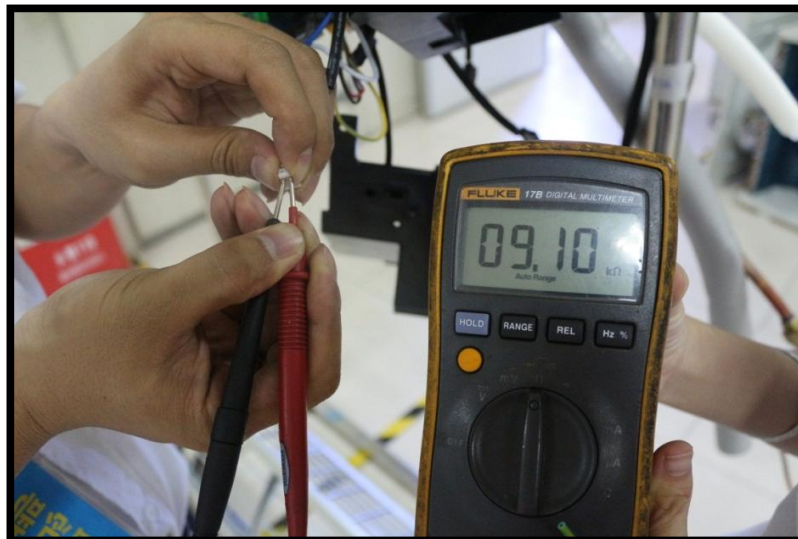

**Appendix 1 Temperature Sensor Resistance Value Table (°C--K)**

| °C  | K Ohm   | °C | K Ohm   | °C | K Ohm   | °C  | K Ohm   |
|-----|---------|----|---------|----|---------|-----|---------|
| -20 | 115.266 | 20 | 12.6431 | 60 | 2.35774 | 100 | 0.62973 |
| -19 | 108.146 | 21 | 12.0561 | 61 | 2.27249 | 101 | 0.61148 |
| -18 | 101.517 | 22 | 11.5000 | 62 | 2.19073 | 102 | 0.59386 |
| -17 | 96.3423 | 23 | 10.9731 | 63 | 2.11241 | 103 | 0.57683 |
| -16 | 89.5865 | 24 | 10.4736 | 64 | 2.03732 | 104 | 0.56038 |
| -15 | 84.2190 | 25 | 10.0000 | 65 | 1.96532 | 105 | 0.54448 |
| -14 | 79.3110 | 26 | 9.55074 | 66 | 1.89627 | 106 | 0.52912 |
| -13 | 74.5360 | 27 | 9.12445 | 67 | 1.83003 | 107 | 0.51426 |
| -12 | 70.1698 | 28 | 8.71983 | 68 | 1.76647 | 108 | 0.49989 |
| -11 | 66.0898 | 29 | 8.33566 | 69 | 1.70547 | 109 | 0.48600 |
| -10 | 62.2756 | 30 | 7.97078 | 70 | 1.64691 | 110 | 0.47256 |
| -9  | 58.7079 | 31 | 7.62411 | 71 | 1.59068 | 111 | 0.45957 |
| -8  | 56.3694 | 32 | 7.29464 | 72 | 1.53668 | 112 | 0.44699 |
| -7  | 52.2438 | 33 | 6.98142 | 73 | 1.48481 | 113 | 0.43482 |
| -6  | 49.3161 | 34 | 6.68355 | 74 | 1.43498 | 114 | 0.42304 |
| -5  | 46.5725 | 35 | 6.40021 | 75 | 1.38703 | 115 | 0.41164 |
| -4  | 44.0000 | 36 | 6.13059 | 76 | 1.34105 | 116 | 0.40060 |
| -3  | 41.5878 | 37 | 5.87359 | 77 | 1.29078 | 117 | 0.38991 |
| -2  | 39.8239 | 38 | 5.62961 | 78 | 1.25423 | 118 | 0.37956 |
| -1  | 37.1988 | 39 | 5.39689 | 79 | 1.21330 | 119 | 0.36954 |
| 0   | 35.2024 | 40 | 5.17519 | 80 | 1.17393 | 120 | 0.35982 |
| 1   | 33.3269 | 41 | 4.96392 | 81 | 1.13604 | 121 | 0.35042 |
| 2   | 31.5635 | 42 | 4.76253 | 82 | 1.09958 | 122 | 0.3413  |
| 3   | 29.9058 | 43 | 4.57050 | 83 | 1.06448 | 123 | 0.33246 |
| 4   | 28.3459 | 44 | 4.38736 | 84 | 1.03069 | 124 | 0.32390 |
| 5   | 26.8778 | 45 | 4.21263 | 85 | 0.99815 | 125 | 0.31559 |
| 6   | 25.4954 | 46 | 4.04589 | 86 | 0.96681 | 126 | 0.30754 |
| 7   | 24.1932 | 47 | 3.88673 | 87 | 0.93662 | 127 | 0.29974 |
| 8   | 22.5662 | 48 | 3.73476 | 88 | 0.90753 | 128 | 0.29216 |
| 9   | 21.8094 | 49 | 3.58962 | 89 | 0.87950 | 129 | 0.28482 |
| 10  | 20.7184 | 50 | 3.45097 | 90 | 0.85248 | 130 | 0.27770 |
| 11  | 19.6891 | 51 | 3.31847 | 91 | 0.82643 | 131 | 0.27078 |
| 12  | 18.7177 | 52 | 3.19183 | 92 | 0.80132 | 132 | 0.26408 |
| 13  | 17.8005 | 53 | 3.07075 | 93 | 0.77709 | 133 | 0.25757 |
| 14  | 16.9341 | 54 | 2.95896 | 94 | 0.75373 | 134 | 0.25125 |
| 15  | 16.1156 | 55 | 2.84421 | 95 | 0.73119 | 135 | 0.24512 |
| 16  | 15.3418 | 56 | 2.73823 | 96 | 0.70944 | 136 | 0.23916 |
| 17  | 14.6181 | 57 | 2.63682 | 97 | 0.68844 | 137 | 0.23338 |
| 18  | 13.9180 | 58 | 2.53973 | 98 | 0.66818 | 138 | 0.22776 |
| 19  | 13.2631 | 59 | 2.44677 | 99 | 0.64862 | 139 | 0.22231 |

## Appendix 2


| Unit: °C---K |       | Discharge temp. sensor table |       |    |       |                |       |
|--------------|-------|------------------------------|-------|----|-------|----------------|-------|
| -20          | 542.7 | 20                           | 68.66 | 60 | 13.59 | 100            | 3.702 |
| -19          | 511.9 | 21                           | 65.62 | 61 | 13.11 | 101            | 3.595 |
| -18          | 483   | 22                           | 62.73 | 62 | 12.65 | 102            | 3.492 |
| -17          | 455.9 | 23                           | 59.98 | 63 | 12.21 | 103            | 3.392 |
| -16          | 430.5 | 24                           | 57.37 | 64 | 11.79 | 104            | 3.296 |
| -15          | 406.7 | 25                           | 54.89 | 65 | 11.38 | 105            | 3.203 |
| -14          | 384.3 | 26                           | 52.53 | 66 | 10.99 | 106            | 3.113 |
| -13          | 363.3 | 27                           | 50.28 | 67 | 10.61 | 107            | 3.025 |
| -12          | 343.6 | 28                           | 48.14 | 68 | 10.25 | 108            | 2.941 |
| -11          | 325.1 | 29                           | 46.11 | 69 | 9.902 | 109            | 2.86  |
| -10          | 307.7 | 30                           | 44.17 | 70 | 9.569 | 110            | 2.781 |
| -9           | 291.3 | 31                           | 42.33 | 71 | 9.248 | 111            | 2.704 |
| -8           | 275.9 | 32                           | 40.57 | 72 | 8.94  | 112            | 2.63  |
| -7           | 261.4 | 33                           | 38.89 | 73 | 8.643 | 113            | 2.559 |
| -6           | 247.8 | 34                           | 37.3  | 74 | 8.358 | 114            | 2.489 |
| -5           | 234.9 | 35                           | 35.78 | 75 | 8.084 | 115            | 2.422 |
| -4           | 222.8 | 36                           | 34.32 | 76 | 7.82  | 116            | 2.357 |
| -3           | 211.4 | 37                           | 32.94 | 77 | 7.566 | 117            | 2.294 |
| -2           | 200.7 | 38                           | 31.62 | 78 | 7.321 | 118            | 2.233 |
| -1           | 190.5 | 39                           | 30.36 | 79 | 7.086 | 119            | 2.174 |
| 0            | 180.9 | 40                           | 29.15 | 80 | 6.859 | 120            | 2.117 |
| 1            | 171.9 | 41                           | 28    | 81 | 6.641 | 121            | 2.061 |
| 2            | 163.3 | 42                           | 26.9  | 82 | 6.43  | 122            | 2.007 |
| 3            | 155.2 | 43                           | 25.86 | 83 | 6.228 | 123            | 1.955 |
| 4            | 147.6 | 44                           | 24.85 | 84 | 6.033 | 124            | 1.905 |
| 5            | 140.4 | 45                           | 23.89 | 85 | 5.844 | 125            | 1.856 |
| 6            | 133.5 | 46                           | 22.89 | 86 | 5.663 | 126            | 1.808 |
| 7            | 127.1 | 47                           | 22.1  | 87 | 5.488 | 127            | 1.762 |
| 8            | 121   | 48                           | 21.26 | 88 | 5.32  | 128            | 1.717 |
| 9            | 115.2 | 49                           | 20.46 | 89 | 5.157 | 129            | 1.674 |
| 10           | 109.8 | 50                           | 19.69 | 90 | 5     | 130            | 1.632 |
| 11           | 104.6 | 51                           | 18.96 | 91 | 4.849 |                |       |
| 12           | 99.69 | 52                           | 18.26 | 92 | 4.703 |                |       |
| 13           | 95.05 | 53                           | 17.58 | 93 | 4.562 |                |       |
| 14           | 90.66 | 54                           | 16.94 | 94 | 4.426 |                |       |
| 15           | 86.49 | 55                           | 16.32 | 95 | 4.294 | B(25/50)=3950K |       |
| 16           | 82.54 | 56                           | 15.73 | 96 | 4.167 |                |       |
| 17           | 78.79 | 57                           | 15.16 | 97 | 4.045 | R(90°C)=5KΩ±3% |       |
| 18           | 75.24 | 58                           | 14.62 | 98 | 3.927 |                |       |
| 19           | 71.86 | 59                           | 14.09 | 99 | 3.812 |                |       |

**Appendix 3:**

|    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| °C | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 |
| °F | 48 | 50 | 52 | 54 | 56 | 58 | 60 | 62 | 64 | 66 | 68 | 70 | 72 |
| °C | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 |
| °F | 74 | 76 | 78 | 80 | 82 | 84 | 86 | 88 | 90 | 92 | 94 | 96 | 98 |

**2. Compressor check**

Measure the resistance value of each winding by using the tester.

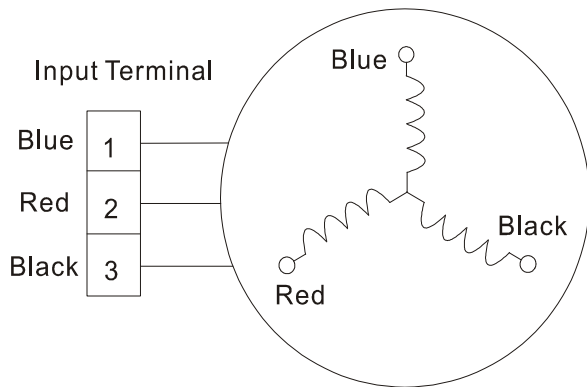

| Position     | Resistance Value |                              |               |              |                            |             |               |
|--------------|------------------|------------------------------|---------------|--------------|----------------------------|-------------|---------------|
|              | ATM150D23UFZ     | ATF235D22UMT<br>ATF250D22UMT | KTF400D64UMTA | ATF310D43UMT | ATQ360D1UMU<br>KTQ420D1UMU | ATQ420D1UMU | EAPQ420D1UMUA |
| Blue - Red   | 1.72±5% Ω        | 0.75±5% Ω                    | 0.63±5% Ω     | 0.65±5% Ω    | 0.37±5% Ω                  | 0.38±5% Ω   | 0.1±5% Ω      |
| Blue - Black |                  |                              |               |              |                            |             |               |
| Red - Blue   |                  |                              |               |              |                            |             |               |


### 3. IPM continuity check

Turn off the power, let the large capacity electrolytic capacitors discharge completely, and dismount the IPM. Use a digital tester to measure the resistance between P and UVWN; UVW and N.

| Digital tester |          | Normal resistance value           | Digital tester |          | Normal resistance value           |
|----------------|----------|-----------------------------------|----------------|----------|-----------------------------------|
| (+)Red         | (-)Black |                                   | (+)Red         | (-)Black |                                   |
| P              | N        | $\infty$<br>(Several M $\Omega$ ) | U              | N        | $\infty$<br>(Several M $\Omega$ ) |
|                | U        |                                   |                |          |                                   |
|                | V        |                                   |                |          |                                   |
|                | W        |                                   |                |          |                                   |
|                |          |                                   | (+)Red         |          |                                   |


### 4. AC Fan Motor.

Measure the resistance value of each winding by using the tester.

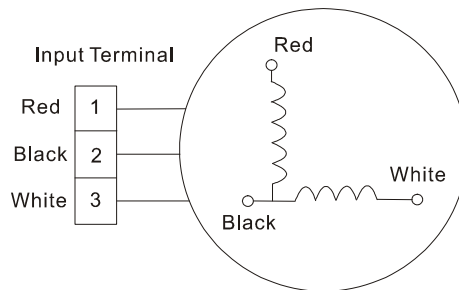

| Position      | Resistance Value                            |  |   |  |
|---------------|---|--|---|--|
|               | RPG20B                                      |  | RPG28H  |  |
| Black - Red   | 381 $\Omega$ ±8% (20°C)<br>(Brand: Weiling) | 342 $\Omega$ ±8% (20°C)<br>(Brand: Dayang) | 183.6 $\Omega$ ±8% (20°C)<br>(Brand: Weiling) | 180 $\Omega$ ±8% (20°C)<br>(Brand: Wolong) |
| White - Black | 267 $\Omega$ ±8% (20°C)<br>(Brand: Weiling) | 253 $\Omega$ ±8% (20°C)<br>(Brand: Dayang) | 206 $\Omega$ ±8% (20°C)<br>(Brand: Weiling)   | 190 $\Omega$ ±8% (20°C)<br>(Brand: Wolong) |

Measure the resistance value of each winding by using the tester.

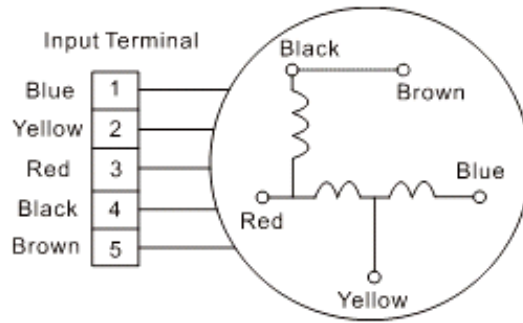


| Position      | Resistance Value |                    |                   |                   |                   |                     |                    |
|---------------|------------------|--------------------|-------------------|-------------------|-------------------|---------------------|--------------------|
|               | YDK70-6FB        | YDK180-8GB         | YSK27-4G          | YSK68-4B          | YDK45-6B          | YSK25-6L            | YDK53-6FB(B)       |
| Black - Red   | 56Ω±8%<br>(20°C) | 24.5Ω±8%<br>(20°C) | 317Ω±8%<br>(20°C) | 145Ω±8%<br>(20°C) | 345Ω±8%<br>(20°C) | 627Ω±8%<br>(20°C)   | 88.5Ω±8%<br>(20°C) |
| Red - Yellow  | 76Ω±8%<br>(20°C) | 19Ω±8%<br>(20°C)   | 252Ω±8%<br>(20°C) | 88Ω±8%<br>(20°C)  | 150Ω±8%<br>(20°C) | 374.3Ω±8%<br>(20°C) | 138Ω±8%<br>(20°C)  |
| Yellow - Blue | 76Ω±8%<br>(20°C) | 19Ω±8%<br>(20°C)   | 252Ω±8%<br>(20°C) | 88Ω±8%<br>(20°C)  | 150Ω±8%<br>(20°C) | 374.3Ω±8%<br>(20°C) | 138Ω±8%<br>(20°C)  |


### 5.4-way valve

1. Power on, use a digital tester to measure the voltage, when the unit operates in cooling, it is 0V. When the unit operates in heating, it is about 230VAC.

If the value of the voltage is not in the range, the PCB must have problems and need to be replaced.

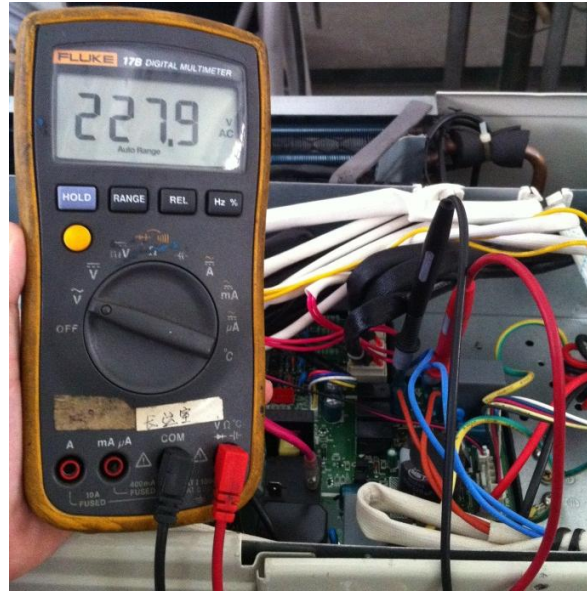




2 Turn off the power, use a digital tester to measure the resistance. The value should be 1.8~2.5 K $\Omega$ .

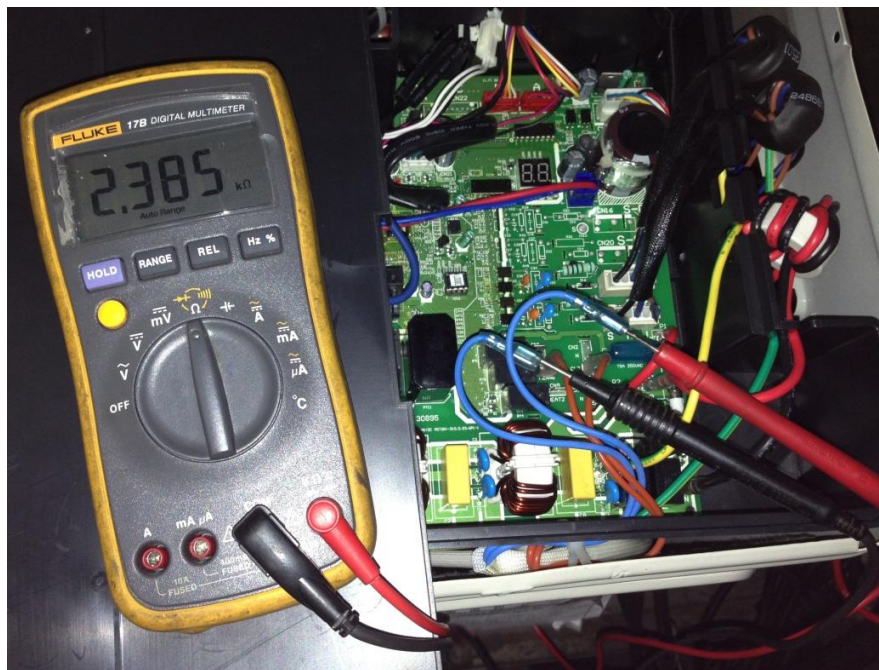

## 6.EXV check




**Disconnect the connectors.**



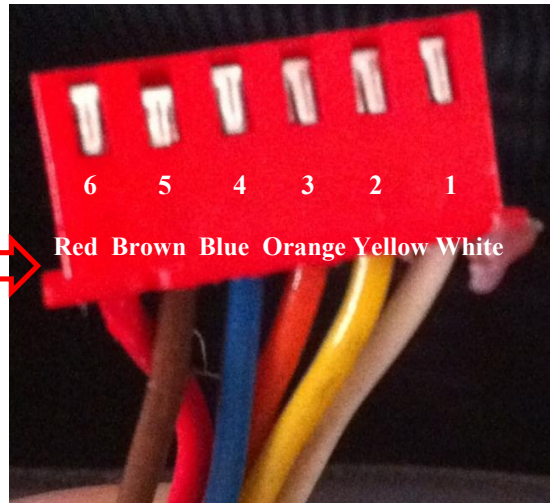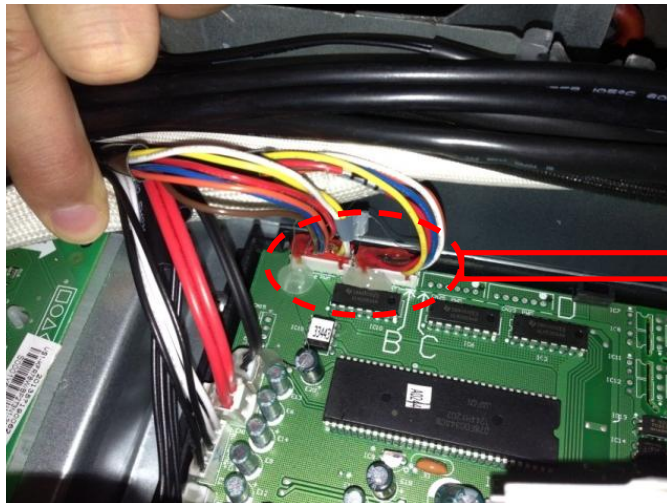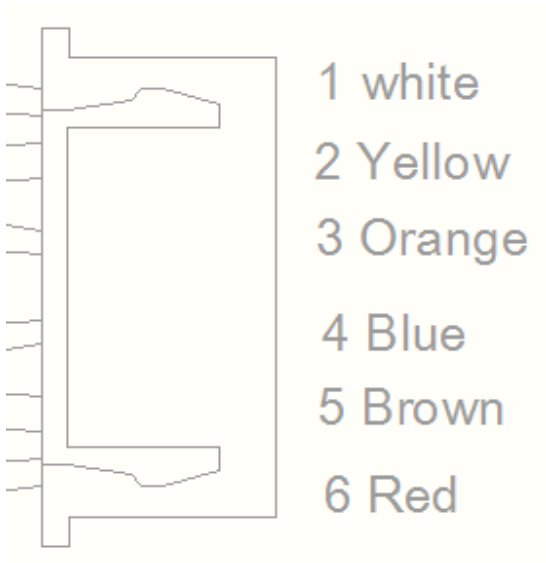


**Resistance to EXV coil**

| Color of lead wire | Normal Value |
|--------------------|--------------|
| Red- Blue          | About 50Ω    |
| Red - Yellow       |              |
| Brown-Orange       |              |
| Brown-White        |              |

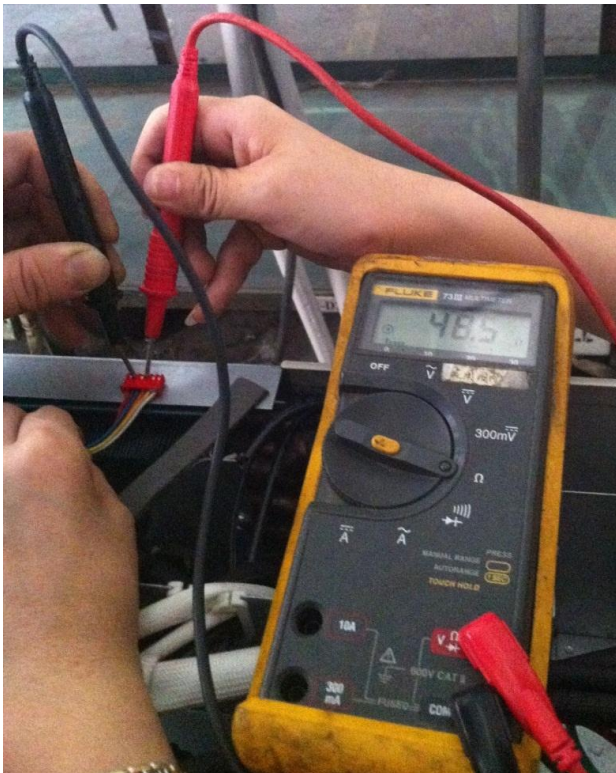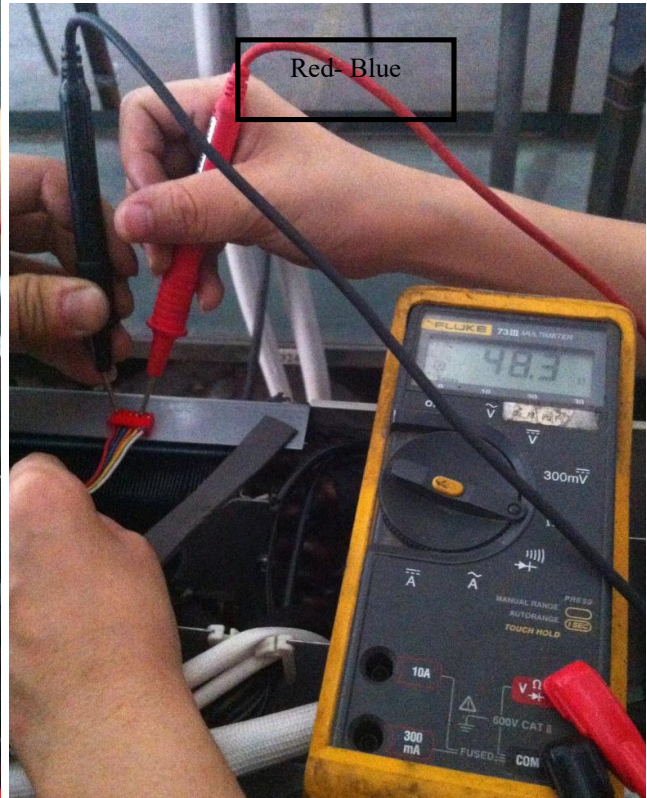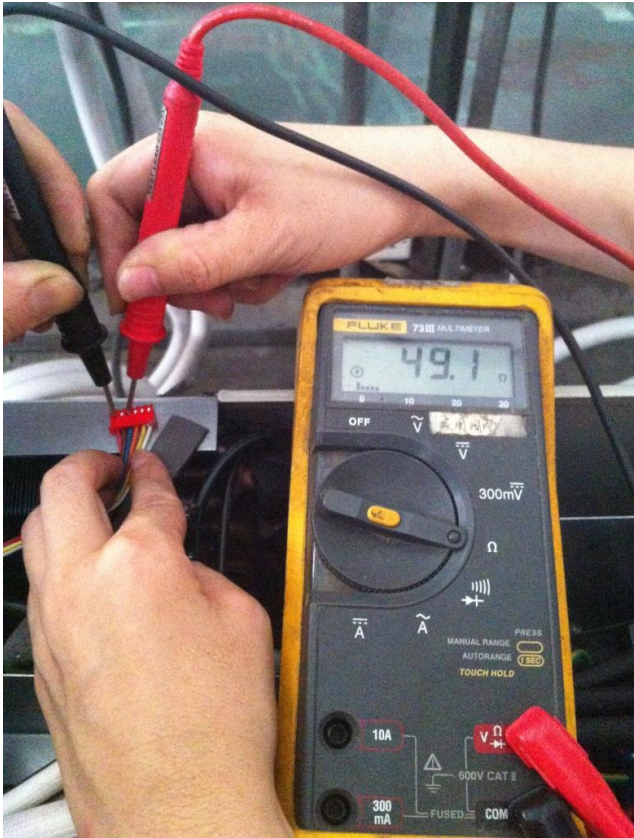

|              |
|--------------|
| Brown-Orange |
| Red - Yellow |
|              |



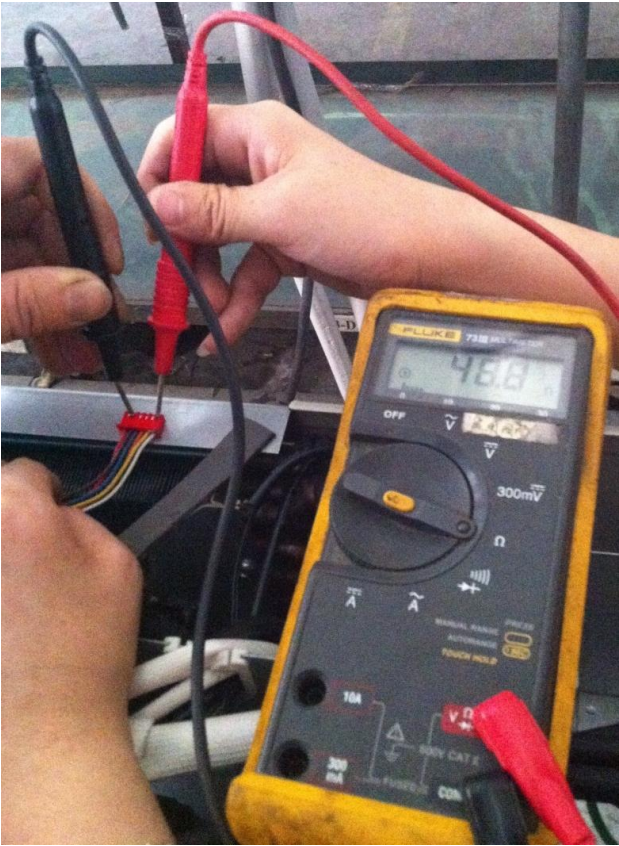



Brown-White

## 8. Disassembly Instructions


Note: This part is for reference, the photos may have slight difference with your machine.

### ➤ CMZ-18-2Z (WX430 metal plate)
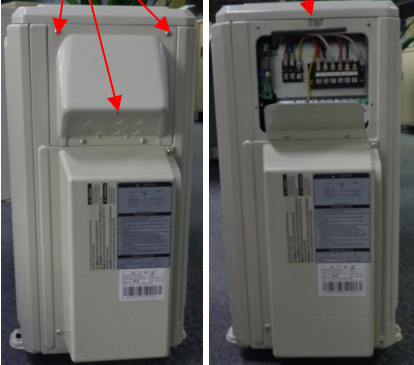
| No. | Part name   | Procedures   | Remarks  |
|-----|-------------|--|--|
| 1   | Panel plate | <p>How to remove the panel plate.</p> <ol style="list-style-type: none"> <li>1) Turn off the air conditioner. Turn off the power breaker.</li> <li>2) Remove the screws of big handle, and remove the big handle.(3 screws)</li> <li>3) Remove the screws of top cover, and remove the top cover. (3 screws)</li> <li>4) Remove the screws of front panel, and remove the front panel. (7 screws)</li> </ol> | <p>Screws of big handle      Screws of top cover</p>  <p>Screws of top cover</p>  |

5) Remove the screws of water collector, and remove the water collector. (3 screws)



6) Remove two screws of terminal board, and 9 screws of right side panel, and remove the right side panel.




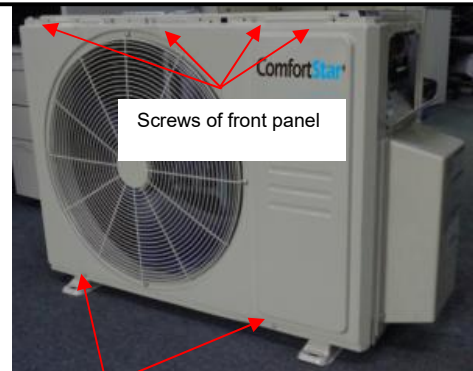


Screws of front panel





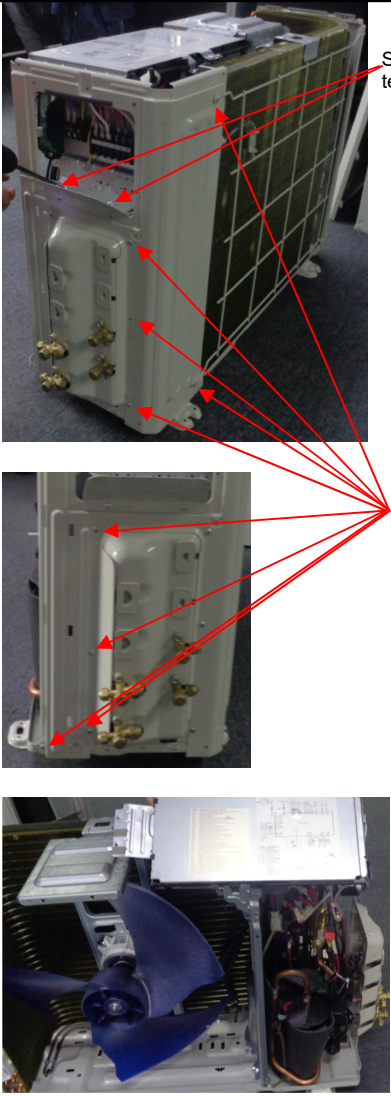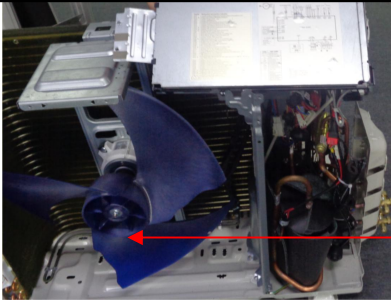

Screws of water collector

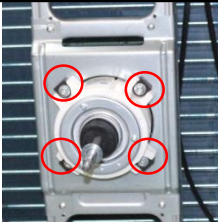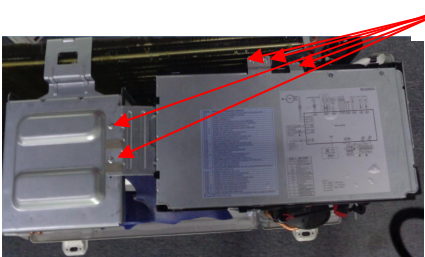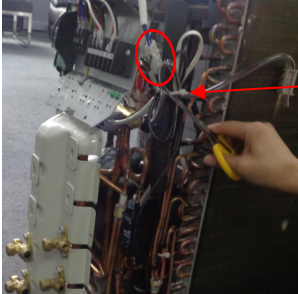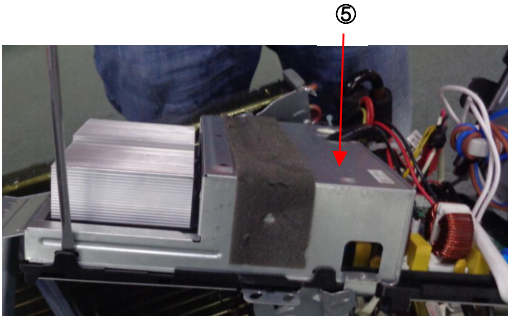
|   |              |  |   |
|---|--------------|--|---|
|   |              |  |  <p>Screws of terminal board</p> <p>Screws of right side board</p> |
| 2 | Fan assembly | <p>How to remove the fan assembly.</p> <ol style="list-style-type: none"> <li>1) Remove the top cover, right side panel and front panel from item 1.step 1~6</li> <li>2) Remove the hex nut fixing the fan.</li> <li>3) Remove the fan.</li> </ol> |  <p>②</p>   |



|          |                         |   |   |
|----------|-------------------------|---|---|
|          |                         | <p>4) Remove the fan motor after unfastening four fixing screws.</p>  |   |
| <p>3</p> | <p>Electrical parts</p> | <p>How to remove the electrical parts.</p> <p>1) Perform work of item 1.</p> <p>2) Remove 5 screws of the cover of electrical control box cover and remove it.</p> <p>3) Cut the ribbon by a shear and disconnect the 4-way valve connector CN38(2p,blue).</p> <p>4) Turn over the main board.</p> <p>5) Remove the electronic installing box subassembly (4 hooks)</p> |    |

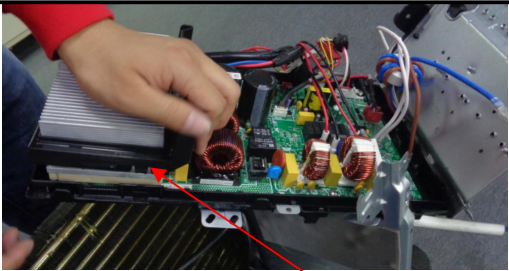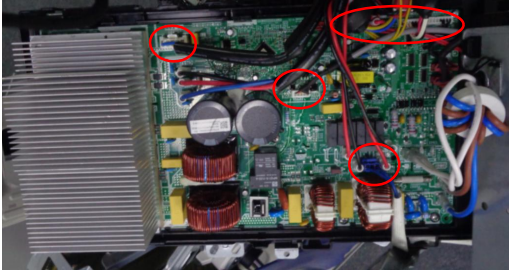

|  |  |  |  |
|--|--|--|--|
|  |  | <p>6) Remove the support of electronic control box</p>   |    |
|  |  | <p>7) Disconnect the connectors and wires connected from PCB and other parts.</p>                              |    |
|  |  | <p>8) Disconnect the grounding wire (yellow-green) after removing the big handle and the right-rear panel.</p> |   |
|  |  | <p>9) Remove the PCB board.</p>  |  |

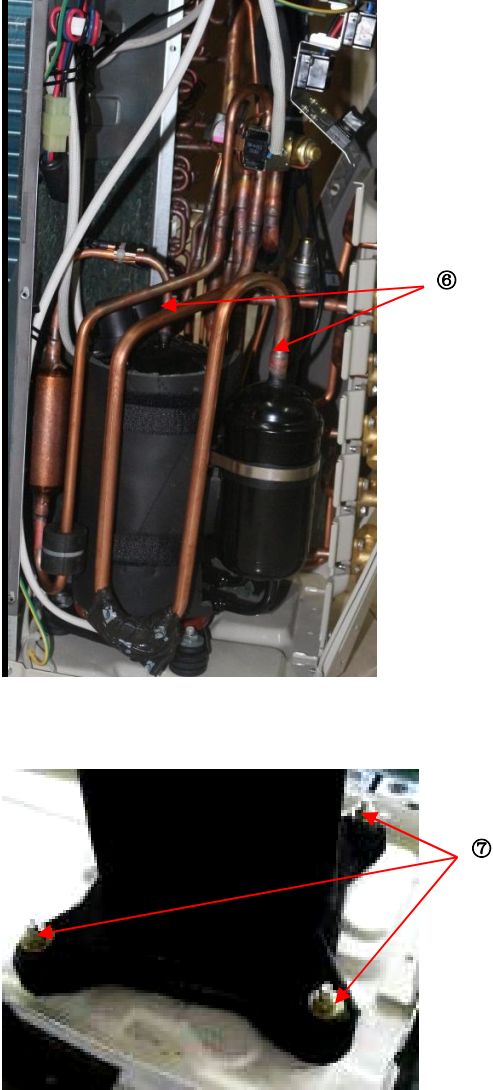



|   |            |  |   |
|---|------------|--|---|
| 4 | Compressor | <p>How to remove the compressor.</p> <ol style="list-style-type: none"> <li>1) Perform work of item 1,2,3.</li> <li>2) Remove the electrical control box and partition plate.</li> <li>3) Extract refrigerant gas.</li> <li>4) Remove the sound insulation material and crankcase heating cable.</li> <li>5) Remove terminal cover of compressor, and disconnect wires of crankcase electric heater and compressor from the terminal.</li> <li>6) Remove the discharge pipe and suction pipe with a burner.</li> <li>7) Remove the hex nuts and washers fixing the compressor to bottom plate.</li> <li>8) Lift the compressor.</li> </ol> |  |
|---|------------|--|---|

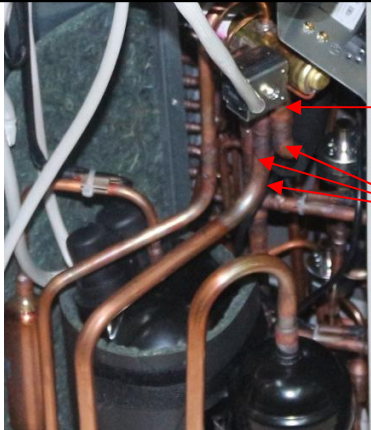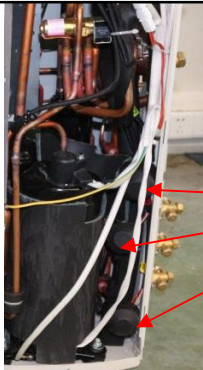
|   |                     |  |  |
|---|---------------------|--|--|
| 5 | The 4-way valve     | <p>How to remove the 4-way valve</p> <ol style="list-style-type: none"> <li>1) Perform work of item 1,2.</li> <li>2) Extract refrigerant gas.</li> <li>3) Remove the electrical parts from item 3.</li> <li>4) Remove fixing screw of the coil, and remove the coil.</li> <li>5) Detach the welded parts of 4-way valve and pipe.</li> </ol> |  <p>Coil</p> <p>Welded parts</p> |
| 6 | The expansion valve | <p>How to remove the expansion valve</p> <ol style="list-style-type: none"> <li>1) Perform work of item 1,2.</li> <li>2) Remove the electrical parts from item 3.</li> <li>3) Remove the coils.</li> <li>4) Detach the welded parts of expansion valves and pipes.</li> </ol>  |  <p>Expansion valves</p>        |



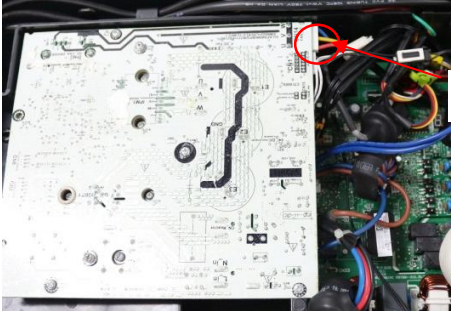
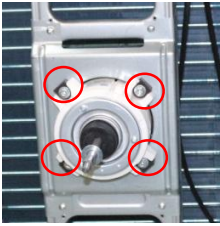
**CVH-18-2SH CMZ-27-3Z CVH-27-3SH CMZ-48-4Z (WD30 metal plate)**

| No. | Part name   | Procedures  | Remarks  |
|-----|-------------|---|--|
| 1   | Panel plate | <p>How to remove the panel plate.</p> <p>7) Turn off the air conditioner. Turn off the power breaker.</p> <p>8) Remove the screws of big handle, and remove the big handle.(4 screws)</p> <p>9) Remove the screws of top cover, and remove the top cover. (4 screws)</p> <p>10) Remove the screws of right front side panel, and remove the right front side panel (1 screws)</p> <p>11) Remove the screws of front panel, and remove the front panel. (8 screws)</p> | <p>Screws of big handle</p> <p>Screws of top cover</p> <p>Screws of top cover</p> <p>Screws of front panel</p> <p>Screws of right front side panel</p> |



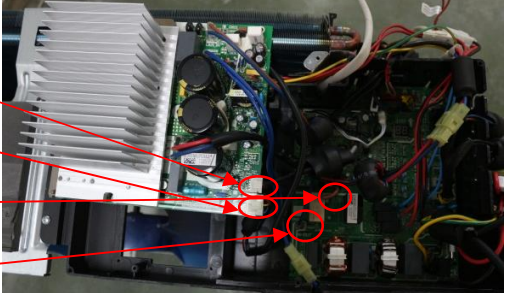
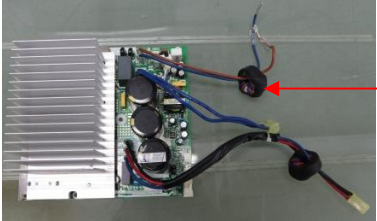
12) Remove two screws of terminal board, screws of water collector and fifteen screws of right-rear panel, and remove the right-rear panel.

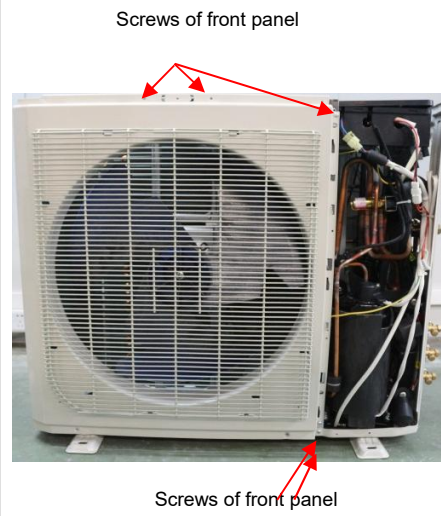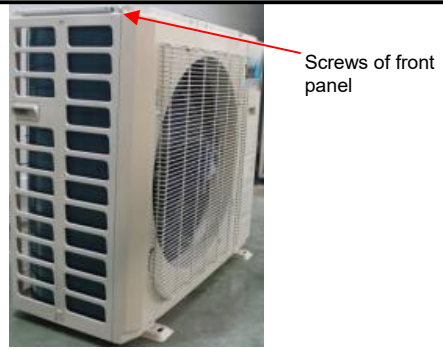

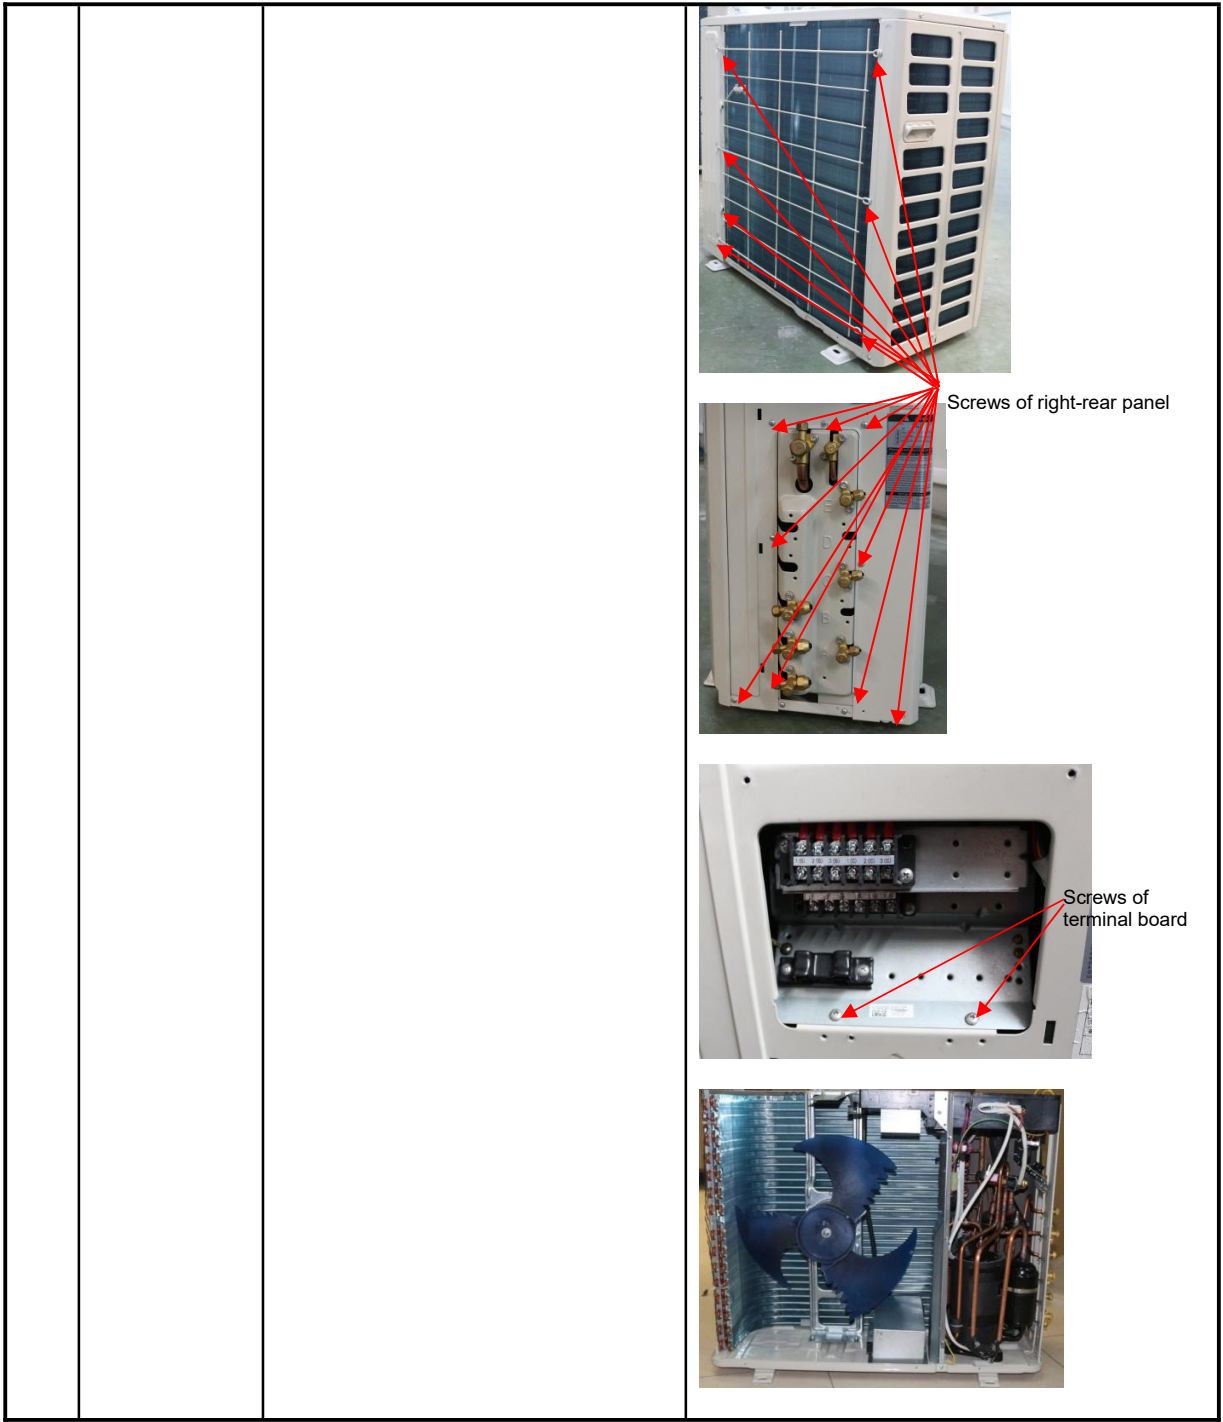
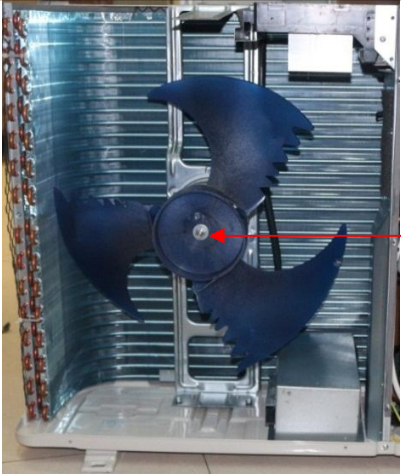
|   |              |   |   |
|---|--------------|---|---|
| 2 | Fan assembly | <p>How to remove the fan assembly.</p> <p>5) Remove the top cover, right front side panel and front panel from item 1.step 1~4</p> <p>6) Remove the hex nut fixing the fan.</p> <p>7) Remove the fan.</p> <p>8) Remove the cover of electrical control box cover.</p> <p>9) Disconnect the fan motor connector CN14(5p,white) from the IPM board.</p> <p>10) Remove the fan motor after unfastening four fixing screws.</p> |     |
|---|--------------|---|---|

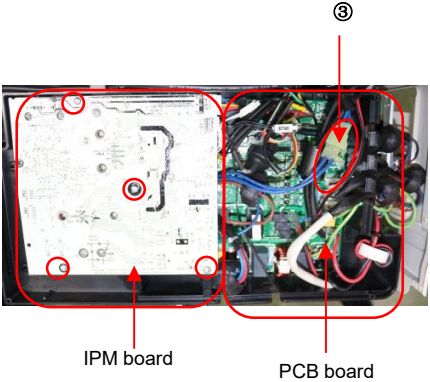

|          |                         |   |  |
|----------|-------------------------|---|--|
| <p>3</p> | <p>Electrical parts</p> | <p>How to remove the electrical parts.</p> <p>10) Perform work of item 1,2.</p> <p>11) Remove the four screws fixing the IPM board.</p> <p>12) Unfasten the connector of the reactor.</p> <p>13) Unfasten the connector of the compressor.</p> <p>14) Disconnect following 3 pieces of connection wires and connectors between IPM and PCB.</p> <p>CN1(5p,white)</p> <p>CN14(3p,white)</p> <p>CN3(red or brown)</p> <p>CN5(blue)</p> <p>15) Remove the IPM board.</p> |  <p>IPM board</p> <p>PCB board</p>    |
|----------|-------------------------|---|--|

16) Disconnect the connectors and wires connected from PCB and other parts.

**Connectors:**

CN17: T3/T4 temperature sensor (2p,white)

CN7: Discharge temperature sensor (2p,white)

CN15: T2B-A,B,C temperature sensor (2p/2p/2p,white)

CN18/CN19/CN22: Electronic expansion valve A,B,C (6p/6p/6p,red/red/red)

CN25/CN23/CN20: S-A,S-B,S-C (3p/3p/3p,white/white/white)

**Wires:**

CN1/CN2: 4-way valve (blue-blue)



CN5/CN6: Crankcase heating cable (red-red)

CN3: L1-IN (red)


CN4: L2-IN (black)



17) Disconnect the grounding wire (yellow-green) after removing the big handle and the right-rear panel.


18) Remove the PCB board.

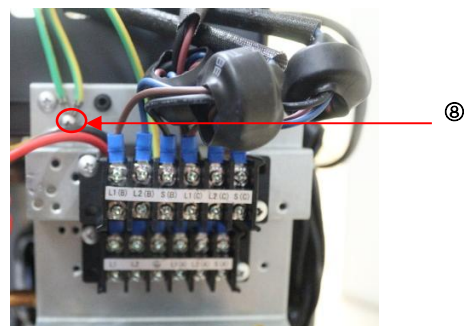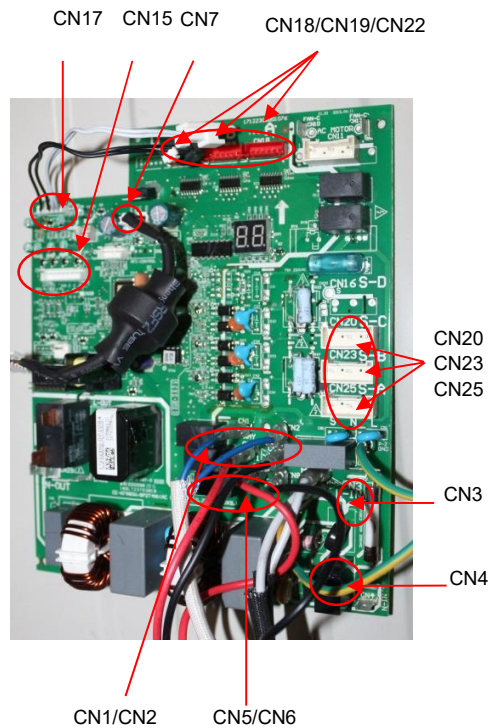

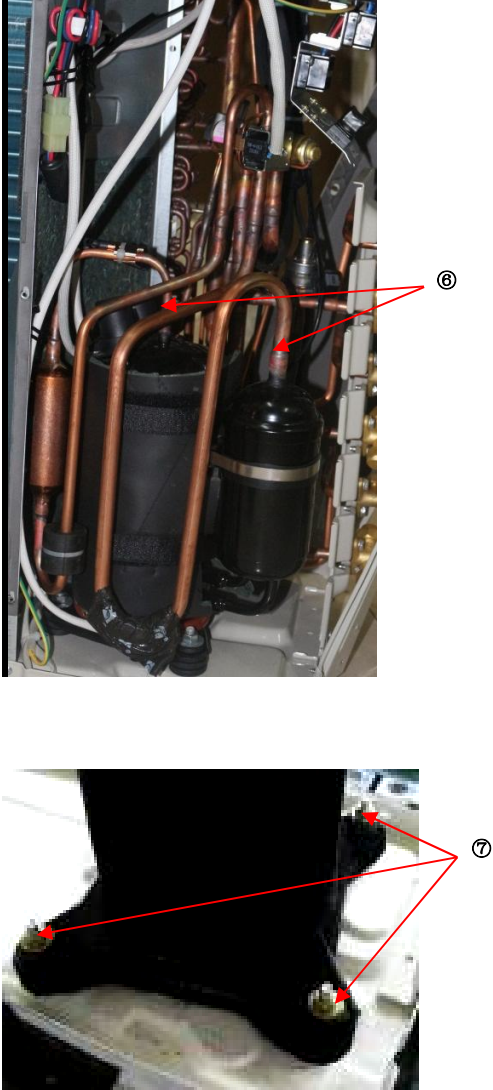




|   |            |  |   |
|---|------------|--|---|
| 4 | Compressor | <p>How to remove the compressor.</p> <p>9) Perform work of item 1,2,3.</p> <p>10) Remove the electrical control box and partition plate.</p> <p>11) Extract refrigerant gas.</p> <p>12) Remove the sound insulation material and crankcase heating cable.</p> <p>13) Remove terminal cover of compressor, and disconnect wires of crankcase electric heater and compressor from the terminal.</p> <p>14) Remove the discharge pipe and suction pipe with a burner.</p> <p>15) Remove the hex nuts and washers fixing the compressor to bottom plate.</p> <p>16) Lift the compressor.</p> |  |
|---|------------|--|---|

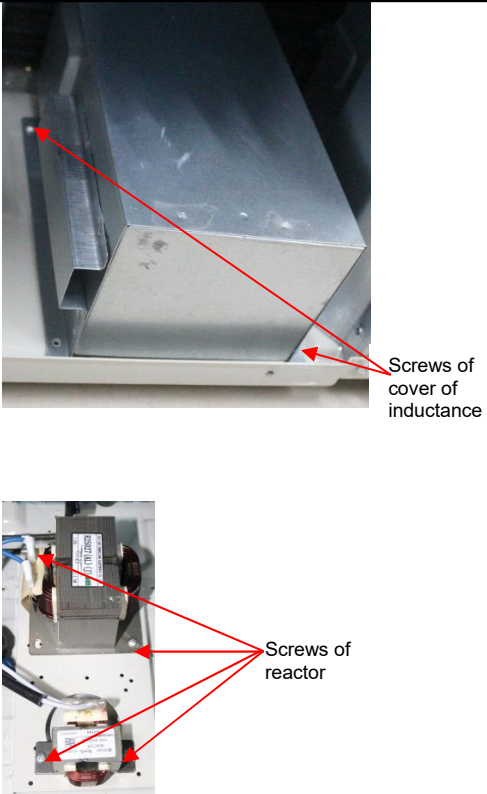
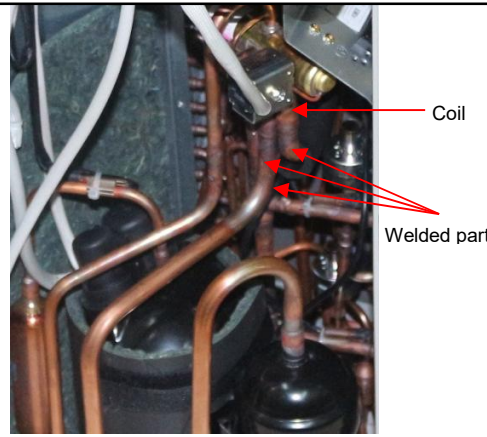
|   |                 |   |  |
|---|-----------------|---|--|
| 5 | Reactor         | <p>How to remove the reactor</p> <ol style="list-style-type: none"> <li>1) Perform work of item 1,2</li> <li>2) Unfasten the connector between IPM and reactor.</li> <li>3) Remove two screws of cover of inductance, and remove the cover of inductance</li> <li>4) Disconnect two pieces of wires connected from the cover of inductance.</li> <li>5) Remove four screws of reactor, and remove the reactor.</li> </ol> |   |
| 6 | The 4-way valve | <p>How to remove the 4-way valve</p> <ol style="list-style-type: none"> <li>6) Perform work of item 1,2.</li> <li>7) Extract refrigerant gas.</li> <li>8) Remove the electrical parts from item 3.</li> <li>9) Remove fixing screw of the coil, and remove the coil.</li> <li>10) Detach the welded parts of 4-way valve and pipe.</li> </ol>   |  |


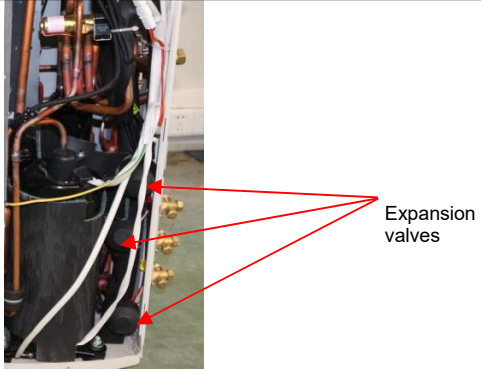
|   |                     |  |  |
|---|---------------------|--|--|
| 7 | The expansion valve | <p>How to remove the expansion valve</p> <p>5) Perform work of item 1,2.</p> <p>6) Remove the electrical parts from item 3.</p> <p>7) Remove the coils.</p> <p>8) Detach the welded parts of expansion valves and pipes.</p> |  |
|---|---------------------|--|--|

➤ **CVH-36-4SH, CVH-48-5SH, CMZ-54-5Z, CMZ-60-5Z, CVH-60-5SH (WE30 metal plate)**



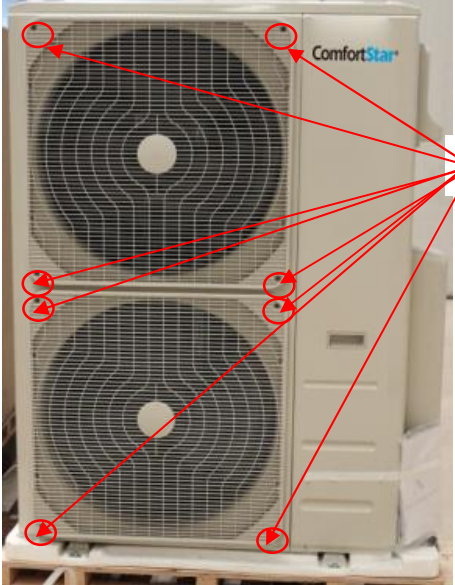
| No | Part name    | Procedures   | Remarks  |
|----|--------------|--|--|
| 1  | Fan assembly | <p>How to remove the fan assembly.</p> <p>1) Turn off the air conditioner. Turn off the power breaker.</p> <p>2) Remove the screws of air outlet grille(8 screws)</p> <p>3) Remove the hex nut fixing</p> <p>4) the fan.</p> <p>5) Remove the fan.</p> |  |

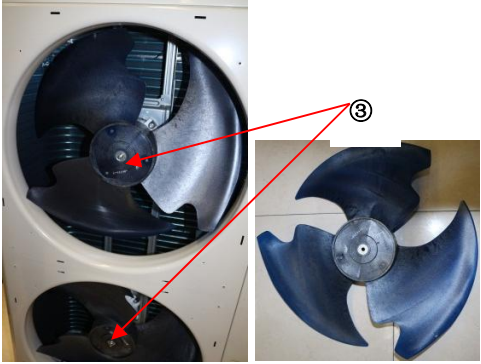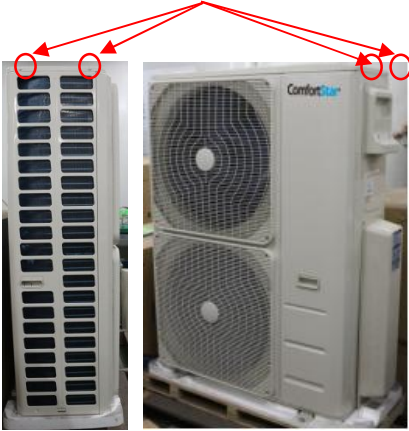
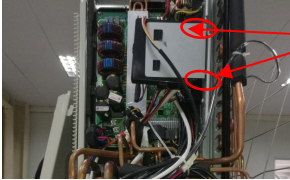

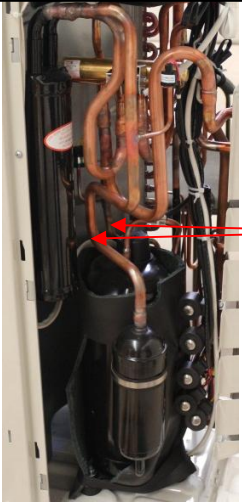
|  |  |   |  |
|--|--|---|--|
|  |  | <p>6) Remove the screws of top cover, and remove the top cover. (4 screws)</p> <p>7) Remove the screws of front side panel, and remove the front side panel (1 screw)</p> <p>8) Disconnect the fan motor</p> <p>9) connectors<br/>FAN1(3p,white) and<br/>FAN2(3p,white) from DC<br/>motor driver board.</p> |  <p style="text-align: center;">Screws of top</p>  |
|--|--|---|--|
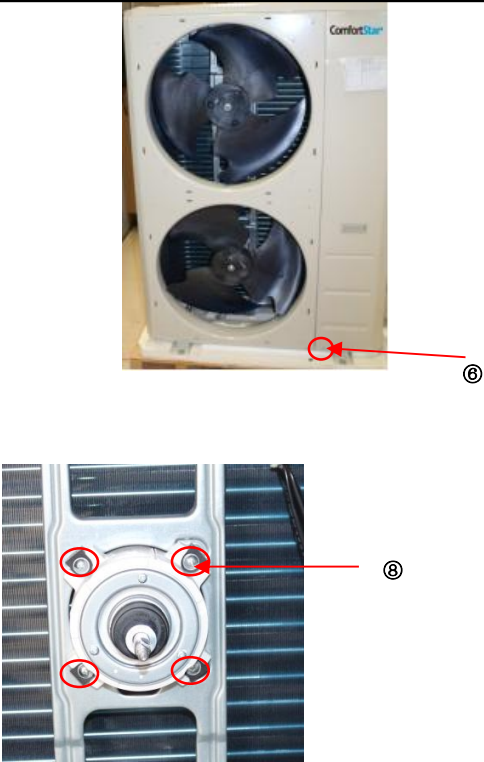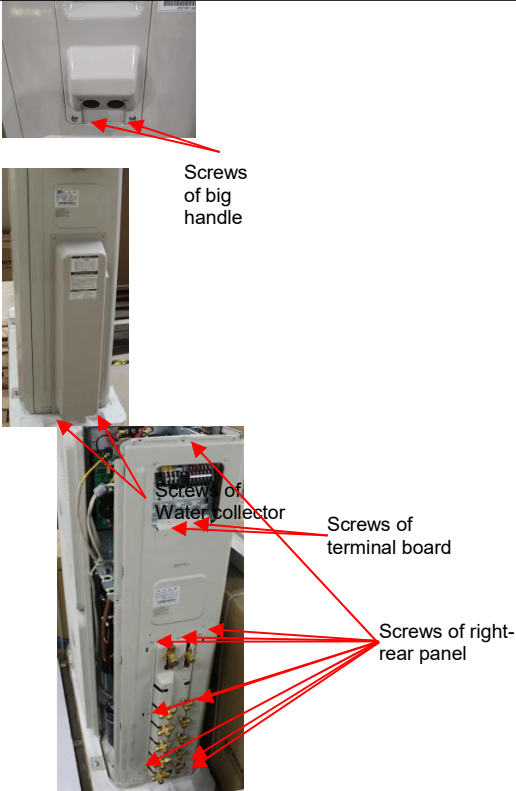
|   |             |  |  |
|---|-------------|--|--|
|   |             | <p>10) Remove the fan motor after unfastening fixing screws.</p>   |   |
| 2 | Panel plate | <p>How to remove the panel plate.</p> <p>1) Remove big handle.(2 screws) and water collector(2 screws)</p> <p>2) Remove 2 screws of terminal board and 15 screws of right-rear panel, and remove the right-rear panel.</p> |  |

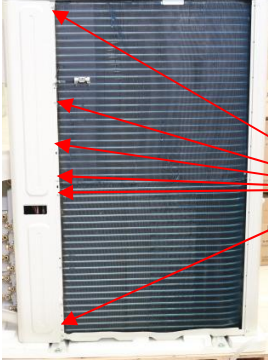
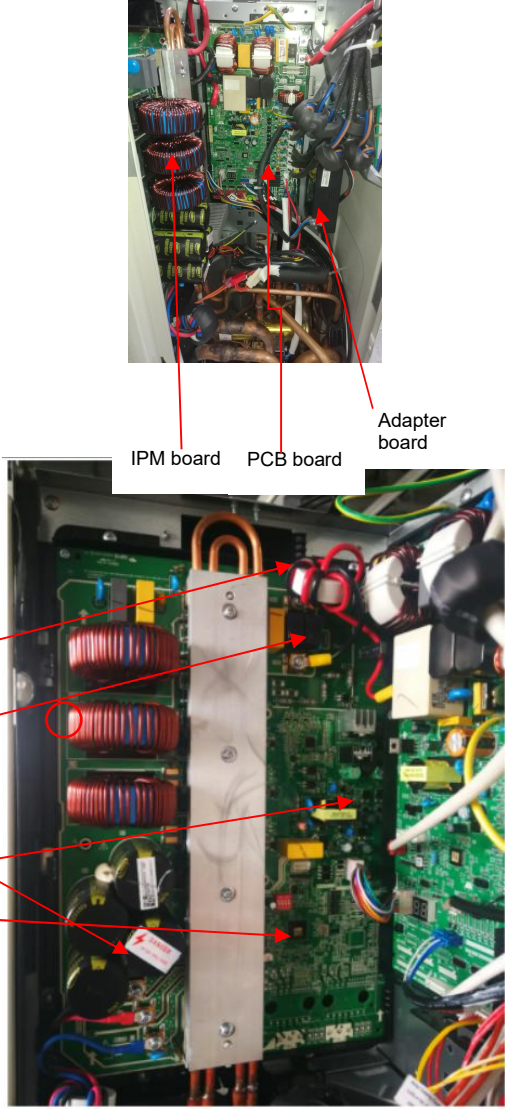
|   |                  |  |  |
|---|------------------|--|--|
|   |                  |  |  <p>Screws of right-rear panel</p>               |
| 3 | Electrical parts | <p>How to remove the electrical parts.</p> <ol style="list-style-type: none"> <li>1) Perform work of item 1 step 5~6 and item 2.</li> <li>2) Disconnect the fan motor Connector(5p,white) from the IPM board.</li> <li>3) Disconnect following 6 pieces of connection wires and connectors between IPM and other parts. <ul style="list-style-type: none"> <li>CN3(red)</li> <li>CN2(black)</li> <li>U(blue),V(red),W(black)</li> <li>CN9(10p,white)</li> <li>CN8,CN5(3p)</li> </ul> </li> <li>4) Remove the 4 screws and unfix the 4 hooks and then remove the IPM module board.</li> </ol> |  <p>IPM board    PCB board    Adapter board</p> |

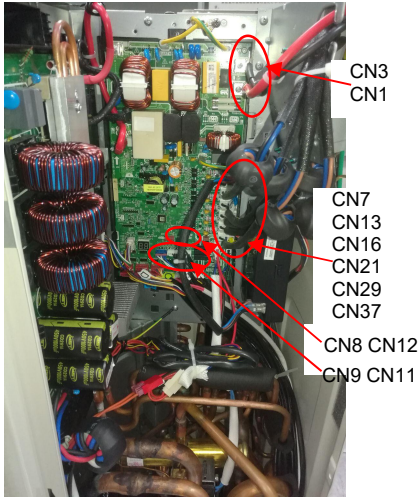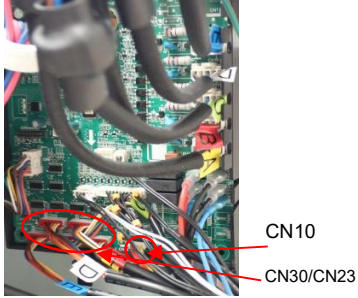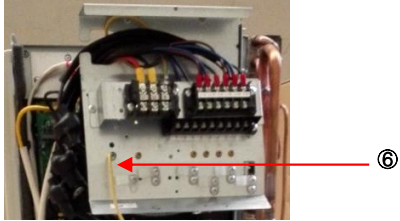


|  |   |   |
|--|---|---|
|  | <p>5) Disconnect the connectors and wires connected from PCB and other parts.</p> <p>Connectors:</p> <p>CN8: Discharge temperature sensor (2p,white)</p> <p>CN12: Heatsink temperature sensor(2p,red)</p> <p>CN9:T3/T4 temperature sensor (2p/2p,white)</p> <p>CN11:T2B-A,B,C,D,E temperature sensor (2p/2p/2p/2p/2p,white)</p> <p>CN15/CN23/CN26/CN30/CN33: Electronic expansion valve (6p/6p/6p/6p/6p,red)</p> <p>CN37/CN29/CN21/CN16/CN13/CN7: S-A,S-B,S-C,S-D,S-E (3p/3p/3p/3p/3p,white)</p> <p>CN10: High and low pressure switch (2p/2p, white)</p> <p>Wires:</p> <p>CN17/CN18: 4-way valve (blue-blue)</p> <p>CN19/CN20: connected to crankcase heating cable. (black-red)</p> <p>CN24/CN25: Electric heater of chassis (orange-orange)</p> <p>CN1:L-IN (red)</p> <p>CN3:N-IN (black)</p> <p>6) Disconnect the grounding wire (yellow-green) after removing the big handle.</p> <p>7) Remove the 4 screws and unfix the 6 hooks and then</p> |    |
|--|---|---|

|   |            |   |  |
|---|------------|---|--|
|   |            | <p>remove the main control board.</p> <p>8) Remove the 2 screws and then remove the adapter board assy.</p>   |   <p>Screws of adapter board</p>  |
| 4 | Compressor | <p>How to remove the compressor.</p> <ol style="list-style-type: none"> <li>1) Perform work of item 1 step 5~6 and item 2.</li> <li>2) Extract refrigerant gas.</li> <li>3) Remove the sound insulation material and crankcase heating cable.</li> <li>4) Remove terminal cover of compressor, and</li> </ol> |  <p>⑤</p>  |

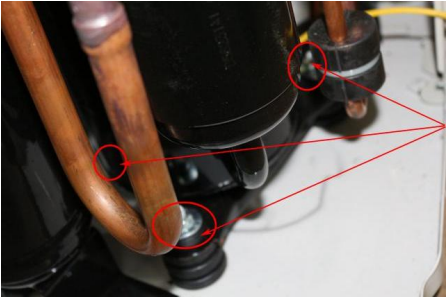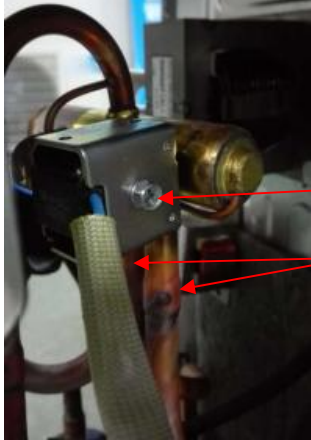

|   |                 |   |   |
|---|-----------------|---|---|
|   |                 | <p>disconnect wires of crankcase electric heater and compressor from the terminal.</p> <p>5) Remove the discharge pipe and suction pipe with a burner.</p> <p>6) Remove the hex nuts and washers fixing the compressor to bottom plate.</p> <p>7) Lift the compressor.</p>                                  |   |
| 5 | The 4-way valve | <p>How to remove the 4-way valve</p> <p>1) Perform work of item 1 step 5~6 and item 2.</p> <p>2) Extract refrigerant gas.</p> <p>3) Remove the electrical parts from item 3.</p> <p>4) Remove fixing screw of the coil, and remove the coil.</p> <p>5) Detach the welded parts of 4-way valve and pipe.</p> |  |

|   |                     |   |  |
|---|---------------------|---|--|
| 6 | The expansion valve | <p>How to remove the expansion valve</p> <ol style="list-style-type: none"><li>1) Perform work of item 1,2.</li><li>2) Remove the electrical parts from item 3.</li><li>3) Remove the coil.</li><li>4) Detach the welded parts of expansion valves and pipes.</li></ol> |  <p>Expansion valves</p> |
|---|---------------------|---|--|